

721E - EU Wheel Loader

Workshop Manual

87551874 A - EU



721E

Loader

Bur 87551874A

Use for Service Manual

721E Wheel Loader Service Manual 87551874A

Table of Contents

| Description | Section No. |
|--|--------------|
| General | Tab 1 |
| Section Index - General | |
| Standard Torque Specifications | 1001 |
| Fluids and Lubricants | 1002 |
| Metric Conversion Chart | 1003 |
| Engines | Tab 2 |
| Section Index - Engines | |
| Engine and Radiator Removal and Installation | 2000 |
| Stall Tests | 2002 |
| After Cooler | 2003 |
| For Engine Repair, See the Engine Service Manual 87600994 | |
| Fuel System | Tab 3 |
| Section Index - Fuel System | |
| For Fuel System Repair, See the Engine Service Manual 87600994 | |
| Electrical | Tab 4 |
| Section Index - Electrical | |
| Removal and Installation of Starter and Alternator | 4001 |
| Electrical Specifications and Troubleshooting | 4002 |
| Batteries | 4003 |
| Instrument Cluster | 4005 |
| Steering | Tab 5 |
| Section Index - Steering | |
| Removal and Installation of Steering Components | 5001 |
| Steering Specifications, Pressure Checks, and Troubleshooting | 5002 |
| Steering Cylinders | 5005 |
| Center Pivot | 5006 |
| Auxiliary Steering Motor and Pump | 5008 |

**721E Wheel Loader
Service Manual
87551874A**

Table of Contents

| Description | Section No. |
|---|--------------|
| Power Train | Tab 6 |
| Section Index - Power Train | |
| Removal and Installation of Power Train Components | 6001 |
| Transmission Specifications, Pressure Checks, and Troubleshooting | 6002 |
| Transmission | 6003 |
| Front Axle | 6004 |
| Rear Axle | 6004 |
| Drive Shafts, Center Bearing, and Universal Joints | 6005 |
| Wheels and Tires | 6006 |
| Transmission Control Valve | 6007 |
| | |
| Brakes | Tab 7 |
| Section Index - Brakes | |
| Removal and Installation of Brake Components | 7001 |
| Hydraulic Brake Troubleshooting | 7002 |
| Brake Pump | 7003 |
| Brake Accumulators | 7004 |
| Parking Brake | 7008 |
| | |
| Hydraulics | Tab 8 |
| Section Index - Hydraulics | |
| Removal and Installation of Hydraulic Components | 8001 |
| Hydraulic Specifications, Troubleshooting, and Pressure Checks | 8002 |
| Cleaning the Hydraulic System | 8003 |
| Hydraulic Pump | 8004 |
| Loader Control Valve | 8005 |
| Cylinders | 8006 |
| Coupler Solenoid Locking Valve | 8007 |
| Ride Control Accumulator | 8013 |
| Ride Control Valve | 8014 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$