

REPAIR MANUAL CRAWLER EXCAVATOR CX210B CX240B

CRAWLER EXCAVATOR CX210B-CX240B SERVICE MANUAL

TABLE OF CONTENTS

DIV	ISION/SECTION	SECTION N°	REFERENCE N°
1	GENERAL INFORMATION Safety, general information and standard torque data	1001	7-27691NA
•	General specifications and special torque setting		SC210B1002-0NA
2	Removal and installation of the engine		SM210B2000-0NA
	Radiator and oil-cooler Engine specifications		SM210B2001-0NA 9-44061NA
	Disassembly and assembly of the engine	*	
3	FUEL SYSTEM Fuel tank	3001	SM160B3001-0NA
	Fuel engine system		9-44061NA
4	ELECTRICAL SYSTEM		
	Electrical system, electrical and electronic troubleshooting		SC210B4001-1NA
_	Electrical equipment and electrical circuit diagrams	4020	SC210B4020-0NA
5	UNDERCARRIAGE Removal and installation of tracks	5001	SM160B5001-0NA
	Rollers		SM160B5003-0NA
	Sprocket	5004	SM160B5004-0NA
	Idler wheel and tension shock absorber	5005	SM160B5005-0EN
6	DRIVE TRAIN	0004	
	Drive motor and final drive transmission removal and installation		SM160B6001-0NA
	Drive motor and final drive transmission disassembly and assembly Swing reduction gear, removal and installation		SM160B6002-0NA SM160B6003-0NA
	Swing reduction gear, disassembly and assembly (CX210B)		SM210B6004-0NA
	Swing reduction gear, disassembly and assembly (CX240B)		SM240B6004-0NA
7	UNDERCARRIAGE HYDRAULICS		
8	UPPERSTRUCTURE HYDRAULICS		
	Depressurising and decontaminating the hydraulic system, use of the		
	vacuum pump and bleeding the components		SM160B8000-0NA
	Specifications, troubleshooting, checks and hydraulic pressure setting		SC210B8001-2NA
	Hydraulic reservoir removal and installation		SM160B8002-0NA SM210B8003-0NA
	Main hydraulic control valve, removal and installation		SM210B8004-0NA
	Attachment cylinders, removal and installation		SM160B8005-0NA
	Hydraulic swivel, removal and installation		SM160B8006-0NA
	Pilot blocs, removal and installation		SM160B8007-0NA
	Swing motor, removal and installation	8008	SM160B8008-0NA
	Main hydraulic pump, disassembly and assembly		SM210B8010-0NA
	Main hydraulic pump, disassembly and assembly (CX210B NLC)		SM210BNLC8010-0NA
	Hand control levers, disassembly and assembly		SM160B8013-0NA
	Foot control levers, disassembly and assembly		SM160B8014-0NA
	Caution valve, disassembly and assembly		SM160B8016-0NA
	Swing motor, disassembly and assembly (CX210B)		SM160B8019-0NA
	Swing motor, disassembly and assembly (CX240B)		SM240B8019-0NA
	Hydraulic component functions		SC210B8020-0NA
	Hydraulic component functions	0030	SC210B8030-0NA

DIVISION/SECTION	SECTION N°	REFERENCE N°
9 UPPERSTRUCTURE Upperstructure, turntable and counterweight	9003 9004 9005 9006 Pocket	SM160B9002-0NA SM160B9003-0NA SM160B9004-0NA SM160B9005-0NA SC210B9006-0NA 87598354A 87600992A 87598360A

^{*} Consult the Engine Repair Manual

Engine Repair Manual Form number: 9-44061NA

Not included- Can be ordered from your Local Dealer.

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Lep SM210BTOC-0NA Issued 05-07

Section 1001

SAFETY, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

TABLE OF CONTENTS

GENERAL INFORMATION	. 3
SAFETY	. 4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS	. 6

WARNING: This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.

Lep 7-27691NA Issued 02-06 It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$