

CX470B
Crawler Excavator

SERVICE MANUAL

Part number 48004716

English

March 2016

© 2016 CNH Industrial Italia S.p.A. All Rights Reserved.

CASE
CONSTRUCTION

CRAWLER EXCAVATOR CX470B SERVICE MANUAL

TABLE OF CONTENTS

DIVISION/SECTION	SECTION N°
1 GENERAL INFORMATION	
Safety, general information and standard torque data.....	1001
General specifications and special torque setting	1002
2 ENGINE	
Removal and installation of the engine.....	2000
Removal and installation of the fuel cooler, engine inter-cooler, radiator and oil cooler	2001
Removal and installation of the turbo charger	2004
Removal and installation of EGR cooler and EGR valve	2005
Removal and installation of the engine hood.....	2006
Engine specifications.....	*
Disassembly and assembly of the engine	*
3 FUEL SYSTEM	
Removal and installation of the fuel tank.....	3001
Removal and installation of the supply pump and common rail	3004
Removal and installation of the injectors	3005
Fuel engine system	*
4 ELECTRICAL SYSTEM	
Service connector kit	4000
Electrical and engine functions and service support	4001
Removal and installation of the starter motor	4004
Removal and installation of the alternator	4005
Electrical equipment & electrical circuit diagrams	4020
Engine error code (DTC)	4021
Main body error code (DTC).....	4022
Troubleshooting, 6UZ1 engine.....	4023
5 UNDERCARRIAGE	
Removal and installation of tracks	5001
Rollers	5003
Take-up roller	5005
6 DRIVE TRAIN	
Removal and installation of the drive motor and final drive transmission.....	6001
Disassembly and assembly of the drive motor and final drive transmission.....	6002
Removal and installation of the swing motor and swing reduction gear	6003
Disassembly and assembly of the swing reduction gear	6004
7 UNDERCARRIAGE HYDRAULICS	

* Consult the Engine Service Manual

8 UPPERSTRUCTURE HYDRAULICS

Specifications, troubleshooting, checks and hydraulic pressure settings	8001
Removal and installation of the hydraulic reservoir	8002
Removal and installation of the main hydraulic pump	8003
Removal and installation of the main hydraulic control valve	8004
Removal and installation of the attachment cylinders	8005
Removal and installation of the hydraulic swivel	8006
Removal and installation of the pilot blocs	8007
Disassembly and assembly of the main hydraulic pump	8010
Disassembly and assembly of the main hydraulic control valve	8011
Disassembly and assembly of the attachment cylinders	8012
Disassembly and assembly of the hand control levers	8013
Disassembly and assembly of the foot control levers	8014
Disassembly and assembly of the cushion valve	8016
Removal and installation of the safety valve	8017
Disassembly and assembly of the swing motor	8019
Hydraulic functions	8020
Hydraulic component functions	8030

9 UPPERSTRUCTURE

Removal and installation of the counterweight	9002
Removal and installation of the boom, dipper and bucket	9003
Removal and installation of the seat	9004
Removal and installation of the cab and cab equipment	9005
Air conditioner functions and troubleshooting	9006
Air conditioning unit	9007
Air conditioning components	9009
Large size hydraulic schematics	Pocket
Large size electrical schematics	Pocket

* For electrical schematic option, see section 4020

NOTE: CNH Industrial reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Section

1001

**SAFETY, GENERAL INFORMATION
AND TORQUE SPECIFICATIONS**

TABLE OF CONTENTS

GENERAL INFORMATION	3
SAFETY	4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS	6
BOLT AND NUT TIGHTENING.....	6
TORQUE TABLE	6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$