
D35, DX35, D40, DX40, D45, DX45 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	10
SECTION 21 - TRANSMISSION	11
SECTION 23 - DRIVELINE	14
SECTION 25 - FWD FRONT AXLE	15
SECTION 27 - DIFFERENTIAL, REAR AXLE	16
SECTION 29 - HYDROSTATIC TRANSMISSION	17
SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS	21
SECTION 33 - BRAKES	24
SECTION 35 - HYDRAULIC SYSTEM	24
SECTION 41 - STEERING	28
SECTION 44 - 2WD FRONT AXLE	29
SECTION 50 - CLIMATE CONTROL	30
SECTION 55 - ELECTRICAL SYSTEM	34
SECTION 90 - PLATFORM	51

The following pages are the collation of the contents pages from each section and chapter of the D35 - DX45 Repair manual. Complete Repair part # 87622993.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the D35 - DX45 Tractors, PIN number HBA015001 and above.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87056690

Chapter 1 - General Information

CONTENTS

Section	Description	Page
00 000	Introduction	2
	Safety	3
	Technical Information	4
	Safety Precautions	5
	Safety Decals - D35, D40, D45	8
	Instruction Decals - D35, D40, D45	9
	Safety Decals - DX35, DX40, DX45	12
	Instruction Decals - DX35, DX40, DX45	13
	International Symbols - DX35, DX40, DX45	17
	Specifications - D35, D40, D45	18
	General Dimensions - D35, D40, D45	25
	Specifications - DX35, DX40, DX45	31
	General Dimensions - DX35, DX40, DX45	37
	Minimum Hardware Tightening Torques	41
	Special Tools	43
	Recommended Lubricants	44
	Adjustments	45
	Tire Inflation Pressure - Adjustments	45
00 100	Pre-Season and Pre-Delivery Checklist	46

SECTION 10 - ENGINE

BOOK 1 - 87056690

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	6
	Metric Bolt Torque Specifications	15
	Special Tools	16
	Compression Test and Tools	17
	Description of Operation	18
	Troubleshooting	19
	Cylinder Head and Valve Train Components	23
	Cylinder Block Assembly	23
	Separating the Tractor at the Clutch Housing/Engine - 12 x 12 Transmission	25
	Removal	25
	Separating the Tractor at the HST Housing/Engine - HST Transmission	29
	Removal	29
	Separating the Tractor at the Engine Frame	35
	Installation	38
	Attaching the 12 x 12 Transmission to the Engine	42
	Attaching the HST to the Engine	46
	Overhaul	54
	Engine	54
	Fuel Injector and Glow Plug	54
	Removal	54
	Oil Pressure Switch	54
	Temperature Sending Switch and Alternator	54
	Removal	54
	Fan, Water Pump and External Oil Tube	55
	Removal	55
	Air Inlet Manifold	55
	Removal	55
	Rocker Arm Shaft and Support Bracket	56
	Removal	56
10 101	Cylinder Head	56
	Removal	56

SECTION 10 - ENGINE

BOOK 1 - 87056690

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Valve Tappet	57
	Removal	57
	Fuel Shutoff Solenoid	57
	Removal	57
10 106	Engine Timing Gear Cover, Timing Gears and Cam Shaft	57
	Timing Gear Cover Removal	57
10 106	Timing Gears and Cam Shaft	60
	Removal	60
10 102	Oil Sump	61
	Removal	61
	Oil Suction Pipe and Strainer	61
	Removal	61
10 110	Balancer Assembly	62
	Removal	62
10 105	Connecting Rods, Bearings and Pistons, Rings	62
	Removal	62
10 103	Flywheel	63
	Removal	63
10 103	Backplate and Oil Seal	63
	Removal	63
	Crankshaft and Main Bearings	63
	Removal	63
10 101	Cylinder Head	64
	Disassembly	64
	Inspection and Repair	64
	Valve Seats	65
	Valves	66
	Valve Guides	67
	Valve Springs	68
	Rocker Arms	68
	Push Rods	69
	Cylinder Head	69
	Assembly	69

SECTION 10 - ENGINE

BOOK 1 - 87056690

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Cylinder Block	70
10 105	Pistons	70
	Disassembly and Inspection	70
	Piston Rings	73
	Connecting Rods	73
	Connecting Rod Bearing	75
	Clearance Check	75
	Pistons, Rings and Connecting Rod	76
	Assembly	76
10 103	Crankshaft - Main Bearing and Thrust Washer	77
	Removal and Inspection	77
	Crankshaft	78
	Bearing (Bushing)	79
	Replacement	79
	Main Bearing	80
	Assembly	80
	Port Block	81
	Removal	81
	Installation	81
10 106	Timing Gear	82
	Camshaft	82
	Disassembly	82
	Inspection	82
	Assembly	83
10 103	Flywheel	83
10 102	Timing Gear Housing	84
10 102	Front Oil Seal and Steering Pump Seal	84
	Replacement	84
10 103	Crankshaft and Bearing Holder	85
	Installation	85
	Rear Oil Seal and Backplate	85
	Installation	85

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$