
DX23, DX26 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - SINGLE CLUTCH	10
SECTION 21 - TRANSMISSION	11
SECTION 25 - FWD FRONT AXLE	13
SECTION 27 - DIFFERENTIAL, REAR AXLE	14
SECTION 29 - HYDROSTATIC TRANSMISSION	15
SECTION 31 - POWER TAKE-OFF (PTO)	19
SECTION 33 - BRAKES	20
SECTION 35 - HYDRAULIC SYSTEM	21
SECTION 41 - STEERING	24
SECTION 44 - WHEELS AND TIRES	25
SECTION 55 - ELECTRICAL SYSTEM	26
SECTION 90 - PLATFORM	32

The following pages are the collation of the contents pages from each section and chapter of the DX23, DX26 Repair manual. Complete Repair part # 87367148.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the DX23, DX26 Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87367149

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	2
	Precautionary Statements	3
	Safety	4
	The Tractor	4
	Servicing the Tractor	4
	Operating the Tractor	5
	Driving the Tractor	5
	Operating the PTO	6
	Diesel Fuel	6
	Safety Frame (ROPS)	6
	Safety Decals	7
	Instruction Decals	9
	Product Identification Plate	13
	Universal Symbols	14
	Specifications - DX23, DX26	15
	General Dimensions - DX23, DX26	20
	Minimum Hardware Tightening Torques	23
	Lubricants	25
	Adjustments	26

SECTION 10 - ENGINE

BOOK 1 - 87367149

Chapter 1 - Engine Systems

CONTENTS

Section	Description	Page
10 000	Specifications	6
	Cylinder Head	6
	Cylinder Block	7
	Piston	7
	Piston Ring	8
	Connecting Rod	8
	Crankshaft	9
	Camshaft	10
	Valves	11
	Push Rods	12
	Rocker Arms	12
	Lubrication System	12
	Cooling System	13
	Torque Specifications	14
	Metric Bolt Torque Specifications	14
	Special Tools	15
	Description and Operation - General Information	16
	Identification Chart	16
	Cylinder Head and Valve Train Components	17
	Cylinder Block Assembly	17
	Troubleshooting	19
	Overhaul - Engine	25
	Engine Preparation	25
	Disassembly	25
	Fuel Injector and Glow Plug	27
	Removal	27
	Oil Pressure Switch	27
	Removal	27
	Temperature Sending Switch and Alternator	28
	Removal	28
	Fan, Water Pump, and External Oil Tube	28
	Removal	28

SECTION 10 - ENGINE

BOOK 1 - 87367149

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Valve Cover	28
	Removal	28
	Rocker Shaft and Push Rod	29
	Removal	29
	Cylinder Head	29
	Removal	29
	Valve Tappet	29
	Removal	29
	Fuel Shut-off Solenoid	30
	Removal	30
	Engine Timing Gear Cover	30
	Removal	30
	Timing Gears and Camshaft	32
	Removal	32
	Oil Sump	32
	Removal	32
	Oil Suction Pipe and Strainer	33
	Removal	33
	Connecting Rods, Bearing and Pistons	33
	Removal	33
	Flywheel	34
	Removal	34
	Backplate and Oil Seal	34
	Removal	34
	Crankshaft and Main Bearing	34
	Removal	34
18 110	Cylinder Head	35
	Disassembly	35
	Inspection	35
	Valve Seats	36
	Inspection	36

SECTION 10 - ENGINE

BOOK 1 - 87367149

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Valves	37
	Inspection	37
	Valve Guides	39
	Inspection	39
	Valve Springs	39
	Inspection	39
	Rocker Arms	40
	Inspection	40
	Push Rods	40
	Inspection	40
	Cylinder Head	41
	Assembly	41
	Cylinder Block	41
	Inspection	41
10 105	Pistons, Piston Rings, and Connecting Rods	42
	Disassembly	42
	Piston	42
	Inspection	42
	Piston Rings	44
	Inspection	44
	Connecting Rods	45
	Inspection	45
	Bearing Oil Clearance Check	47
10 105	Pistons, Piston Rings, and Connecting Rod	47
	Assembly	47
10 103	Crankshaft Main Bearings	48
	Removal	48
	Inspection	48
	Crankshaft	49
	Inspection	49
	Crankshaft Journal Wear Limit and Bearing Usage	49

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$