
DX29, DX33 REPAIR MANUAL COMPLETE CONTENTS PIN #HBA010001 AND ABOVE

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	10
SECTION 21 - GEAR TRANSMISSION	11
SECTION 25 - FWD FRONT AXLE	14
SECTION 27 - DIFFERENTIAL, REAR AXLE	15
SECTION 29 - HYDROSTATIC TRANSMISSION	16
SECTION 31 - POWER TAKE-OFF SYSTEMS	20
SECTION 33 - BRAKES	22
SECTION 35 - HYDRAULIC SYSTEM	23
SECTION 41 - STEERING	26
SECTION 44 - WHEELS AND TIRES	28
SECTION 55 - ELECTRICAL SYSTEM	29
SECTION 90 - PLATFORM	37

The following pages are the collation of the contents pages from each section and chapter of the DX29 and DX33 Repair manual. Complete Repair part # 87059223.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the DX29 and DX33 Tractors PIN #HBA010001 and Above.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87059224

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Precautionary Statements	2
	Personal Safety	2
	Machine Safety	2
	Safety	3
	Precautionary Statements	3
	Servicing the Tractor	3
	Operating the Tractor	4
	Driving the Tractor	4
	Operating the PTO	5
	Diesel Fuel	5
	Safety Frame (ROPS)	5
	Safety Decals	6
	Instruction Decals	7
	Ecology and the Environment	11
	International Symbols	12
	Specifications	13
	General Dimensions	19
	Minimum Hardware Tightening Torques	22
00 400	Lubrication and Maintenance	24
	Lubrication	24
	Liquid Ballast (Optional)	26
	Tire Pressure	26
	Rear Tire Liquid	26

SECTION 10 - ENGINE

BOOK 1 - 87059224

Chapter 1 - Engine Systems

CONTENTS

Section	Description	Page
	Specifications	6
	Cooling System (All Models)	14
	Engine Bolt Torque Specifications	14
	Engine Fuel System Bolt Torque Specifications	14
	Metric Bolt Torque Specifications	15
	Special Tools	16
	Compression Test and Tools	16
	Description of Operation - General Information	17
	Cylinder Head and Valve Train Components	18
	Cylinder Block Assembly	18
	Troubleshooting	20
	Overhaul - Engine	24
	Engine	24
	Preparation	24
	Fuel Injector and Glow Plug	25
	Removal	25
	Oil Pressure Switch	26
	Removal	26
	Temperature Sending Switch and Alternator	26
	Removal	26
	Fan, Water Pump and External Oil Tube	26
	Removal	26
	Head Cover	27
	Removal	27
	Rocker Arm Shaft and Support Bracket	27
	Removal	27
10 101	Cylinder Head	28
	Removal	28
	Valve Tappet	28
	Removal	28
	Fuel Shutoff Solenoid	28
	Removal	28

SECTION 10 - ENGINE

BOOK 1 - 87059224

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Timing Gear Cover	29
	Removal	29
10 106	Timing Gears and Camshaft	31
	Removal	31
10 102	Oil Sump	31
	Removal	31
	Oil Suction Pipe and Strainer	32
	Removal	32
	Connecting Rods, Bearings, Pistons and Rings	32
	Removal	32
10 103	Flywheel	33
	Removal	33
	Backplate and Oil Seal	33
	Removal	33
	Crankshaft and Main Bearings	33
	Removal	33
10 101	Cylinder Head	34
	Disassembly	34
	Inspection and Repair	34
	Valve Seats	35
	Inspection and Repair	35
	Valves	36
	Inspection and Replacement	36
	Valve Guides	37
	Inspection and Replacement	37
	Valve Springs	38
	Inspection and Replacement	38
	Rocker Arms	38
	Inspection and Replacement	38
	Push Rods	39
	Inspection and Replacement	39
	Cylinder Head	40
	Assembly	40

SECTION 10 - ENGINE

BOOK 1 - 87059224

Chapter 1 - Engine Systems (Continued)

CONTENTS

Section	Description	Page
	Cylinder Block	40
	Inspection	40
10 105	Pistons	41
	Disassembly and Inspection	41
	Piston Rings	43
	Disassembly and Inspection	43
	Connecting Rods	43
	Disassembly and Inspection	43
	Connecting Rod Bearing Oil Clearance Check	45
	Pistons, Rings and Connecting Rod	46
	Assembly	46
10 103	Main Bearing and Thrust Washer	47
	Removal and Inspection	47
	Crankshaft	47
	Inspection	47
	Crankshaft Bearing (Bushing)	48
	Inspection	48
	Replacement	49
	Crankshaft Main Bearing and Thrust Washer	49
	Assembly	49
	Port Block	50
	Removal	50
	Installation	50
10 106	Timing Gear	50
	Inspection	50
	Camshaft	51
	Disassembly	51
	Inspection	51
	Assembly	51
10 103	Flywheel	52
	Inspection and Repair	52
10 102	Timing Gear Housing	52

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$