

---

# FARMALL 40, FARMALL 45, FARMALL 50 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE .....	3
SECTION 18 - CLUTCH .....	10
SECTION 21 - TRANSMISSION .....	12
SECTION 25 - FWD FRONT AXLE .....	14
SECTION 27 - DIFFERENTIAL, REAR AXLE .....	16
SECTION 29 - HYDROSTATIC TRANSMISSION .....	17
SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS .....	20
SECTION 33 - BRAKES .....	23
SECTION 35 - HYDRAULIC SYSTEM .....	24
SECTION 41 - STEERING .....	27
SECTION 50 - CLIMATE CONTROL .....	28
SECTION 55 - ELECTRICAL .....	32
SECTION 90 - PLATFORM .....	49

The following pages are the collation of the contents pages from each section and chapter of the Farmall 40, Farmall 45, Farmall 50 Repair manual. Complete Repair part # 87473193.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the Farmall 40, Farmall 45, Farmall 50 Tractors.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87473194

## Chapter 1 - General Information

### CONTENTS

Section	Description	Page
	Introduction .....	3
	Precautionary Statements .....	4
	Personal Safety .....	4
	Machine Safety .....	4
	Information .....	4
	Technical Information .....	5
	Hardware .....	5
	General .....	5
	Plating .....	5
	Nut Tightening .....	5
	Locknuts .....	5
	Jam Nuts .....	5
	Thread Lubrication .....	5
	Safety .....	6
	Precautionary Statements .....	6
	The Tractor .....	6
	Servicing the Tractor .....	6
	Operating the Tractor .....	7
	Driving the Tractor .....	7
	Operating the PTO .....	8
	Diesel Fuel .....	8
	Safety Frame (ROPS) .....	8
	Decals - Farmall 40, 45, 50 with 12x12 Transmission .....	9
	Safety Decals .....	9
	Instruction Decals - Farmall 40, 45, 50 with 12x12 Transmission .....	11
	Decals - Farmall 40, 45 with HST .....	14
	Safety Decals .....	14
	Instruction Decals - Farmall 40, 45 with HST Transmission .....	16
	General Information .....	19
	Universal Symbols .....	20
	Specifications - Farmall 40, 45, 50 with 12x12 Gear Transmission .....	21
	General Dimensions .....	28

---

## SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87473194

### Chapter 1 - General Information (Continued)

#### CONTENTS

Section	Description	Page
	Specifications - Farmall 40, 45 with Hydrostatic Transmission .....	34
	General Dimensions .....	40
	Minimum Hardware Tightening Torque .....	48
	Special Tools .....	48
	Recommended Lubricants .....	49
	Adjustments .....	50

## SECTION 10 - ENGINE

BOOK 1 - 87473194

### Chapter 1 - Engine

#### CONTENTS

Section	Description	Page
	Specifications .....	6
	Metric Bolt Torque Specifications .....	15
	Special Tools .....	16
	Compression Test and Tools .....	17
	Description of Operation .....	18
	Troubleshooting .....	19
	Cylinder Head and Valve Train Components .....	23
	Separating the Tractor at the Clutch Housing/Engine - 12x12 Transmission .....	24
	Removal .....	24
	Separating the Tractor at the Engine/Frame .....	28
	Installation .....	30
	Attaching the 12x12 Transmission to the Engine .....	34
	Overhaul .....	39
	Engine .....	39

---

# SECTION 10 - ENGINE

BOOK 1 - 87473194

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Fuel Injector and Glow Plug .....	39
	Removal .....	39
	Oil Pressure Switch .....	39
	Temperature Sending Switch and Alternator .....	39
	Removal .....	39
	Fan, Water Pump, and External Oil Tube .....	40
	Removal .....	40
	Air Inlet Manifold .....	40
	Removal .....	40
	Rocker Arm Shaft and Support Bracket .....	41
	Removal .....	41
	Cylinder Head .....	41
	Removal .....	41
	Valve Tappet .....	41
	Removal .....	41
	Fuel Shutoff Solenoid .....	42
	Removal .....	42
	Engine Timing Gear Cover, Timing Gears, and Cam Shaft .....	42
	Timing Gear Cover Removal .....	42
	Timing Gears and Camshaft .....	44
	Removal .....	44
	Oil Sump .....	45
	Removal .....	45
	Oil Suction Pipe and Strainer .....	45
	Removal .....	45
	Balancer Assembly .....	46
	Removal .....	46
	Connecting Rods, Bearings, and Pistons, Rings .....	46
	Removal .....	46
	Flywheel .....	47
	Removal .....	47

---

# SECTION 10 - ENGINE

BOOK 1 - 87473194

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Backplate and Oil Seal .....	47
	Removal .....	47
	Crankshaft and Main Bearings .....	47
	Removal .....	47
	Cylinder Head .....	48
	Disassembly .....	48
	Inspection and Repair .....	48
	Valve Seats .....	49
	Valves .....	50
	Valve Guides .....	51
	Valve Springs .....	52
	Rocker Arms .....	52
	Push Rods .....	53
	Cylinder Head .....	53
	Assembly .....	53
	Cylinder Block .....	54
	Pistons .....	54
	Disassembly and Inspection .....	54
	Piston Rings .....	57
	Connecting Rods .....	57
	Pin to Bushing Clearance .....	58
	Connecting Rod Bearing .....	59
	Clearance Check .....	59
	Pistons, Rings, and Connecting Rod .....	60
	Assembly .....	60
	Crankshaft - Main Bearing and Thrust Washer .....	61
	Removal and Inspection .....	61
	Crankshaft .....	62
	Bearing (Bushing) .....	63
	Replacement .....	63
	Main Bearing .....	64
	Assembly .....	64

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$