


Please cut where indicated and insert the label into the plastic pocket on the spine of the binder.

**Farmall 65C,
Farmall 75C,
Farmall 85C,
Farmall 95C
Tractors**

Repair


Vol. 1
87758598



**Farmall 65C,
Farmall 75C,
Farmall 85C,
Farmall 95C
Tractors**

Repair


Vol. 2
87758598



**Farmall 65C,
Farmall 75C,
Farmall 85C,
Farmall 95C
Tractors**

Repair


Vol. 1
87758598



**Farmall 65C,
Farmall 75C,
Farmall 85C,
Farmall 95C
Tractors**

Repair

Vol. 2
87758598



FARMALL 65C, FARMALL 75C, FARMALL 85C, FARMALL 95C REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	7
SECTION 21 - GEAR TRANSMISSION	8
SECTION 23 - DRIVE LINES	11
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	12
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	14
SECTION 31 - MECHANIAL POWER TAKE-OFF	15
SECTION 33 - BRAKING SYSTEM	16
SECTION 35 - HYDRAULIC SYSTEMS	17
SECTION 41 - STEERING	23
SECTION 44 - AXLES AND WHEELS	26
SECTION 50 - CAB AIR CONDITIONING SYSTEM	27
SECTION 55 - ELECTRICAL SYSTEM	29
SECTION 90 - PLATFORM, CAB, BODYWORK	50

The following pages are the collation of the contents pages from each section and chapter of the Farmall 65C, Farmall 75C, Farmall 85C, Farmall 95C Repair manual. Complete Repair part # 87758598.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the Farmall 65C, Farmall 75C, Farmall 85C, Farmall 95C Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87758599

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Consumables	25

SECTION 10 - ENGINE

BOOK 1 - 87758599

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	4
	Torque	12
	Special Tools	14
	Sectional Views	15
	Description and Operation	19
	Exhaust Gas Recirculation System (EGR)	19
	Troubleshooting	20
	Overhaul	24
10 001 10	Engine	24
	Removal	24
	Installation	32
10 001 54	Engine Disassembly	34
	Removing the Crankshaft Front Seal	36

SECTION 10 - ENGINE

BOOK 1 - 87758599

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Removing the Crankshaft Rear Seal	39
	Engine Assembly on the Bench	45
	Fitting the Bushings	45
	Fitting the Tappets	46
	Fitting the Camshaft	46
	Fitting the Oil Nozzles	47
	Fitting the Crankshaft	47
	Fitting the Connecting Rod-Piston Assembly	50
	Fitting the Piston Connecting Rod Assemblies in the Cylinder Liners	51
	Big End Cap Assembly	52
	Fitting the Thermostat Valve	53
	Fitting the Cylinder Head	53
	Fitting the Injectors	55
	Fitting the Rocker Arm Assembly	55
	Fitting the Timing Gear	56
	Fitting the Injection Pump	58
	Fitting the Additional Counterweights	58
	Fitting the Hydraulic Pump Drive Gear	59
	Fitting the Timing Gear Casing	60
	Fitting the Crankshaft Rear Seal	60
	Fitting the Flywheel	60
	Fitting the Oil Pump	61
	Fitting the Oil Sump	62
	Fitting the Crankshaft Front Seal	62
	Fitting the Crankshaft Front Pulley	62
	Fitting the Cooling System Union	62
	Fitting the Coolant Pump	63
	Fitting the Fan-Alternator Pulley	63
	Fitting the Auxiliary Member Drive Belt	65
	Fitting the Exhaust Manifold - Turbine	65
	Fitting the Injector Feed Pipes	65
	Fitting the Fuel Pump - Feed Pipes	66

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$