
FARMALL 75N, FARMALL 95N SERVICE MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	6
SECTION 21 - TRANSMISSIONS	8
SECTION 23 - DRIVE LINES	11
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	12
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	13
SECTION 31 - MECHANICAL POWER TAKE-OFF	15
SECTION 33 - BRAKES	16
SECTION 35 - HYDRAULIC SYSTEMS	17
SECTION 41 - STEERING	21
SECTION 44 - AXLES AND WHEELS	23
SECTION 50 - CAB AIR CONDITIONING SYSTEM	24
SECTION 55 - ELECTRICAL SYSTEM	27
SECTION 90 - CAB	53

The following pages are the collation of the contents pages from each section and chapter of the Farmall 75N, Farmall 95N Service manual. Complete Service part # 84241668.

The sections used through out all Case IH product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

The sections listed above are the sections utilized for the Farmall 75N, Farmall 95N Tractors.

SECTION 00 - GENERAL

BOOK 1 - 84241669

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	2
	Important Notice	2
	Battery	2
	Shimming	2
	Rotating Shaft Seals	2
	O-Ring Seals	2
	Sealing Compounds	2
	Bearings	2
	Spring Pins	3
	Spare Parts	3
	Notes for Equipment	3
	Important Notes	3
	Moving the Tractor with the Battery Removed	3
	Safety Regulations	4
	Safety Symbols	4
	To Prevent Accidents	4
	General Guidelines	4
	Start Up	6
	Engine	6
	Electrical Systems	6
	Hydraulic Systems	6
	Wheels and Tires	6
	Removal and Installation	6
	Tractor Refuelling	7

SECTION 10 - ENGINE

BOOK 1 - 84241669

Chapter 1 - Engine (Model 95N)

CONTENTS

Section	Description	Page
	Specifications	4
	Torque	12
	Special Tools	14
	Sectional Views	15
	Description and Operation	19
	Exhaust Gas Recirculation System (EGR)	19
	Troubleshooting	20
	Overhaul	24
	Engine	24
	Removal	24
	Installation	28
	Disassembly	30
	Removing the Crankshaft Front Seal	32
	Removing the Crankshaft Rear Seal	35
	Assembly	41
	Fitting the Connecting Rod-Piston Assembly	46
	Fitting the Piston Connecting Rod Assemblies In the Cylinder Liners	47
	Big End Cap Assembly	48
	Fitting the Thermostat Valve	49
	Fitting the Cylinder Head	49
	Fitting the Injectors	51
	Fitting the Rocker Arm Assembly	51
	Fitting the Timing Gear	52
	Fitting the Injection Pump	54
	Fitting the Additional Counterweights	54
	Fitting the Hydraulic Pump Drive Gear	55
	Fitting the Timing Gear Casing	56
	Fitting the Crankshaft Rear Seal	56
	Fitting the Flywheel	56
	Fitting the Oil Pump	57
	Fitting the Oil Sump	58
	Fitting the Crankshaft Front Seal	58
	Fitting the Crankshaft Front Pulley	58

SECTION 10 - ENGINE

BOOK 1 - 84241669

Chapter 1 - Engine (Model 95N) (Continued)

CONTENTS

Section	Description	Page
	Fitting the Cooling System Union	58
	Fitting the Coolant Pump	59
	Fitting the Fan-alternator Pulley	59
	Fitting the Auxiliary Member Drive Belt	61
	Fitting the Exhaust Manifold - Turbine	61
	Fitting the Injector Feed Pipes	61
	Fitting the Fuel Pump - Feed Pipes	61
	Fitting the Pipes Between the Fuel Supply and Injection Pumps, Pre-heating System and Tappet Cover	62
	Fitting the Starter Motor	62
	Checks, Measurements and Repairs	63
	Crankcase, Cylinder Liners	63
	Crankshaft	66
	Connecting Rods	68
	Bushings	68
	Checking Connecting Rods	69
	Checking Twisting	69
	Checking Bending	69
	Pistons	70
	Normal Dimensions (mm) Piston Data	70
	Measuring the Piston Diameter	71
	Piston Pins	71
	Conditions for Correct Pin-Piston Coupling	72
	Piston Rings	72
	Valves and Camshaft	74
	Dimensions (mm) of Valves and Valve Guides	74
	Decarbonizing, Checking and Grinding Valves	74
	Valve Springs	76
	Tappets	76
	Camshaft	77
	Cylinder Head	78
	Checking the Cylinder Head Mating Surface	78
	Cylinder Head Thickness	78
	Cylinder Head Hydraulic Seal Check	78

SECTION 10 - ENGINE

BOOK 1 - 84241669

Chapter 1 - Engine (Model 95N) (Continued)

CONTENTS

Section	Description	Page
	Low Oil Pressure Indicator	79
	Functional Checks	79
	Oil Filter	79
	Replacement	79
	Cooling System	80
	Radiator	80
	Flushing and Checks	80
	Coolant Thermometer	80
	Check	80
	Thermostat Valve	80
	Replacement	80
	Crankshaft - Front Seal	81
	Disassembly	81
	Assembly	82
	Crankshaft - Rear Seal	83
	Disassembly	83
	Assembly	84
	Adjusting Valve/Rocker Arm Clearance	86
	Injectors	88
	Removal	88
	Installation	90
	Bosch Injection Pump	91
	Removal	91
	Installation	93
	Timing	94
	Fuel Circuit Air Bleeding	96
	Coolant Pump	97
	Removal	97
	Installation	98
	4-Cylinder Coolant Pump and Generator Drive Belt	99
	Tension Adjustment	99

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$