

**Magnum 180
Magnum 200
Magnum 220
Powershift Transmission (PST)
Tractor**

PIN ZERH02500 and above

SERVICE MANUAL

Part number 47674199

1st edition English

March 2014

CASE II
AGRICULTURE

Link Product / Engine

Product	Market Product	Engine
null 696110052 PST Tier 4b [ZERH02500 -]	North America	F4DFE613K*B002
null 696110062 PST Tier 4b [ZERH02500 -]	North America	F4HFE613J*B005
null 696110072 PST Tier 4b [ZERH02500 -]	North America	F4HFE613H*B003

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.218] Fuel injection system.....	10.3
[10.202] Air cleaners and lines	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
[10.310] Aftercooler.....	10.8
[10.304] Engine lubrication system.....	10.9
Power coupling	19
[19.100] Drive shaft.....	19.1
Transmission	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.155] Powershift transmission internal components.....	21.3
[21.160] Creeper	21.4
[21.166] Overdrive.....	21.5
[21.200] Dropbox	21.6
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.7
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1

[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control.....	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
Power Take-Off (PTO).....	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.114] Two-speed rear Power Take-Off (PTO)	31.2
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.220] Trailer brake hydraulic control.....	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.105] Charge pump.....	35.4
[35.106] Variable displacement pump	35.5
[35.114] Three-point hitch control valve	35.6
[35.116] Three-point hitch cylinder	35.7
[35.204] Remote control valves	35.8
[35.300] Reservoir, cooler, and filters.....	35.9
Hitches, drawbars, and implement couplings.....	37
[37.110] Rear three-point hitch	37.1
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Steering.....	41
[41.101] Steering control	41.1

[41.200] Hydraulic control components.....	41.2
[41.206] Pump.....	41.3
Wheels.....	44
[44.520] Rear wheels.....	44.1
Cab climate control.....	50
[50.100] Heating.....	50.1
[50.200] Air conditioning.....	50.2
[50.300] Cab pressurizing system.....	50.3
Electrical systems.....	55
[55.010] Fuel injection system.....	55.1
[55.011] Fuel tank system.....	55.2
[55.014] Engine intake and exhaust system.....	55.3
[55.024] Transmission control system.....	55.4
[55.031] Parking brake electrical system.....	55.5
[55.045] Front axle control system.....	55.6
[55.046] Rear axle control system.....	55.7
[55.047] Steering control system.....	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.9
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.10
[55.100] Harnesses and connectors.....	55.11
[55.130] Rear three-point hitch electronic control system.....	55.12
[55.201] Engine starting system.....	55.13
[55.301] Alternator.....	55.14
[55.302] Battery.....	55.15
[55.408] Warning indicators, alarms, and instruments.....	55.16
[55.512] Cab controls.....	55.17
[55.518] Wiper and washer system.....	55.18
[55.640] Electronic modules.....	55.19

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$