

SERVICE MANUAL

**Puma 140**  
**Puma 155**  
**Puma 170**  
**Puma 185**  
Tractor

Part number 47402693



**Puma 140**  
**Puma 155**  
**Puma 170**  
**Puma 185**  
Tractor

SERVICE MANUAL

Part number 47402693

English  
Abril 2014  
Copyright © 2014 INDUSTRIAL LATIN AMERICA LTDA  
All Rights Reserved.





## **SERVICE MANUAL**

**PUMA 140 With cab, 15x12 , PUMA 140 With cab, 18x6 , PUMA 140 Without cab, 15x12 , PUMA 155 With cab, 15x12 , PUMA 155 With cab, 18x6 , PUMA 155 Without cab, 15x12 , PUMA 170 With cab, 15x12 , PUMA 170 With cab, 18x6 , PUMA 170 Without cab, 15x12 , PUMA 185 With cab, 15x12 , PUMA 185 With cab, 18x6 , PUMA 185 Without cab, 15x12**

## Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
PUMA 140 Without cab, 15x12	Latin America	F4CE0654E*B601
PUMA 140 With cab, 15x12	Latin America	F4CE0654E*B601
PUMA 140 With cab, 18x6	Latin America	F4DFA613A*D001
PUMA 155 Without cab, 15x12	Latin America	F4CE0654F*B601
PUMA 155 With cab, 15x12	Latin America	F4CE0654F*B601
PUMA 155 With cab, 18x6	Latin America	F4DFA613B*D001
PUMA 170 Without cab, 15x12	Latin America	F4CE0654G*B601
PUMA 170 With cab, 15x12	Latin America	F4CE0654G*B601
PUMA 170 With cab, 18x6	Latin America	F4DFA613C*D001
PUMA 185 Without cab, 15x12	Latin America	F4CE0654H*B601
PUMA 185 With cab, 15x12	Latin America	F4CE0654H*B601
PUMA 185 With cab, 18x6	Latin America	F4DFA613D*D001

# Contents

---

## INTRODUCTION

Engine.....	10
[10.216] Fuel tanks .....	10.1
[10.218] Fuel injection system.....	10.2
[10.400] Engine cooling system .....	10.3
Clutch .....	18
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components .....	18.2
Transmission.....	21
[21.114] Mechanical transmission .....	21.1
[21.111] Semi-Powershift transmission .....	21.2
[21.133] Semi-Powershift transmission external controls .....	21.3
[21.152] Semi-Powershift transmission internal components .....	21.4
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.204] Remote control valves .....	35.2
[35.114] Three-point hitch control valve .....	35.3
[35.116] Three-point hitch cylinder .....	35.4

[35.124] Three-point hitch hydraulic adjustment .....	35.5
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
<b>Steering.....</b>	<b>41</b>
[41.206] Pump .....	41.1
[41.216] Cylinders .....	41.2
<b>Wheels.....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating.....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3
<b>Electrical systems.....</b>	<b>55</b>
[55.100] Harnesses and connectors.....	55.1
[55.640] Electronic modules.....	55.2
[55.130] Rear three-point hitch electronic control system.....	55.3
[55.DTC] FAULT CODES.....	55.4
<b>Platform, cab, bodywork, and decals.....</b>	<b>90</b>
[90.150] Cab.....	90.1
[90.100] Engine hood and panels .....	90.2
[90.102] Engine shields, hood latches, and trims .....	90.3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$