

DUCATI Hypermotard 2014 Repair Manual

- HYM.01 - General
 - Symbols - Abbreviations - References
 - [Product specifications](#)
 - Hazardous Products - Warnings
 - [General maintenance instructions](#)
 - [General safety rules](#)
- HYM.02 - Information about the model
 - Model identification data
 - [Identification data](#)
- HYM.03 - Technical data
 - Technical specifications
 - [Lights/instrument panel](#)
 - [Injection system](#)
 - [Fuel system](#)
 - [Injection-ignition system](#)
 - [Charging system/generator](#)
 - [Hydraulic brakes](#)
 - [Rear suspension](#)
 - [Rear wheel](#)
 - [Front suspension](#)
 - [Front wheel](#)
 - [Cooling system](#)
 - [Gearbox](#)
 - [Cylinder/Piston](#)
 - [Crankshaft](#)
 - [Timing system/valves](#)
 - [Transmission](#)
 - [Colours](#)
 - [General](#)
 - Dimensions
 - [Dimensions](#)
 - Fuel, lubricants and other fluids
 - [Fuel, lubricants and other fluids](#)
 - Tightening torque values
 - [Engine tightening torque values](#)
 - [Frame tightening torque values](#)
- HYM.04 - Maintenance operations
 - Vehicle pre-delivery
 - [Vehicle pre-delivery](#)
 - Scheduled maintenance chart
 - [Operations to be carried out by the customer](#)
 - [Operations to be carried out by the dealer](#)
 - Maintenance operations
 - [Adjusting the rear shock absorber \(BASIC\)](#)
 - [Adjusting the position of the gear change and rear brake pedals](#)
 - [Adjusting the clutch lever and front brake lever](#)
 - [Checking the rear brake pad wear and changing the brake pads](#)
 - [Checking the front brake pad wear and changing the brake pads](#)
 - [Adjusting the chain tension](#)
 - [Adjusting the steering head bearing play](#)
 - [Adjusting the clutch control cable](#)
 - [Changing the fluid in the rear brake system](#)
 - [Changing the fluid in the front brake system](#)

- Changing the coolant
 - Checking the coolant level
 - Changing and cleaning the air filters
 - Spark plugs replacement
 - Changing the timing belts
 - Checking valve clearance
 - Changing the engine oil and filter cartridge
 - Check engine oil level
- HYM.05 - Fairings
- Rear-view mirrors
 - Refitting the rear-view mirrors
 - Removing the rear-view mirrors
- Headlight fairing
 - Refitting the headlight fairing
 - Removing the headlight fairing
- Fairings
 - Refitting the fairings
 - Removing the fairings
- Seat - side panels
 - Refitting the rear side panels
 - Removing the rear side panels
 - Refitting the seat
 - Removing the seat
- Front and rear mudguard
 - Refitting the rear mudguard
 - Removing the rear mudguard
 - Refitting the front mudguard
 - Removing the front mudguard
- HYM.06 - Electric system and engine management
- Wiring diagram
 - Table Z
 - Table Y
 - Table X
 - Table W
 - Table V
 - Table U
 - Table T
 - Table S
 - Table R
 - Table Q
 - Table P
 - Table O
 - Table N
 - Table M
 - Table L
 - Table K
 - Table J
 - Table I
 - Table H
 - Table G
 - Table F
 - Table E
 - Table D
 - Table C
 - Table B
 - Table A
 - Routing of wiring on frame
- Battery charging system

- Rectifier-regulator
 - Generator
 - Battery
 - Topping up the electrolyte
 - Recharging the battery
 - Checking the battery charging system
- Electric starting
 - Solenoid starter
 - Starter motor
 - Electric starting system
- Lights
 - Headlight aim
 - Changing bulbs
- HYM.07 - Chassis
- Front wheel
 - Refitting the front wheel
 - Overhauling the front wheel
 - Removing the front wheel
- Rear wheel
 - Refitting the rear wheel
 - Overhauling the rear wheel
 - Removing the rear wheel
- Front brake control
 - Refitting the front brake system
 - Refitting the brake discs
 - Overhauling the front brake components
 - Removing the brake discs
 - Removing the front brake system
 - Maintenance operations
 - Refitting the front brake master cylinder
 - Removing the front brake master cylinder
- Rear brake
 - Refitting the rear brake calliper
 - Removing the rear brake disc
 - Removing the rear brake calliper
 - Refitting the rear brake control
 - Disassembling the rear brake control
 - Removing the rear brake control
- ABS information
 - Disabling the ABS
 - ABS operating information
 - Operating principle
- ABS components
 - Wiring/hose routing
 - Refitting the ABS control unit
 - Removing the ABS control unit
 - Changing the rear phonic wheel sensor
 - Changing the front phonic wheel sensor
- ABS component maintenance
 - Bleeding the ABS hydraulic system
 - Adjusting the phonic wheel sensor AIR-GAP
- Handlebar unit: hand guard - throttle control
 - Refitting the throttle twistgrip
 - Removing the throttle twistgrip
 - Refitting the handlebar
 - Removing the handlebar
 - Refitting the hand guards
 - Removing the hand guards
- Gearchange mechanism

- Refitting the gearchange mechanism
 - Disassembling the gearchange control
 - Removing the gearchange mechanism
- Fork - steering head: front fork
 - Overhauling the front forks
 - Refitting the front forks
 - Removal of the front forks
- Fork - steering head: steering
 - Refitting the steering tube components
 - Removing the steering head components
 - Steering angle adjustment
 - Adjusting the steering head bearing clearance
- Rear shock absorber unit
 - Refitting the rear suspension
 - Overhauling the rear shock absorber
 - Removing the rear shock absorber
 - Rear suspension system
- Swinging arm
 - Refitting the rear swinging arm
 - Overhauling the rear swinging arm
 - Inspecting the swinging arm shaft
 - Removing the swinging arm
 - Refitting the rear wheel eccentric hub and rear wheel shaft
 - Removing the rear wheel eccentric hub and the rear wheel shaft
- Final drive
 - Lubricating the chain
 - Washing the chain
 - Refitting the rear sprocket
 - Replacing the rear sprocket
 - Refitting the front sprocket
 - Removing the front sprocket
 - Inspecting the final drive
- Footpeg brackets
 - Refitting the footpegs
 - Removing the footpegs
- Stands
 - Refitting the side stand
 - Removing the side stand
- Frame inspection
 - Reassembling structural components and frame
 - Checking the frame
 - Removing the rear frame
- Tail light - number plate holder
 - Refitting the tail light
 - Removing the tail light
 - Refitting the number plate holder
 - Removing the number plate holder
- Electrical component tray
 - Refitting the electrical component tray
 - Removing the electrical component tray
- HYM.08 - Fuel system / Exhaust system
- Fuel tank
 - Refitting the fuel tank
 - Refitting the fuel tank flange
 - Removing the tank flange
 - Removing the fuel tank
- Airbox - Throttle Body
 - Refitting the throttle body
 - Removing the throttle body

- Refitting the airbox
 - Removing the airbox
- Air intake
 - Refitting the secondary air system
 - Removing the secondary air system
 - Refitting the air filters
 - Removing the air filters
- Exhaust system
 - Refitting the silencer
 - Refitting the exhaust system
 - Removing the exhaust system
 - Removing the silencer
- Canister filter
 - Refitting the Canister filter
 - Removing the Canister filter
 - Canister filter system
- HYM.09 - Engine
- Removing-refitting the engine assembly
 - Refitting the engine
 - Removing the engine
- Lubrication system: oil pump
 - Refitting the oil pump
 - Reassembling the oil pump
 - Disassembling the oil pump
 - Removing the oil pump
- Cooling system: water tank
 - Refitting the water tank
 - Removing the water tank
- Cooling system: water radiator
 - Refitting the cooling system hoses and unions
 - Removing the cooling system hoses and unions
 - Refitting the water radiator
 - Replacing the cooling fan
 - Removing the water radiator
- Cooling system: water pump
 - Refitting the water pump
 - Removing the water pump
- Cylinder head assembly: checks and adjustments
 - Checking the engine timing
 - Checking valve lift
 - Checking and adjusting the valve clearance
- Cylinder head assembly: timing system
 - Refitting the timing layshaft pulley
 - Removing the timing layshaft pulleys
 - Reassembling the timing pulleys
 - Disassembling the camshaft pulleys
 - Refitting the idler and tensioner pulley mounting pins
 - Removing the tensioner pins
 - Refitting the cylinder heads pulleys/idler pulleys
 - Removing the cylinder head pulley/idler pulley
 - Refitting the timing belts
 - Removing the tensioner pulley/timing belt
 - Refitting the timing outer covers
 - Removing the timing belt covers
- Cylinder head assembly: camshafts
 - Refitting the intake manifold and water union
 - Removing the intake manifold and water union
 - Refitting the camshafts
 - Checking the camshafts and supports

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$