

# DUCATI Hyperstrada Normal Seat 2014 Repair Manual

- HYM.01 - General
- Symbols - Abbreviations - References
  - [Product specifications](#)
- Hazardous Products - Warnings
  - [General maintenance instructions](#)
  - [General safety rules](#)
  
- HYM.02 - Information about the model
- Model identification data
  - [Identification data](#)
  
- HYM.03 - Technical data
- Technical specifications
  - [Lights/instrument panel](#)
  - [Injection system](#)
  - [Fuel system](#)
  - [Injection-ignition system](#)
  - [Charging system/generator](#)
  - [Hydraulic brakes](#)
  - [Rear suspension](#)
  - [Rear wheel](#)
  - [Front suspension](#)
  - [Front wheel](#)
  - [Cooling system](#)
  - [Gearbox](#)
  - [Cylinder/Piston](#)
  - [Crankshaft](#)
  - [Timing system/valves](#)
  - [Transmission](#)
  - [Colours](#)
  - [General](#)
- Dimensions
  - [Dimensions](#)
- Fuel, lubricants and other fluids
  - [Fuel, lubricants and other fluids](#)
- Tightening torque values
  - [Engine tightening torque values](#)
  - [Frame tightening torque values](#)
  
- HYM.04 - Maintenance operations
- Vehicle pre-delivery
  - [Vehicle pre-delivery](#)
- Scheduled maintenance chart
  - [Operations to be carried out by the customer](#)
  - [Operations to be carried out by the dealer](#)
- Maintenance operations
  - [Adjusting the rear shock absorber \(BASIC\)](#)
  - [Adjusting the position of the gear change and rear brake pedals](#)
  - [Adjusting the clutch lever and front brake lever](#)
  - [Checking the rear brake pad wear and changing the brake pads](#)
  - [Checking the front brake pad wear and changing the brake pads](#)
  - [Adjusting the chain tension](#)
  - [Adjusting the steering head bearing play](#)
  - [Adjusting the clutch control cable](#)
  - [Changing the fluid in the rear brake system](#)
  - [Changing the fluid in the front brake system](#)

- Changing the coolant
  - Checking the coolant level
  - Changing and cleaning the air filters
  - Spark plugs replacement
  - Changing the timing belts
  - Checking valve clearance
  - Changing the engine oil and filter cartridge
  - Check engine oil level
- Accessories
  - Side panniers kit
- HYM.05 - Fairings
- Rear-view mirrors
  - Refitting the rear-view mirrors
  - Removing the rear-view mirrors
- Headlight fairing
  - Refitting the headlight fairing
  - Removing the headlight fairing
- Fairings
  - Refitting the fairings
  - Removing the fairings
- Seat - side panels
  - Refitting the rear side panels
  - Removing the rear side panels
  - Refitting the seat
  - Removing the seat
- Front and rear mudguard
  - Refitting the rear mudguard
  - Removing the rear mudguard
  - Refitting the front mudguard
  - Removing the front mudguard
- HYM.06 - Electric system and engine management
- Wiring diagram
  - Table Z
  - Table Y
  - Table X
  - Table W
  - Table V
  - Table U
  - Table T
  - Table S
  - Table R
  - Table Q
  - Table P
  - Table O
  - Table N
  - Table M
  - Table L
  - Table K
  - Table J
  - Table I
  - Table H
  - Table G
  - Table F
  - Table E
  - Table D
  - Table C
  - Table B
  - Table A

## Routing of wiring on frame

- Battery charging system
  - Rectifier-regulator
  - Generator
  - Battery
  - Topping up the electrolyte
  - Recharging the battery
  - Checking the battery charging system
- Electric starting
  - Solenoid starter
  - Starter motor
  - Electric starting system
- Lights
  - Headlight aim
  - Changing bulbs
- HYM.07 - Chassis
- Front wheel
  - Refitting the front wheel
  - Overhauling the front wheel
  - Removing the front wheel
- Rear wheel
  - Refitting the rear wheel
  - Overhauling the rear wheel
  - Removing the rear wheel
- Front brake control
  - Refitting the front brake system
  - Refitting the brake discs
  - Overhauling the front brake components
  - Removing the brake discs
  - Removing the front brake system
  - Maintenance operations
  - Refitting the front brake master cylinder
  - Removing the front brake master cylinder
- Rear brake
  - Refitting the rear brake calliper
  - Removing the rear brake disc
  - Removing the rear brake calliper
  - Refitting the rear brake control
  - Disassembling the rear brake control
  - Removing the rear brake control
- ABS information
  - Disabling the ABS
  - ABS operating information
  - Operating principle
- ABS components
  - Wiring/hose routing
  - Refitting the ABS control unit
  - Removing the ABS control unit
  - Changing the rear phonic wheel sensor
  - Changing the front phonic wheel sensor
- ABS component maintenance
  - Bleeding the ABS hydraulic system
  - Adjusting the phonic wheel sensor AIR-GAP
- Handlebar unit: hand guard - throttle control
  - Refitting the throttle twistgrip
  - Removing the throttle twistgrip
  - Refitting the handlebar
  - Removing the handlebar
  - Refitting the hand guards

- Removing the hand guards
- Gearchange mechanism
  - Refitting the gearchange mechanism
  - Disassembling the gearchange control
  - Removing the gearchange mechanism
- Fork - steering head: front fork
  - Overhauling the front forks
  - Refitting the front forks
  - Removal of the front forks
- Fork - steering head: steering
  - Refitting the steering tube components
  - Removing the steering head components
  - Steering angle adjustment
  - Adjusting the steering head bearing clearance
- Rear shock absorber unit
  - Refitting the rear suspension
  - Overhauling the rear shock absorber
  - Removing the rear shock absorber
  - Rear suspension system
- Swinging arm
  - Refitting the rear swinging arm
  - Overhauling the rear swinging arm
  - Inspecting the swinging arm shaft
  - Removing the swinging arm
  - Refitting the rear wheel eccentric hub and rear wheel shaft
  - Removing the rear wheel eccentric hub and the rear wheel shaft
- Final drive
  - Lubricating the chain
  - Washing the chain
  - Refitting the rear sprocket
  - Replacing the rear sprocket
  - Refitting the front sprocket
  - Removing the front sprocket
  - Inspecting the final drive
- Footpeg brackets
  - Refitting the footpegs
  - Removing the footpegs
- Stands
  - Refitting the central stand
  - Removing the central stand
  - Refitting the side stand
  - Removing the side stand
- Frame inspection
  - Reassembling structural components and frame
  - Checking the frame
  - Removing the rear frame
- Tail light - number plate holder
  - Refitting the tail light
  - Removing the tail light
  - Refitting the number plate holder
  - Removing the number plate holder
- Electrical component tray
  - Refitting the electrical component tray
  - Removing the electrical component tray
- HYM.08 - Fuel system / Exhaust system
- Fuel tank
  - Refitting the fuel tank
  - Refitting the fuel tank flange
  - Removing the tank flange

## Removing the fuel tank

- Airbox - Throttle Body
  - Refitting the throttle body
  - Removing the throttle body
  - Refitting the airbox
  - Removing the airbox
- Air intake
  - Refitting the secondary air system
  - Removing the secondary air system
  - Refitting the air filters
  - Removing the air filters
- Exhaust system
  - Refitting the silencer
  - Refitting the exhaust system
  - Removing the exhaust system
  - Removing the silencer
- Canister filter
  - Refitting the Canister filter
  - Removing the Canister filter
  - Canister filter system
  
- HYM.09 - Engine
- Removing-refitting the engine assembly
  - Refitting the engine
  - Removing the engine
- Lubrication system: oil pump
  - Refitting the oil pump
  - Reassembling the oil pump
  - Disassembling the oil pump
  - Removing the oil pump
- Cooling system: water tank
  - Refitting the water tank
  - Removing the water tank
- Cooling system: water radiator
  - Refitting the cooling system hoses and unions
  - Removing the cooling system hoses and unions
  - Refitting the water radiator
  - Replacing the cooling fan
  - Removing the water radiator
- Cooling system: water pump
  - Refitting the water pump
  - Removing the water pump
- Cylinder head assembly: checks and adjustments
  - Checking the engine timing
  - Checking valve lift
  - Checking and adjusting the valve clearance
- Cylinder head assembly: timing system
  - Refitting the timing layshaft pulley
  - Removing the timing layshaft pulleys
  - Reassembling the timing pulleys
  - Disassembling the camshaft pulleys
  - Refitting the idler and tensioner pulley mounting pins
  - Removing the tensioner pins
  - Refitting the cylinder heads pulleys/idler pulleys
  - Removing the cylinder head pulley/idler pulley
  - Refitting the timing belts
  - Removing the tensioner pulley/timing belt
  - Refitting the timing outer covers
  - Removing the timing belt covers
- Cylinder head assembly: camshafts

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$