

2015 DUCATI MULTISTRADA 1200 ABS

Workshop Manual

- MTS(E4).01 - General
- Symbols - Abbreviations - References
 - [Product specifications](#)
- Dangerous products - warnings
 - [General maintenance instructions](#)
 - [General safety rules](#)
- MTS(E4).02 - Model-specific information
- Model identification
 - [Identification data](#)
- MTS(E4).03 - Technical data
- Technical specifications
 - [Lights/instrument panel](#)
 - [Injection system](#)
 - [Fuel system](#)
 - [Injection-ignition system](#)
 - [Charging system/generator](#)
 - [Hydraulic brakes](#)
 - [Rear suspension](#)
 - [Rear wheel](#)
 - [Front suspension](#)
 - [Front wheel](#)
 - [Cooling system](#)
 - [Gearbox](#)
 - [Cylinder/piston](#)
 - [Crankshaft](#)
 - [Timing system/valves](#)
 - [Transmission](#)
 - [Colours](#)
 - [General](#)
- Overall dimensions
 - [Dimensions](#)
- Fuel, lubricants and other fluids
 - [Fuel, lubricants and other fluids](#)
- Tightening torque settings
 - [Frame tightening torque values](#)
 - [Engine tightening torque values](#)
- Service tools
 - [Diagnosis special tools](#)
 - [Frame special tools](#)
 - [Engine special tools](#)
- MTS(E4).04 - Maintenance operations
- Vehicle pre-delivery
 - [Vehicle pre-delivery](#)
- Scheduled maintenance chart
 - [Operations to be carried out by the customer](#)
 - [Operations to be carried out by the dealer](#)
- Maintenance operations
 - [Filling the clutch hydraulic circuit](#)

Draining the clutch hydraulic circuit

- Changing the clutch fluid
- Adjusting the rear shock absorber
- Front fork adjustment
- Adjusting the position of the gearchange pedal and rear brake pedal
- Adjusting the front brake control lever
- Checking rear brake pad wear and replacing brake pads
- Checking front brake pad wear and replacing brake pads
- Adjusting the chain tension
- Adjusting the steering head bearing play
- Changing the fluid in the rear brake system
- Changing the fluid in the front brake system
- Changing the coolant
- Check coolant level
- Changing and cleaning the air filters
- Changing the spark plugs
- Change timing belts
- Checking valve clearance
- Changing the engine oil and filter cartridge
- Check engine oil level

• MTS(E4).05 - Fairings

• Rear-view mirrors

- Refitting the headlight fairing
- Removing the headlight fairing
- Refitting the panel
- Removing the panel

• Fairings

- Refitting the tank fairings
- Removing the tank fairings
- Refitting the front half-fairing
- Removing the front half-fairing

• Seat - tail guard and side body panels

- Refitting the seat
- Refitting side body panel and tail guard
- Removing the side body panels and the tail guard
- Removing the seat

• Front mudguard - Belly pan

- Refitting the belly pan
- Removing the belly pan
- Refitting the front mudguard
- Removing the front mudguard

• Rear mudguard - Splash guard

- Refitting the splash guard
- Removing the splash guard
- Refitting the rear mudguard
- Removing the rear mudguard

• MTS(E4).06 - Electric system and engine management

• Wiring diagram

- Branch 10
- Branch 9
- Branch 8
- Branch 7
- Branch 6
- Branch 5
- Branch 4
- Branch 3

- [Branch 2](#)
- [Branch 1](#)
- [Routing of wiring on frame](#)
- [Key to wiring diagram](#)
- [Technological Dictionary](#)
- [Acronyms and abbreviations used in the manual](#)
- Charge system - Battery
 - [Rectifier-regulator](#)
 - [Alternator / Generator](#)
 - [Refitting the battery](#)
 - [Removing the battery](#)
 - [Topping up the electrolyte](#)
 - [Recharging the battery](#)
 - [Checking the battery charging system](#)
- Electric starter
 - [Solenoid starter](#)
 - [Starter motor](#)
 - [Electric starting system](#)
- Lighting
 - [Replacing the tail light bulbs](#)
 - [Tail light](#)
 - [Aligning the headlight](#)
 - [Replacing the headlight bulbs](#)
 - [Headlight](#)
- Handlebar controls: controls
 - [Right-hand switch](#)
 - [Left-hand switch](#)
- Safety and protection sensors: controls
 - [Horn](#)
 - [Checking the fuses](#)
 - [Side stand switch](#)
 - [Air temperature sensor](#)
 - [Engine temperature sensor](#)
 - [Clutch switch](#)
 - [Oil pressure sensor](#)
 - [Gear/neutral sensor](#)
 - [Rear stop switch](#)
 - [Front stop switch](#)
- Electrical components: checks
 - [Exhaust valve motor](#)
 - [Solenoid valves](#)
 - [Coils](#)
- Electronic components: checks
 - [Bluetooth](#)
 - [Inertial Measurement Unit \(IMU\)](#)
 - [Knock Sensor](#)
 - [Accelerator Position System \(APS\)](#)
 - [Lambda sensors](#)
 - [Local Interconnect Network \(LIN\)](#)
 - [VIN line](#)
 - [Anti-lock Braking System \(ABS\)](#)
 - [CAN line](#)
 - [Ducati Wheelie Control \(DWC\)](#)
 - [Ducati Traction Control \(DTC\)](#)
 - [Rpm sensor \(pick-up\)](#)
 - [Throttle Position System \(TPS\)](#)
 - [Electronic Throttle Valve \(ETV\)](#)
 - [Black Box System \(BBS\)](#)

- [Map sensor](#)
- [Engine control unit \(ECU\)](#)
- Instrumentation: Dashboard
 - [Restoring motorcycle operation via the PIN CODE](#)
 - [Key duplication](#)
 - [Replacing the battery in the active key](#)
 - [Keys](#)
 - [Immobilizer system](#)
 - [Light control](#)
 - [Bluetooth device setting](#)
 - [Setting the units of measurement](#)
 - [Backlighting setting](#)
 - [Clock setting](#)
 - [Date setting](#)
 - [Changing the PIN CODE](#)
 - [Pin Code](#)
 - [Customising the Riding Mode: Reset to default settings \(ALL DEFAULT\)](#)
 - [Customising the Riding Mode: Reset to default settings \(DEFAULT\)](#)
 - [Customising the Riding Mode: ABS setting](#)
 - [Customising the Riding Mode: DWC level setting](#)
 - [Customising the Riding Mode: DTC level setting](#)
 - [Customising the Riding Mode: Engine setting](#)
 - [Customising the Riding Mode: Parameter storage](#)
 - [Customising the Riding Mode](#)
 - [Setting MENU](#)
 - [Fog lights](#)
 - [Side stand warning](#)
 - [Error warnings](#)
 - [Warnings/Alarms](#)
 - [OIL SERVICE or SERVICE DATE or DESMO SERVICE indication](#)
 - [OIL SERVICE or SERVICE DATE or DESMO SERVICE countdown indication](#)
 - [OIL SERVICE zero warning](#)
 - [Service indication \(SERVICE\)](#)
 - [Cruise Control](#)
 - [Infotainment](#)
 - [Auxiliary functions](#)
 - [Ambient air temperature](#)
 - [Average speed](#)
 - [Instantaneous fuel consumption](#)
 - [Average fuel consumption](#)
 - [Clock](#)
 - [Trip time \(TRIP TIME\)](#)
 - [Residual range \(RANGE\)](#)
 - [Trip meter 2 \(TRIP 2\)](#)
 - [Trip meter 1 \(TRIP 1\)](#)
 - [Odometer \(TOT\)](#)
 - [Menu Functions](#)
 - [Engine Coolant temperature](#)
 - [Fuel level](#)
 - [Gear](#)
 - [DWC](#)
 - [ABS](#)
 - [DTC](#)
 - [Riding Mode](#)
 - [Motorcycle speed](#)
 - [Engine rpm indication \(RPM\)](#)
 - [Main functions](#)
 - [Parameter setting/displaying](#)

- [Function buttons](#)
- [Instrument panel](#)
- MTS(E4).07 - Chassis
- Front wheel
 - [Removing the front wheel](#)
 - [Overhauling the front wheel](#)
 - [Refitting the front wheel](#)
- Rear wheel
 - [Refitting the rear wheel](#)
 - [Overhauling the rear wheel](#)
 - [Removing the rear wheel](#)
- Front brake control
 - [Refitting the front brake system](#)
 - [Refitting the brake discs](#)
 - [Overhauling the front brake components](#)
 - [Removing the brake discs](#)
 - [Removing the front brake system](#)
 - [Maintenance operations](#)
 - [Refitting the front brake master cylinder](#)
 - [Removing the front brake master cylinder](#)
- Rear brake
 - [Refitting the rear brake calliper](#)
 - [Refitting the rear brake disc](#)
 - [Removing the rear brake disc](#)
 - [Removing the rear brake calliper](#)
 - [Refitting the rear brake control](#)
 - [Disassembling the rear brake control](#)
 - [Removing the rear brake control](#)
- ABS system information
 - [ABS system deactivation](#)
 - [ABS system operation information](#)
 - [Operating principle](#)
- ABS system components
 - [Routing wiring harnesses/hoses](#)
 - [Refitting the ABS control unit](#)
 - [Removing the ABS control unit](#)
 - [Changing the rear phonic wheel sensor](#)
 - [Changing the front phonic wheel sensor](#)
- ABS component maintenance
 - [Bleeding of the ABS hydraulic system](#)
 - [Adjusting the AIR-GAP of phonic wheel sensor](#)
- Handlebar unit: hand guard - rear.view mirrors - throttle control
 - [Refitting the handlebar](#)
 - [Removing the handlebar](#)
 - [Reassembling the hand guards](#)
 - [Removing the hand guards](#)
 - [Refitting the rear-view mirrors](#)
 - [Removing the rear-view mirrors](#)
- Handlebar assembly: Throttle twistgrip
 - [Refitting the throttle control](#)
 - [Removing the throttle control](#)
- Handlebar assembly: Hydraulic clutch control
 - [Refitting the clutch slave cylinder](#)
 - [Removing the clutch slave cylinder](#)
 - [Refitting the clutch master cylinder assembly](#)
 - [Removing the clutch master cylinder assembly](#)
- Handlebar assembly: Hands free

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$