

DUCATI Multistrada 1200 S Granturismo 2014 Repair Manual

- MTS.01 - General
- Symbols - Abbreviations - References
 - [Product specifications](#)
- Hazardous Products - Warnings
 - [General maintenance instructions](#)
 - [General safety rules](#)
- MTS.02 - Information about the model
- Model identification data
 - [Identification data](#)
- MTS.03 - Technical data
- Technical specifications
 - [Lights/instrument panel](#)
 - [Injection system](#)
 - [Fuel system](#)
 - [Injection-ignition system](#)
 - [Charging system/generator](#)
 - [Hydraulic brakes](#)
 - [Rear suspension](#)
 - [Rear wheel](#)
 - [Front suspension](#)
 - [Front wheel](#)
 - [Cooling system](#)
 - [Gearbox](#)
 - [Cylinder/Piston](#)
 - [Crankshaft](#)
 - [Timing system/valves](#)
 - [Transmission](#)
 - [Colours](#)
 - [General](#)
- Dimensions
 - [Dimensions](#)
- Fuel, lubricants and other fluids
 - [Fuel, lubricants and other fluids](#)
- Tightening torque values
 - [Engine tightening torque values](#)
 - [Frame tightening torque values](#)
- MTS.04 - Maintenance operations

- Vehicle pre-delivery
 - Assembly - packaging
 - Side pannier lock assembly
 - Vehicle pre-delivery
- Scheduled maintenance chart
 - Operations to be carried out by the customer
 - Operations to be carried out by the dealer
- Maintenance operations
 - Adjusting vehicle setup
 - Adjusting the rear shock absorber
 - Adjusting the front fork
 - Adjusting the position of the gear change and rear brake pedals
 - Adjusting the clutch lever and front brake lever
 - Checking the rear brake pad wear and changing the brake pads
 - Checking the front brake pad wear and changing the brake pads
 - Adjusting the chain tension
 - Adjusting the steering head bearing play
 - Adjusting the clutch control cable
 - Filling the clutch circuit
 - Draining the clutch hydraulic circuit
 - Changing the clutch fluid
 - Changing the fluid in the rear brake system
 - Changing the fluid in the front brake system
 - Changing the coolant
 - Checking the coolant level
 - Changing and cleaning the air filters
 - Spark plugs replacement
 - Changing the timing belts
 - Checking valve clearance
 - Changing the engine oil and filter cartridge
 - Check engine oil level
- Accessories
 - Supplied accessory kit
 - Assembling the filler plug lock
 - Removing the filler plug lock
 - Pannier bottom and low lid kit
 - Cover kit
 - Elastic elements kit
 - Side panniers kit
 - Side panniers kit
- MTS.05 - Fairings
- Panel - headlight fairing
 - Refitting the headlight fairing
 - Removing the headlight fairing
 - Refitting the panel
 - Removing the panel
- Fairings

- Refitting the fuel tank fairings
- Refitting the front half-fairing
- Removing the front half-fairing
- Removing the front half-fairing

- Seat - tail guard and fairings
 - Side Body Panel and Tail Guard Reassembly
 - Side Body Panel and Tail Guard Removal
 - Refitting the seat
 - Removing the seat

- Front mudguard - undersump
 - Refitting the undersump
 - Removing the undersump
 - Front semi-mudguard kit
 - Refitting the front mudguard
 - Removing the front mudguard

- Rear mudguard - splashguard
 - Refitting the splash guard
 - Removing the splash guard
 - Long rear mudguard kit
 - Refitting the rear mudguard
 - Removing the rear mudguard

- MTS.06 - Electric system and engine management
- Wiring diagram
 - Table T
 - Table S
 - Table R
 - Table P
 - Table O
 - Table N
 - Table M
 - Table L
 - Table K
 - Table J
 - Table I
 - Table H
 - Table G
 - Table F
 - Table E
 - Table D
 - Table C
 - Table B
 - Table A
 - Routing of wiring on frame
 - Key to fuse box
 - Wiring diagram colour codes
 - Key to wiring diagram

- Battery charging system

- Rectifier-regulator
- Generator
- Battery
- Topping up the electrolyte
- Recharging the battery
- Checking the battery charging system
- Electric starting
 - Solenoid starter
 - Starter motor
 - Electric starting system
- Lights
 - Headlight aim
- MTS.07 - Chassis
- Front wheel
 - Refitting the front wheel
 - Overhauling the front wheel
 - Removing the front wheel
- Rear wheel
 - Refitting the rear wheel
 - Overhauling the rear wheel
 - Removing the rear wheel
- Front brake control
 - Refitting the front brake system
 - Refitting the brake discs
 - Overhauling the front brake components
 - Removing the brake discs
 - Removing the front brake system
 - Maintenance operations
 - Refitting the front brake master cylinder
 - Removing the front brake master cylinder
- Rear brake
 - Refitting the rear brake calliper
 - Removing the rear brake disc
 - Removing the rear brake calliper
 - Refitting the rear brake control
 - Disassembling the rear brake control
 - Removing the rear brake control
- ABS information
 - Disabling the ABS
 - ABS operating information
 - Operating principle
- ABS components

- Wiring/hose routing
- Refitting the ABS control unit
- Removing the ABS control unit
- Changing the rear phonic wheel sensor
- Changing the front phonic wheel sensor
- ABS component maintenance
 - Bleeding the ABS hydraulic system
 - Adjusting the phonic wheel sensor AIR-GAP
- Handlebar unit: hand guard - rear.view mirrors - throttle control
 - Refitting the handlebar
 - Removing the handlebar
 - Refitting the hand guards
 - Removing the hand guards
 - Refitting the rear-view mirrors
 - Removing the rear-view mirrors
- Adjusting the throttle cable
 - Refitting the throttle twistgrip
 - Removing the throttle twistgrip
- Handlebar unit: Hydraulic clutch control
 - Refitting the clutch transmission unit
 - Removal of the clutch transmission unit
 - Refitting the clutch master cylinder assembly
 - Removal of the clutch master cylinder assembly
- Handlebar unit: Hands free
 - Refitting the Hands Free
 - Removing the Hands Free
- Gearchange mechanism
 - Refitting the gearchange mechanism
 - Disassembling the gearchange control
 - Removing the gearchange mechanism
- Fork - Steering head: front fork
 - Refitting the front forks
 - Overhauling the front forks
 - Removal of the front forks
- Fork - steering head: steering
 - Refitting the steering tube components
 - Removing the steering head components
 - Steering angle adjustment
 - Adjusting the steering head bearing clearance
- Rear shock absorber unit
 - Refitting the rear suspension

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$