

DUCATI SCRAMBLER 800 Workshop Manual 2015

- S.01 - General
- Symbols - Abbreviations - References
 - [Product specifications](#)
- Dangerous products - warnings
 - [General maintenance instructions](#)
 - [General safety rules](#)
- S.02 - Model-specific information
- Model identification
 - [Identification data](#)
- S.03 - Technical data
- Technical specifications
 - [Lights/instrument panel](#)
 - [Injection system](#)
 - [Fuel system](#)
 - [Injection-ignition system](#)
 - [Charging system/generator](#)
 - [Hydraulic brakes](#)
 - [Rear suspension](#)
 - [Rear wheel](#)
 - [Front suspension](#)
 - [Front wheel](#)
 - [Cooling system](#)
 - [Gearbox](#)
 - [Cylinder/piston](#)
 - [Crankshaft](#)
 - [Timing system/valves](#)
 - [Transmission](#)
 - [Colours](#)
 - [General](#)
- Overall dimensions
 - [Overall dimensions](#)
- Fuel, lubricants and other fluids
 - [Fuel, lubricants and other fluids](#)
- Tightening torque settings
 - [Engine tightening torque values](#)
 - [Frame tightening torque values](#)
- Service tools
 - [Diagnosis special tools](#)
 - [Frame special tools](#)
 - [Engine special tools](#)
- S.04 - Maintenance operations
- Vehicle pre-delivery
 - [Vehicle pre-delivery](#)
- Scheduled maintenance chart
 - [Operations to be carried out by the customer](#)
 - [Operations to be carried out by the dealer](#)
- Maintenance operations
 - [Adjusting the rear shock absorber](#)
 - [Adjusting the position of the gearchange pedal and rear brake pedal](#)
 - [Adjusting the front brake control lever](#)
 - [Adjusting the throttle cable](#)
 - [Checking rear brake pad wear and replacing brake pads](#)
 - [Checking front brake pad wear and replacing brake pads](#)
 - [Adjusting the chain tension](#)
 - [Adjusting the steering head bearing play](#)

- Clutch control cable adjustment
- Changing the fluid in the rear brake system
- Changing the fluid in the front brake system
- Changing and cleaning the air filters
- Replacing the spark plugs
- Changing the timing belts
- Checking valve clearance
- Changing the engine oil and filter cartridge
- Check engine oil level

- S.05 - Fairings
- Rear-view mirrors
 - Refitting the rear-view mirrors
 - Removing the rear-view mirrors
- Seat - tail guard - side body panels
 - Refitting the tail guard (CLASSIC)
 - Removing the tail guard (CLASSIC)
 - Refitting the seat release mechanism
 - Removing the seat release mechanism
 - Refitting the tail guard
 - Removing the tail guard
 - Refitting the rear side body panels
 - Removing the rear side body panels
 - Refitting the seat
 - Removing the seat
- Mudguard
 - Refitting the front mudguard (URBAN ENDURO)
 - Removing the front mudguard (URBAN ENDURO)
 - Refitting the front mudguard
 - Removing the front mudguard
- Belly pan
 - Refitting the belly pan (URBAN ENDURO)
 - Removing the belly pan (URBAN ENDURO)

- S.06 - Electric system and engine management
- Wiring diagram
 - Table Z
 - Table Y
 - Table X
 - Table W
 - Table V
 - Table U
 - Table T
 - Table S
 - Table R
 - Table Q
 - Table P
 - Table O
 - Table N
 - Table M
 - Table L
 - Table K
 - Table J
 - Table H
 - Table G
 - Table F
 - Table E
 - Table D
 - Table C
 - Table B
 - Table A
 - Routing of wiring on frame
 - Fuse box key
 - Wiring diagram cable colour codes
 - Key to wiring diagram

- Charge system - Battery
 - Rectifier-regulator
 - Alternator
 - Battery
 - Topping up the electrolyte
 - Recharging the battery
 - Checking the battery charging system
- Electric starter
 - Solenoid starter
 - Starter motor
 - Electric starting system
- Lighting
 - Aligning the headlight
 - Changing bulbs
- Instrument panel
 - Entering PIN CODE function for overriding purposes
 - Key duplication
 - Operation
 - Keys
 - Immobilizer system
 - Light control
 - Setting the units of measurement
 - Changing the PIN CODE
 - Pin Code
 - Clock setting function (CLOCK)
 - Instrument panel back-lighting setting (B.LIGHT)
 - Battery voltage
 - ABS control unit enabling/disabling
 - Setting menu
 - DESMO SERVICE indication
 - DESMO SERVICE countdown indication
 - OIL SERVICE zero warning
 - Service indication (SERVICE)
 - High engine temperature
 - Clock
 - Displayed errors description
 - Error warnings
 - Errors
 - Ambient air temperature (AIR)
 - Partial fuel reserve counter (TRIP FUEL)
 - Trip meter 2 (TRIP 2)
 - Trip meter 1 (TRIP 1)
 - Odometer (TOT)
 - Menu 1 functions
 - Engine rpm indication (RPM)
 - Motorcycle speed
 - Main functions
 - Parameter setting/displaying
 - Function buttons
 - Technological Dictionary
 - Acronyms and abbreviations used in the Manual
 - Instrument panel
- System components
 - Diagnostic socket
 - Main relay and injection
 - Timing/rpm sensor
 - Throttle position potentiometer
 - Coil
 - Ignition spark plug
 - Temperature sensor
 - Air pressure sensor
 - Lambda sensor
 - Stepper motor
 - Electric injector
 - Electronic control unit

- S.07 - Chassis
- Front wheel
 - Overhauling the front wheel (URBAN ENDURO)
 - Overhauling the front wheel (CLASSIC)
 - Refitting the front wheel
 - Overhauling the front wheel
 - Removing the front wheel
- Rear wheel
 - Overhauling the rear wheel (URBAN ENDURO)
 - Overhauling the rear wheel (CLASSIC)
 - Refitting the rear wheel
 - Overhauling the rear wheel
 - Removing the rear wheel
- Front brake control
 - Refitting the front brake system
 - Refitting the brake disc
 - Overhauling the front brake components
 - Removing the brake disc
 - Removing the front brake system
 - Maintenance operations
 - Refitting the front brake master cylinder
 - Removing the front brake master cylinder
- Rear brake
 - Refitting the rear brake disc
 - Removing the rear brake disc
 - Refitting the rear brake calliper
 - Removing the rear brake calliper
 - Refitting the rear brake control
 - Disassembling the rear brake control
 - Removing the rear brake control
- ABS system information
 - ABS system deactivation
 - ABS system operation information
 - Operating principle
- ABS system components
 - Routing wiring harnesses/hoses
 - Refitting the ABS control unit
 - Removing the ABS control unit
 - Changing the rear phonic wheel sensor
 - Changing the front phonic wheel sensor
- ABS component maintenance
 - Bleeding of the ABS hydraulic system
 - Adjusting the AIR-GAP of phonic wheel sensor
- Handlebar assembly: throttle control
 - Refitting the throttle control
 - Removing the throttle control
 - Adjusting the throttle cable
 - Refitting the handlebar
 - Removing the handlebar
- Handlebar assembly: clutch control
 - Refitting the clutch assembly
 - Removing the clutch assembly
- Handlebar assembly: ignition switch
 - Refitting the ignition switch
 - Removing the ignition switch
- Gear selector control
 - Refitting the gear change control
 - Disassembling the gear change control
 - Removing the gear change control
- Fork - steering head: front fork
 - Refitting the front fork
 - Overhauling the front fork
 - Removing the front fork
- Fork - steering head: steering assembly

- Refitting the steering tube components
- Removing the steering tube components
- Steering angle adjustment
- Adjusting the steering head bearing clearance
- Rear shock absorber assembly
 - Refitting the rear suspension
 - Overhauling the rear shock absorber
 - Removing the rear shock absorber
 - Rear suspension system
- Swinging arm
 - Refitting the rear swinging arm
 - Overhauling the rear swinging arm
 - Inspecting the swinging arm shaft
 - Removing the swinging arm
- Final drive
 - Lubricating the chain
 - Washing the chain
 - Refitting the rear sprocket
 - Removing the rear sprocket
 - Refitting the front sprocket
 - Removing the front sprocket
 - Inspection of the final drive
- Footrest support
 - Refitting the rear footpegs
 - Removing the rear footpegs
 - Refitting the front footpeg support
 - Removing the front footpeg support
 - Refitting the front footpegs
 - Removing the front footpegs
- Stands
 - Refitting the side stand
 - Removing the side stand
- Inspecting the frame
 - Checking the frame
 - Refitting the structural parts and frame
 - Removing structural components and frame
- Tail light - number plate holder
 - Rimontaggio fanale posteriore
 - Smontaggio fanale posteriore
 - Refitting the number plate holder
 - Removing the number plate holder
- Electrical components compartment
 - Refitting the electric components compartment
 - Removing the electric components compartment
- S.08 - Fuel/Exhaust system
- Fuel tank
 - Refitting the fuel tank
 - Refitting the fuel tank flange
 - Removing the fuel tank flange
 - Refitting the tank filler plug
 - Removing the tank filler plug
 - Removing the fuel tank
- Airbox – throttle body
 - Refitting the throttle body
 - Removing the throttle body
 - Refitting the airbox
 - Removing the airbox
- Air intake
 - Refitting the secondary air system
 - Removing the secondary air system
 - Refitting the air filters
 - Removing the air filters
- Exhaust system
 - Refitting the silencer (FULL THROTTLE)

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$