
G6030, G6035 SERVICE MANUAL COMPLETE CONTENTS

| | |
|--|-----------|
| SECTION 00 - GENERAL INFORMATION | 2 |
| SECTION 10 - ENGINE AND FUEL SYSTEMS | 3 |
| SECTION 25 - FOUR WHEEL DRIVE REAR AXLE | 11 |
| SECTION 27 - DIFFERENTIAL, AXLE | 12 |
| SECTION 29 - HYDROSTATIC DRIVE SYSTEM | 14 |
| SECTION 31 - POWER TAKE-OFF (PTO) | 15 |
| SECTION 33 - BRAKES | 16 |
| SECTION 35 - HYDRAULIC SYSTEM | 17 |
| SECTION 41 - STEERING | 20 |
| SECTION 44 - WHEELS AND TIRES | 21 |
| SECTION 55 - ELECTRICAL | 22 |
| SECTION 90 - PLATFORM | 30 |

The following pages are the collation of the contents pages from each section and chapter of the G6030, G6035 Service manual. Complete Service part # 84203602.

The sections used through out all New Holland product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

The sections listed above are the sections utilized for the G6030, G6035 Service manual.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 84203603

Chapter 1 - General Information

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Introduction | 2 |
| | Precautionary Statements | 3 |
| | Personal Safety | 3 |
| | Machine Safety | 3 |
| | Information | 3 |
| | Technical Information - Hardware | 4 |
| | General | 4 |
| | Plating | 4 |
| | Nut Tightening | 4 |
| | Locknuts | 4 |
| | Jam Nuts | 4 |
| | Thread Lubrication | 4 |
| | Safety | 5 |
| | Commercial Mower | 5 |
| | Servicing the Commercial Mower | 5 |
| | Driving the Commercial Mower | 6 |
| | Operating the Power Take Off (PTO) | 6 |
| | Operating the Mower Deck | 7 |
| | Diesel Fuel | 8 |
| | Avoid High-pressure Fluids | 8 |
| | Safety | 9 |
| | Safety Decals | 12 |
| | International Symbols | 18 |
| | Specifications | 19 |
| | Minimum Hardware Tightening Torques | 26 |
| | Special Tools | 28 |
| | Lubricants | 29 |
| | Touch-up Paint | 30 |
| | Pre-season and Predelivery Service | 31 |
| | Check and Adjust as Required | 31 |
| | Inoperative Service Checks | 31 |
| | Safety Items Checks | 31 |
| | Operative Service Checks | 31 |

SECTION 10 - ENGINE AND FUEL SYSTEMS

BOOK 1 - 84203603

Chapter 1 - Engine Systems

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Specifications | 6 |
| | General Engine Specifications | 6 |
| | Cylinder Block Specifications | 6 |
| | Cylinder Head Specifications | 7 |
| | Piston Specifications | 7 |
| | Piston Wrist Pin Specifications | 8 |
| | Piston Ring Specifications | 8 |
| | Connecting Rod Specifications | 9 |
| | Crankshaft Specifications | 10 |
| | Camshaft Specifications | 11 |
| | Valve Specifications | 12 |
| | Pushrod Specifications | 13 |
| | Rocker Arm Specifications | 13 |
| | Lubrication System Specifications | 13 |
| | Cooling System Specifications | 14 |
| | Engine Bolt Torque Specifications | 15 |
| | Engine Fuel System Bolt Torque Specifications | 15 |
| | Metric Bolt Torque Specifications - All Models | 16 |
| | Special Tools | 17 |
| | Compression Test | 18 |
| | Description of Operation - Engine | 20 |
| | Cylinder Block | 21 |
| | Cylinder Head and Valve Train Components | 21 |
| | Troubleshooting | 23 |
| | Overhaul - Engine | 27 |
| | Engine | 27 |
| | Removal | 27 |
| | Fuel Injector and Glow Plug | 32 |
| | Removal | 32 |
| | Valve Cover | 32 |
| | Removal | 32 |

SECTION 10 - ENGINE AND FUEL SYSTEMS

BOOK 1 - 84203603

Chapter 1 - Engine Systems (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Oil Transfer Tube | 33 |
| | Removal | 33 |
| | Water Pump Removal | 33 |
| | Rocker Arm, Support Bracket, and Pushrod | 33 |
| | Removal | 33 |
| | Exhaust Manifold | 34 |
| | Removal | 34 |
| | Engine Cylinder Head | 34 |
| | Removal | 34 |
| | Lifter (Valve Tappet) | 35 |
| | Removal | 35 |
| | Fuel Shutoff Solenoid | 35 |
| | Removal | 35 |
| | Timing Gear Cover | 36 |
| | Removal | 36 |
| | Timing Gears and Camshaft | 37 |
| | Removal | 37 |
| | Oil Pan and Pick-up | 38 |
| | Removal | 38 |
| | Connecting Rods, Bearings, and Piston | 39 |
| | Removal | 39 |
| | Backing Plate and Oil Seal | 39 |
| | Removal | 39 |
| | Front Crankshaft Gear | 40 |
| | Removal | 40 |
| | Crankshaft and Main Bearings | 40 |
| | Removal | 40 |
| | Cylinder Head | 41 |
| | Disassembly | 41 |
| | Inspection and Repair | 41 |
| | Valve Seats | 42 |
| | Inspection and Repair | 42 |

SECTION 10 - ENGINE AND FUEL SYSTEMS

BOOK 1 - 84203603

Chapter 1 - Engine Systems (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Valves | 43 |
| | Inspection and Repair | 43 |
| | Valve Guides | 44 |
| | Inspection and Replacement | 44 |
| | Valve Springs | 45 |
| | Inspection and Replacement | 45 |
| | Rocker Arms | 45 |
| | Inspection and Replacement | 45 |
| | Pushrods | 46 |
| | Inspection and Replacement | 46 |
| | Cylinder Head | 46 |
| | Assembly | 46 |
| | Cylinder Block | 47 |
| | Inspection | 47 |
| | Pistons | 48 |
| | Disassembly and Inspection | 48 |
| | Piston Rings | 51 |
| | Inspection | 51 |
| | Connecting Rods | 52 |
| | Inspection | 52 |
| | Connecting Rod Bearing Oil Clearance Check | 54 |
| | Pistons, Rings, and Connecting Rod | 55 |
| | Assembly | 55 |
| | Main Bearing and Thrust Washer | 56 |
| | Removal And Inspection | 56 |
| | Crankshaft - All Models | 58 |
| | Inspection | 58 |
| | Main Journal Number One Bearing (Bushing) | 60 |
| | Inspection | 60 |
| | Replacement | 61 |
| | Crankshaft Front Gear, Main Bearings and Thrust Washers | 61 |
| | Assembly | 61 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$