
L160, L170 REPAIR MANUAL

COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION.....	3
SECTION 10 - ENGINE.....	4
SECTION 27 - REAR DRIVE AXLE (GEARBOXES).....	6
SECTION 29 - HYDROSTATIC TRANSMISSION.....	6
SECTION 33 - BRAKES AND CONTROLS.....	8
SECTION 35 - HYDRAULIC SYSTEM.....	9
SECTION 37 - TOWING HOOKS AND BALLASTING.....	11
SECTION 39 - FRAMES.....	11
SECTION 44 - AXLES AND WHEELS.....	12
SECTION 50 - CAB CLIMATE CONTROL.....	12
SECTION 55 - ELECTRICAL SYSTEM.....	13
SECTION 82 - FRONT LOADER (BOOM AND MOUNTING PLATE).....	15
SECTION 88 - ACCESSORIES.....	16
SECTION 90 - PLATFORMS, CAB, BODYWORK, AND DECALS.....	17

The following pages are the collation of the contents pages from each section and chapter of the L160, L170 Repair Manual. Complete Repair Manual part # 87634733.

The sections used through out all New Holland product Repair Manuals may not be used for each product. Each Repair Manual will be made up of one or several books.

Each book will be labeled as to which sections are in the overall Repair Manual and the sections that each book contains.

The sections listed above are the sections utilized for the L160, L170 Skid Steer.

SECTION 00 – GENERAL INFORMATION

BOOK 1 - 87634735

CONTENTS

Section	Description	Page
	Introduction	00-2
	About Improvements	00-2
	Company Policy	00-3
	Parts and Accessories	00-3
	Model Codes	00-3
	Precautionary Statements	00-4
	Safety Precaution Information	00-5
	General Safety Information	00-7
	Machine Model and Serial Number Location	00-9
	Engine Model and Serial Number Location	00-9
	Hardware Torque Specifications	00-10
	Installation of Adjustable Fittings in Straight Thread O Ring Bosses	00-12
	Standard Torque Data for Hydraulic Tubes and Fittings	00-12
	Pipe Thread Fitting Torque	00-13
	Lubricants and Coolants	00-13
	Sealants	00-13
	Properly Support a Raised Machine	00-14
	Properly Support Boom on Boom Lock Pins	00-14
	Raising Boom Without Hydraulic Oil Flow	00-14
	Raising Boom Without Battery Voltage (12V)	00-16
	Reattaching Cylinders After Repair with Boom Resting on Boom Lock Pins	00-17
	Major Unit Overhaul	00-18
	Cab and Boom Tilt Procedure	00-19
	Craning the Skid Steer	00-25
	Special Tools	00-28
	Specifications	00-29
	Dimensions	00-35
	Cab and Boom Tilt Procedure (Cab Upgrade Machines Only).....	00-37

SECTION 10 – ENGINE

BOOK 1 - 87634735

Chapter 1 – L160 - N844, L170 - N844T

CONTENTS

Section	Description	Page
10 000	General Engine Information	10-3
	General Description	10-3
	Engine Component Descriptions	10-3
	Engine Model and Serial Number Location	10-5
	Turbocharger Lubrication	10-5
	Safety Precautions	10-6
	General Engine Specifications	10-7
	Troubleshooting	10-11
	L170 - Excessive Oil Consumption	10-15
	Specifications - Service Standards	10-17
	Torque Specifications	10-21
	Engine Components Electrical Diagram	10-22
10 001 10	Engine Removal	10-23
10 001 53	Engine Disassembly Sequence	10-28
	Engine Component Maintenance	10-36
10 101 55	Valve Seat	10-39
10 101 56	Cylinder Block	10-41
10 105 22	Piston and Piston Rings	10-42
	Connecting Rod	10-45
10 103 10	Bearing Holder	10-47
	Front Crankshaft Bearing (Bushing)	10-48
10 103 30	Crankshaft	10-50
10 103 76	Flywheel and Ring Gear	10-52
10 106 40	Camshaft Assembly	10-52
10 106 66	Camshaft Gear and Bearing Assembly	10-53
	Timing Gear	10-54
10 304 41	Oil Pump	10-54
10 304 10	Oil Filter	10-55
10 402 28	Water Pump Assembly and Thermostat Housing	10-55
10 402 30	Thermostat	10-55
10 230 24	Governor	10-57
	Governor Operation	10-59

10 304 38	Engine Reassembly Sequence	10-61
	Crankshaft and Bearing Holder Assembly	10-62
	Rear Oil Seal	10-63
	Backplate/Flywheel Housing	10-63
	Flywheel	10-63
	Piston and Connecting Rod	10-64
	Oil Intake and Oil Strainer	10-64
	Oil Sump	10-64
	Dipstick and Tube	10-64
	Front Plate	10-64
	Idler Gear and Oil Pump Assembly	10-66
	Timing Gear Case Installation	10-66
	Crankshaft Pulley	10-66
	Injection Pump Installation	10-66
	Adjusting the Fuel Injection Timing	10-67
	Spill Timing Procedure	10-68
29 100 50	Reinstallation of Engine into Skid Steer Frame	10-75
	How to Operate the Engine After Overhaul	10-77
	Cooling System	10-78
	Cooling System Operation	10-78
	Water Pump Assembly and Thermostat Housing	10-79
	Radiator	10-80
	Fuel System	10-82
	Fuel Specifications	10-82
	Diesel Fuel	10-82
	Diesel Fuel Storage	10-82
	Fuel System Components	10-83
	Fuel Gauge	10-84
	Cold Start Aid	10-85
	Fuel Filter System	10-85
	Priming the Fuel System	10-86
	Fuel System Testing	10-87
	Fuel System Components	10-90
10 236 08	Fuel Injection Timing	10-96
	Turbocharger - L170 N844T Engine	10-101
10 250 30	Turbocharger Removal	10-103
	Miscellaneous Engine Electrical	10-116
10 223 10	Shut-off Solenoid	10-117
	Special Tools	10-119
	Labor Guide	10-120

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$