



NEW HOLLAND

**SKID STEER LOADER
COMPACT TRACK LOADER**

L180

L185

L190

C185

C190

Mechanical and Pilot Control

(Cab Upgrade Machines)

**REPAIR
MANUAL**

87630288 NA
Replaces 87578815 NA

Issued 12-2006
Revised 05-2007

 **NEW HOLLAND**

www.newhollandconstruction.com

REPAIR MANUAL

**SKID STEER LOADER
COMPACT TRACK LOADER**

**L180
L185
L190
C185
C190**

**Mechanical and Pilot Control
(Cab Upgrade Machines)**

87630288 NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL

**SKID STEER LOADER
COMPACT TRACK LOADER**

**L180
L185
L190
C185
C190**

**Mechanical and Pilot Control
(Cab Upgrade Machines)**

87630288 NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL

**SKID STEER LOADER
COMPACT TRACK LOADER**

**L180
L185
L190
C185
C190**

**Mechanical and Pilot Control
(Cab Upgrade Machines)**

87630288 NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL

**SKID STEER LOADER
COMPACT TRACK LOADER**

**L180
L185
L190
C185
C190**

**Mechanical and Pilot Control
(Cab Upgrade Machines)**

87630288 NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

REPAIR MANUAL



C185
C190
L180
L185
L190

Contents

INTRODUCTION

DISTRIBUTION SYSTEMS

A

PRIMARY HYDRAULIC POWER SYSTEM

A.10.A

SECONDARY HYDRAULIC POWER SYSTEM

A.12.A

HIGH-FLOW HYDRAULIC POWER SYSTEM

A.16.A

ELECTRICAL POWER SYSTEM

A.30.A

LIGHTING SYSTEM

A.40.A

POWER PRODUCTION

B

ENGINE

B.10.A

FUEL AND INJECTION SYSTEM

B.20.A

AIR INTAKE SYSTEM

B.30.A

ENGINE COOLANT SYSTEM

B.50.A

LUBRICATION SYSTEM

B.60.A

STARTING SYSTEM

B.80.A

POWER TRAIN

C

POWER COUPLING Fixed coupling

C.10.B

TRANSMISSION Hydrostatic

C.20.F

TRAVELLING

D

FRONT AXLE

D.10.A

REAR AXLE

D.12.A

STEERING Steering clutch

D.20.F

PARKING BRAKE Hydraulic

D.32.C

WHEELS AND TRACKS Tracks

D.50.B

WHEELS AND TRACKS Wheels

D.50.C

Final drive

D.15.A

BODY AND STRUCTURE

E

USER CONTROLS AND SEAT

E.32.A

USER PLATFORM

E.34.A

ENVIRONMENT CONTROL Heating system

E.40.B

ENVIRONMENT CONTROL Air-conditioning system	E.40.C
SAFETY SECURITY ACCESSORIES Safety	E.50.B
WORKING ARM	H
SINGLE ARM Lift	H.40.B
SINGLE ARM TOOL ATTACHMENT Tilt	H.50.C
TOOLS AND COUPLERS	J
CARRYING Unarticulated tools	J.50.B
COUPLING Hydraulic coupling	J.80.C
COUPLING Mechanical coupling	J.80.B
SCHEMATICS	
Electrical	5-4090
Hydraulic	
Electrical	5-7030

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$