

SERVICE MANUAL

Speedrower[®] 200

Speedrower[®] 240

Tier 3

Self-Propelled Windrower

PINYGG677501 and above

Part number 48126539

1st edition English

April 2017





SERVICE MANUAL

Speedrower® 200 Tier 3 [YGG677501 -]
Speedrower® 200 Tier 3, containerized [YGG677501 -]
Speedrower® 240 .Tier 3 [YGG677501 -]
Speedrower® 240 Tier 3, containerized [YGG677501 -]

Link Product / Engine

Product	Market Product	Engine
Speedrower® 200 Tier 3, containerized [YGG677501 -]	Middle East Africa	F4HE9687
Speedrower® 200 Tier 3, containerized [YGG677501 -]	Australia New Zealand	F4HE9687
Speedrower® 200 Tier 3, containerized [YGG677501 -]	Latin America	F4HE9687
Speedrower® 200 Tier 3, containerized [YGG677501 -]	Asia Pacific	F4HE9687
Speedrower® 200 Tier 3 [YGG677501 -]	Middle East Africa	F4HE9687
Speedrower® 200 Tier 3 [YGG677501 -]	Asia Pacific	F4HE9687
Speedrower® 200 Tier 3 [YGG677501 -]	Australia New Zealand	F4HE9687
Speedrower® 200 Tier 3 [YGG677501 -]	Latin America	F4HE9687
Speedrower® 240 Tier 3, containerized [YGG677501 -]	Australia New Zealand	F4HE9687
Speedrower® 240 Tier 3, containerized [YGG677501 -]	Middle East Africa	F4HE9687
Speedrower® 240 Tier 3, containerized [YGG677501 -]	Latin America	F4HE9687
Speedrower® 240 Tier 3, containerized [YGG677501 -]	Asia Pacific	F4HE9687
Speedrower® 240 .Tier 3 [YGG677501 -]	Latin America	F4HE9687
Speedrower® 240 .Tier 3 [YGG677501 -]	Asia Pacific	F4HE9687
Speedrower® 240 .Tier 3 [YGG677501 -]	Australia New Zealand	F4HE9687
Speedrower® 240 .Tier 3 [YGG677501 -]	Middle East Africa	F4HE9687

Contents

INTRODUCTION

Engine.....	10
[10.202] Air cleaners and lines	10.1
[10.218] Fuel injection system.....	10.2
[10.400] Engine cooling system	10.3
[10.414] Fan and drive	10.4
[10.250] Turbocharger and lines.....	10.5
[10.304] Engine lubrication system.....	10.6
Front axle system	25
[25.310] Final drives	25.1
Rear axle system.....	27
[27.550] Non-powered rear axle.....	27.1
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.130] Neutralizer plate assembly.....	29.2
[29.202] Hydrostatic transmission	29.3
[29.218] Pump and motor components.....	29.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.100] Main lift system.....	35.2
[35.105] Charge pump.....	35.3
[35.128] Auxiliary hydraulic function control	35.4
[35.220] Auxiliary hydraulic pump	35.5
[35.300] Reservoir, cooler, and filters.....	35.6

[35.304] Combination pump units	35.7
[35.410] Header or attachment height system	35.8
[35.602] Header or attachment leveling system	35.9
[35.760] Header reverser drive	35.10
[35.910] Head and header hydraulic drive	35.11
Frames and ballasting	39
[39.105] Lift arm	39.1
[39.140] Ballasts and supports	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.432] Autoguidance steering	41.3
Wheels	44
[44.511] Front wheels.....	44.1
Cab climate control	50
[50.200] Air conditioning	50.1
Electrical systems	55
[55.670] Header leveling control.....	55.1
[55.000] Electrical system	55.2
[55.100] Harnesses and connectors.....	55.3
[55.015] Engine control system.....	55.4
[55.201] Engine starting system	55.5
[55.301] Alternator	55.6
[55.302] Battery.....	55.7
[55.202] Cold start aid	55.8
[55.011] Fuel tank system	55.9
[55.010] Fuel injection system.....	55.10
[55.014] Engine intake and exhaust system.....	55.11

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$