
T2310, T2320, T2330 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	10
SECTION 21 - TRANSMISSION	12
SECTION 25 - FWD FRONT AXLE	14
SECTION 27 - DIFFERENTIAL, REAR AXLE	17
SECTION 29 - HYDROSTATIC TRANSMISSION	18
SECTION 31 - POWER TAKE-OFF (PTO) SYSTEMS	21
SECTION 33 - BRAKES	24
SECTION 35 - HYDRAULIC SYSTEM	24
SECTION 41 - STEERING	28
SECTION 44 - 2WD FRONT AXLE	30
SECTION 50 - CLIMATE CONTROL	30
SECTION 55 - ELECTRICAL	35
SECTION 90 - PLATFORM	52

The following pages are the collation of the contents pages from each section and chapter of the T2310, T2320, T2330 Repair manual. Complete Repair part # 87491390.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87491391

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Introduction	3
	Precautionary Statements	4
	Personal Safety	4
	Machine Safety	4
	Information	4
	Technical Information	5
	Hardware	5
	General	5
	Plating	5
	Nut Tightening	5
	Locknuts	5
	Jam Nuts	5
	Thread Lubrication	5
	Safety	6
	Precautionary Statements	6
	The Tractor	6
	Servicing the Tractor	6
	Operating the Tractor	7
	Driving the Tractor	7
	Operating the PTO	8
	Diesel Fuel	8
	Safety Frame (ROPS)	8
	Decals - T2310, T2320, T2330 with 12x12 Transmission	9
	Safety Decals	9
	Instruction Decals - T2310, T2320, T2330 with 12x12 Transmission	11
	Decals - T2310, T2320 with HST	14
	Safety Decals	14
	Instruction Decals - T2310, T2320 with HST Transmission	16
	Universal Symbols	20
	Specifications - T2310, T2320, T2330 with 12x12 Gear Transmission	21
	General Dimensions	28

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87491391

Chapter 1 - General Information (Continued)

CONTENTS

Section	Description	Page
	Specifications - T2310, T2320 with Hydrostatic Transmission	34
	General Dimensions	40
	Minimum Hardware Tightening Torque	48
	Special Tools	48
	Adjustments	50

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	6
	Metric Bolt Torque Specifications	15
	Special Tools	16
	Compression Test and Tools	17
	Description of Operation	18
	Troubleshooting	19
	Cylinder Head and Valve Train Components	23
	Separating the Tractor at the Clutch Housing/Engine - 12x12 Transmission	24
	Removal	24
	Separating the Tractor at the Engine/Frame	28
	Installation	30
	Attaching the 12x12 Transmission to the Engine	34
	Overhaul	39
	Engine	39
	Fuel Injector and Glow Plug	39
	Removal	39

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Oil Pressure Switch	39
	Temperature Sending Switch and Alternator	39
	Removal	39
	Fan, Water Pump, and External Oil Tube	40
	Removal	40
	Air Inlet Manifold	40
	Removal	40
	Rocker Arm Shaft and Support Bracket	41
	Removal	41
	Cylinder Head	41
	Removal	41
	Valve Tappet	41
	Removal	41
	Fuel Shutoff Solenoid	42
	Removal	42
	Engine Timing Gear Cover, Timing Gears, and Cam Shaft	42
	Timing Gear Cover Removal	42
	Timing Gears and Camshaft	44
	Removal	44
	Oil Sump	45
	Removal	45
	Oil Suction Pipe and Strainer	45
	Removal	45
	Balancer Assembly	46
	Removal	46
	Connecting Rods, Bearings, and Pistons, Rings	46
	Removal	46
	Flywheel	47
	Removal	47
	Backplate and Oil Seal	47
	Removal	47
	Crankshaft and Main Bearings	47
	Removal	47

SECTION 10 - ENGINE

BOOK 1 - 87491391

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Cylinder Head	48
	Disassembly	48
	Inspection and Repair	48
	Valve Seats	49
	Valves	50
	Valve Guides	51
	Valve Springs	52
	Rocker Arms	52
	Push Rods	53
	Cylinder Head	53
	Assembly	53
	Cylinder Block	54
	Pistons	54
	Disassembly and Inspection	54
	Piston Rings	57
	Connecting Rods	57
	Pin to Bushing Clearance	58
	Connecting Rod Bearing	59
	Clearance Check	59
	Pistons, Rings, and Connecting Rod	60
	Assembly	60
	Crankshaft - Main Bearing and Thrust Washer	61
	Removal and Inspection	61
	Crankshaft	62
	Bearing (Bushing)	63
	Replacement	63
	Main Bearing	64
	Assembly	64
	Port Block	65
	Removal	65
	Installation	65
	Timing Gear	66

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$