
TC23DA, TC26DA REPAIR MANUAL COMPLETE CONTENTS

| | |
|---|----|
| SECTION 00 - GENERAL INFORMATION | 2 |
| SECTION 10 - ENGINE | 3 |
| SECTION 18 - SINGLE CLUTCH | 10 |
| SECTION 21 - TRANSMISSION | 11 |
| SECTION 25 - FWD FRONT AXLE | 13 |
| SECTION 27 - DIFFERENTIAL, REAR AXLE | 14 |
| SECTION 29 - HYDROSTATIC TRANSMISSION | 15 |
| SECTION 31 - POWER TAKE-OFF (PTO) | 19 |
| SECTION 33 - BRAKES | 20 |
| SECTION 35 - HYDRAULIC SYSTEM | 21 |
| SECTION 41 - STEERING | 24 |
| SECTION 44 - WHEELS AND TIRES | 25 |
| SECTION 55 - ELECTRICAL SYSTEM | 26 |
| SECTION 90 - PLATFORM | 32 |

The following pages are the collation of the contents pages from each section and chapter of the TC23DA, TC26DA Repair manual. Complete Repair part # 87367140.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TC23DA, TC26DA Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87367141

Chapter 1 - General Information

CONTENTS

| Section | Description | Page |
|----------------|---|-------------|
| | Introduction | 2 |
| | Precautionary Statements | 3 |
| | Safety | 4 |
| | The Tractor | 4 |
| | Servicing the Tractor | 4 |
| | Operating the Tractor | 5 |
| | Driving the Tractor | 5 |
| | Operating the PTO | 6 |
| | Diesel Fuel | 6 |
| | Safety Frame (ROPS) | 6 |
| | Safety Decals | 7 |
| | Instruction Decals | 9 |
| | Product Identification Plate | 13 |
| | Universal Symbols | 14 |
| | Specifications - TC23DA, TC26DA | 15 |
| | General Dimensions - TC23DA, TC26DA | 20 |
| | Minimum Hardware Tightening Torques | 23 |
| | Lubricants | 25 |
| | Adjustments | 26 |

SECTION 10 - ENGINE

BOOK 1 - 87367141

Chapter 1 - Engine Systems

CONTENTS

| Section | Description | Page |
|---------|---|------|
| 10 000 | Specifications | 6 |
| | Cylinder Head | 6 |
| | Cylinder Block | 7 |
| | Piston | 7 |
| | Piston Ring | 8 |
| | Connecting Rod | 8 |
| | Crankshaft | 9 |
| | Camshaft | 10 |
| | Valves | 11 |
| | Push Rods | 12 |
| | Rocker Arms | 12 |
| | Lubrication System | 12 |
| | Cooling System | 13 |
| | Torque Specifications | 14 |
| | Metric Bolt Torque Specifications | 14 |
| | Special Tools | 15 |
| | Description and Operation - General Information | 16 |
| | Identification Chart | 16 |
| | Cylinder Head and Valve Train Components | 17 |
| | Cylinder Block Assembly | 17 |
| | Troubleshooting | 19 |
| | Overhaul - Engine | 25 |
| | Engine Preparation | 25 |
| | Disassembly | 25 |
| | Fuel Injector and Glow Plug | 27 |
| | Removal | 27 |
| | Oil Pressure Switch | 27 |
| | Removal | 27 |
| | Temperature Sending Switch and Alternator | 28 |
| | Removal | 28 |
| | Fan, Water Pump, and External Oil Tube | 28 |
| | Removal | 28 |

SECTION 10 - ENGINE

BOOK 1 - 87367141

Chapter 1 - Engine Systems (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Valve Cover | 28 |
| | Removal | 28 |
| | Rocker Shaft and Push Rod | 29 |
| | Removal | 29 |
| | Cylinder Head | 29 |
| | Removal | 29 |
| | Valve Tappet | 29 |
| | Removal | 29 |
| | Fuel Shut-off Solenoid | 30 |
| | Removal | 30 |
| | Engine Timing Gear Cover | 30 |
| | Removal | 30 |
| | Timing Gears and Camshaft | 32 |
| | Removal | 32 |
| | Oil Sump | 32 |
| | Removal | 32 |
| | Oil Suction Pipe and Strainer | 33 |
| | Removal | 33 |
| | Connecting Rods, Bearing and Pistons | 33 |
| | Removal | 33 |
| | Flywheel | 34 |
| | Removal | 34 |
| | Backplate and Oil Seal | 34 |
| | Removal | 34 |
| | Crankshaft and Main Bearing | 34 |
| | Removal | 34 |
| 18 110 | Cylinder Head | 35 |
| | Disassembly | 35 |
| | Inspection | 35 |
| | Valve Seats | 36 |
| | Inspection | 36 |

SECTION 10 - ENGINE

BOOK 1 - 87367141

Chapter 1 - Engine Systems (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Valves | 37 |
| | Inspection | 37 |
| | Valve Guides | 39 |
| | Inspection | 39 |
| | Valve Springs | 39 |
| | Inspection | 39 |
| | Rocker Arms | 40 |
| | Inspection | 40 |
| | Push Rods | 40 |
| | Inspection | 40 |
| | Cylinder Head | 41 |
| | Assembly | 41 |
| | Cylinder Block | 41 |
| | Inspection | 41 |
| 10 105 | Pistons, Piston Rings, and Connecting Rods | 42 |
| | Disassembly | 42 |
| | Piston | 42 |
| | Inspection | 42 |
| | Piston Rings | 44 |
| | Inspection | 44 |
| | Connecting Rods | 45 |
| | Inspection | 45 |
| | Bearing Oil Clearance Check | 47 |
| 10 105 | Pistons, Piston Rings, and Connecting Rod | 47 |
| | Assembly | 47 |
| 10 103 | Crankshaft Main Bearings | 48 |
| | Removal | 48 |
| | Inspection | 48 |
| | Crankshaft | 49 |
| | Inspection | 49 |
| | Crankshaft Journal Wear Limit and Bearing Usage | 49 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$