

---

# TD75D, TD95D, TD95D HIGH CLEARANCE REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL .....	2
SECTION 10 - ENGINE .....	3
SECTION 18 - CLUTCH .....	6
SECTION 21 - FRONT TRANSMISSION .....	7
SECTION 23 - FWD TRANSFER BOX .....	8
SECTION 25 - FWD AXLE .....	9
SECTION 27 - REAR TRANSMISSION .....	10
SECTION 31 - POWER TAKE-OFF .....	11
SECTION 33 - BRAKES .....	12
SECTION 35 - HYDRAULIC SYSTEMS .....	13
SECTION 41 - STEERING .....	16
SECTION 44 - FRONT AXLE AND WHEELS (2WD) .....	17
SECTION 55 - ELECTRICAL SYSTEM .....	18
SECTION 90 - PLATFORM, CAB, BODYWORK AND DECALS .....	23

The following pages are the collation of the contents pages from each section and chapter of the TD75D, TD95D, and TD95D High Clearance Repair manual. Complete Repair part # 87572972.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TD75D, TD95D, and TD95D High Clearance Tractors.

---

# SECTION 00 - GENERAL

BOOK 1 - 87572973

## Chapter 1 - General

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	General Instructions .....	3
	Health and Safety .....	5
	Precautionary Statements .....	15
	Safety .....	16
	Ecology and the Environment .....	19
	Minimum Hardware Tightening Torques .....	20
	Federal Emissions Warranty .....	22
	California Emission Control Warranty Statement .....	23
	Consumables .....	25

---

# SECTION 10 - ENGINE

BOOK 1 - 87572973

## Chapter 1 - Engine

### CONTENTS

Section	Description	Page
	Specifications .....	2
	Special Tools .....	10
	Tightening Torques .....	14
	Sectional Views .....	15
	Troubleshooting .....	17
	Overhaul .....	21
10 001 10	Engine .....	21
	Removal .....	21
10 001 54	Installation .....	33
	Disassembly .....	35
	Assembly .....	50
	Compression Test .....	60
	Checks, Dimensions, and Repairs .....	61
	Cylinder Block .....	61
	Crankshaft, Main Bearings, and Flywheel .....	63
	Connecting Rods .....	67
	Pistons .....	68
	Valves .....	71
	Tappets .....	71
	Camshaft .....	72
	Valve Timing Check .....	73
	Cylinder Head .....	74
10 102 70	Rotating Counterweight Dynamic Balancer .....	75
	Valve Guides .....	76
	Valve Seats in Cylinder Head .....	79
	Crankshaft Front Oil Seal .....	80
	Valve Clearance .....	86

---

## SECTION 10 - ENGINE

BOOK 1 - 87572973

### Chapter 2 - Cooling System

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Special Tools .....	3
	Sectional Views .....	4
	Description and Operation .....	5
	Cooling System .....	5
	Radiator .....	5
	Thermometer .....	5
	Thermostat .....	5
	Thermostatic Switch .....	5
	Overhaul .....	6
10 406 10	Water Pump .....	6
	Removal .....	6
	Disassembly .....	9
	Assembly .....	9
	Installation .....	10
10 402 30	Cooling System Thermostat .....	10
	Removal .....	10
	Installation .....	13
10 402 28	Radiator .....	14
	Removal .....	14
	Installation .....	17

---

## SECTION 10 - ENGINE

BOOK 1 - 87572973

### Chapter 3 - Lubrication System

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Special Tools .....	3
	Sectional Views .....	4
	Description and Operation .....	5
	Oil Filter .....	5
	Low Oil Indicator .....	5
10 001 10	Oil Pump .....	6

## SECTION 10 - ENGINE

BOOK 1 - 87572973

### Chapter 4 - Fuel System

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Special Tools .....	4
	Tightening Torques .....	5
	Description and Operation .....	6
	Fuel Injection Pump (Bosch) .....	6
	Turbocharged Models .....	6
	All Models .....	8
	Overhaul .....	10
10 218 30	Fuel Injectors .....	10
	Removal .....	10
	Installation .....	11
	Fuel Injector Sleeves .....	12
	Checking Injector Protrusion .....	12
	Removal .....	12
	Installation .....	13
10 246 14	Injection Pump .....	14
	Removal .....	14
	Installation .....	18
	Checking the Fuel Injection Pump Timing with the Pump on the Tractor .....	19
	Lock-time the Fuel Injection Pump with the Pump Removed from the Tractor ...	23
	Fuel System Air Bleeding .....	28

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$