
TK75VA, TK80A, TK80MA, TK90A, TK90MA, TK100A REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	6
SECTION 21 - TRANSMISSIONS	7
SECTION 27 - REAR MECHANICAL DRIVE	7
SECTION 31 - MECHANICAL POWER TAKE-OFF	9
SECTION 33 - BRAKING SYSTEM	10
SECTION 35 - HYDRAULIC SYSTEMS	11
SECTION 46 - STEERING CLUTCHES	13
SECTION 48 - SUSPENSION AND TRACKS	14
SECTION 55 - ELECTRICAL SYSTEM	15

The following pages are the collation of the contents pages from each section and chapter of the TKA Series Repair manual. Complete Repair part # 87582124.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TKA Series Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87582125

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	2
	Important Notice	2
	Shimming	2
	Rotating Shaft Seals	2
	O-Rings	2
	Sealers	2
	Bearings	2
	Spring Pins	2
	Precautionary Notice	3
	Equipment Notice	3
	Spare Parts Notice	3
	General Notices	3
	Health and Safety	4
	Health and Safety Precautions	4
	General Workshop Tools and Equipment	10
	Legal Aspects	10
	Lubricants and Greases	10
	Precautionary Statements	11
	Personal Safety	11
	Machine Safety	11
	Safety	12
	The Tractor	12
	Driving the Tractor	12
	Operating the Tractor	12
	Operating the PTO	13
	Servicing the Tractor	13
	Diesel Fuel	14
	ROPS	14
	Ecology and the Environment	15
	Tightening Torques	16
	Federal Emissions Warranty	18
	California Emission Control Warranty Statement	19
	Lubricants	21

SECTION 10 - ENGINE

BOOK 1 - 87582125

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	4
	Tightening Torques	24
	Special Tools	26
	Engine Cooling System Diagram	30
	Troubleshooting	31
	Engine Overhaul	35
	Engine	35
	Removal	35
	Installation	38
	Compression Test	39
	Disassembly	40
	Assembly	54
	Mounting the Balancing Device with Counter-rotating Weights	54
	Mounting the Tappets and Drive Shaft With Main Bearing Caps, Bearings and Thrust Rings	55
	Mounting the Rear Cover With Seal and Engine Flywheel	57
	Seal Installation	59
	Mounting the Pistons Complete With Rings, Pins, Connecting Rods, Big End Caps and Bearings - Checking Protrusion In Relation To Cylinder Block Face	60
	Synchronizing the Timing Gears	61
	Installing the Counter-rotating Weight Box to the Oil Sump	62
	Installing the Bosch Injection Pump	63
	Installing the Cylinder Head Gasket	64
	Installing and Tightening the Cylinder Head	64
	Valve / Rocker Arm Clearance Adjustment	65
	Installing Fuel Injectors	65
	Cooling System Belt Tension Adjustment	65
	Checks, Measurements and Repairs of Components	66
	Cylinder Block	66
	Crankshaft, Main Bearings and Flywheel	68
	Crankshaft	68

SECTION 10 - ENGINE

BOOK 1 - 87582125

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Bearings	70
	Flywheel	71
	Connecting Rods	72
	Pistons	73
	Camshaft, Tappets and Valves	76
	Valves	76
	Tappets	76
	Camshaft	77
	Cylinder Head	79
	Valve Guides	80
	Valve Seats In Cylinder Head	83
	Injector Sleeves	84
	Cylinder Head Bolts	85
	Counterweight Balancer	86
	Lubrication System Maintenance	87
	Engine Oil Pump Servicing	87
	Low Oil Pressure Indicator	88
	Cooling System Maintenance	88
	Radiator Servicing	88
	Testing Cooling System Thermometer	89
	Replacing the Thermostat	89
	Drive Belts Tension Adjustment	89
	Radiator	90
	Removal	90
	Installation	92
	Crankshaft Front Oil Seal	93
	Removal	93
	Installation	96
	Valve-Rocker Arm Clearance	97
	Rear Fuel Tank	100
	Removal	100
	Installation	102

SECTION 10 - ENGINE

BOOK 1 - 87582125

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Front Fuel Tank	103
	Removal	103
	Installation	104
	Injectors	105
	Removal	105
	Installation	106
	Bosch Injection Pump	107
	Removal	107
	Installation	111
	Timing	112
	Air Bleeding	114
	Timing Injection Pump Off the Tractor	115
	Installing the Injection Pump Onto the Engine	120
	Turbocharged Diesel Engine - TK75VA, TK90A, TK90MA, TK100A Models	121
	Exhaust Pipe	124
	Removal	124
	Installation	124
	Coolant Pump	125
	Removal	125
	Installation	126
	Disassembly	127
	Assembly	127
	Thermostatic Valve	128
	Removal	128
	Installation	129
	Coolant Pump and Alternator Drive Belt	130
	Tension Adjustment	130

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$