



SOFTAIL® MODELS

2011 HARLEY-DAVIDSON® PARTS CATALOG

99455-11A

GENERAL INFORMATION

THIS IS NOT AN ASSEMBLY MANUAL AND SHOULD NOT BE USED AS SUCH

About This Manual

This Parts Catalog has been prepared to make it easier for you to order parts for your 2011 motorcycles. You will also find a complete Hardware Listing at the back of the book for your convenience. The numbers shown in the illustrations correspond to the numbers in the "INDEX NO." column in the parts lists. Consult the illustrations when ordering parts to make sure you receive all the required parts. Take note that the number in parenthesis following the part description is the quantity of that part needed for complete assembly; if there is no number in parenthesis, only one is used. Prices of parts in this catalog are published separately.

The following instructions should be followed carefully when ordering parts:

- The "MODELS" column in the parts lists may include one or more two-character (three-character for FLT) codes that correspond to the V.I.N. model designations. The models and their respective two-character (three-character for FLT) codes are listed at the bottom of each right-hand page for your reference. If a part fits all models, "All" will be in the corresponding "MODEL" column.
- Be sure to specify the correct part number for each item. The part numbers appear under the "PART NO." column in the parts lists.
- Orders may be placed via your computer for all parts. Review your system documentation for details on placing orders electronically. All non-warranty replacement crankcase orders require return of the complete left crankcase half with V.I.N.. All non-warranty replacement frame orders require return of the steering neck with V.I.N.. Non-compliance will result in a fine. See non-warranty frame and crankcase policy or contact your SPOC team for details.
- The sale or use of these parts or accessories does not grant the purchaser a license or other right under any Harley-Davidson patent.
- For all 2008 and later painted parts refer to the Service Section of h-dnet.com which features a listing of painted part numbers, except CVO (Custom Vehicle Operations) models which are located in their own respective catalogs.
- All parts that were added for the new model year will have a vertical bar located on the parts list page to the left of the index number. This can be used to quickly identify any new parts that are unique to a specific model, and help distinguish new and previous model year parts. In the back of the book you will find a New Parts List. This list will serve as a summary of new parts.
- Parts marked "**RESTRICTED SALE PART**" are limited edition items and can only be ordered as direct replacements.
- Orientation Symbols:

Orientation symbols will be used when the illustration is not in the standard "Right-Front" orientation. The symbol will be a motorcycle with an arrow in the front indicating the direction of view. The symbol will be located at the bottom left or right hand side of the illustration page.

To the best knowledge of Harley-Davidson Motor Company, the material contained herein is accurate as of the date this publication was approved for printing. Harley-Davidson Motor Company reserves the right to change specifications, equipment, or designs at any time without notice and without incurring obligation.

Vehicle Identification Number (V.I.N.)

See Figure 1. A unique 17-digit serial, or V.I.N., is assigned to each motorcycle. For a description of each item in the V.I.N., refer to Table 1.

The full 17-digit serial, or V.I.N., is stamped on the right side of the frame backbone at the rear of the steering head. The V.I.N. is also printed on a label on the right front down tube. An abbreviated V.I.N. is stamped on the left side crankcase between the front and rear cylinders, for all models except VRSC.

The full 17-digit serial, or V.I.N., is stamped on the right side of the steering head. The V.I.N. is also printed on a label on the left frame tube above the front engine cylinder. An abbreviated V.I.N. is stamped on the left side crankcase below the rear cylinder head, for VRSC models only.

Always give the full 17-digit V.I.N. when ordering parts or making any inquiry about your motorcycle.

1
 2
 3
 4
 5
 6
 7
 8
 9
 10

1 HD 1 BW 5 1 3 B B 111000

Figure 1. Typical Harley-Davidson VIN: 2011 Softail Models

Table 1. Harley-Davidson VIN Breakdown: 2011 Softail Models

POSITION	DESCRIPTION	POSSIBLE VALUES	
1	Market designation	1=Originally manufactured for sale within the United States 5=Originally manufactured for sale outside of the United States	
2	Manufacturer/vehicle type	HD=Harley-Davidson motorcycle	
3	Motorcycle type	1=Heavyweight motorcycle (901 cm ³ and larger)	
4	Model	See VIN model table	
5	Engine type	5=Twin Cam 96B™, 1584 cm ³ air-cooled, fuel-injected, balanced	
6	Introduction date/calibration	Normal Introduction 1=Domestic 3=California A=Canada C=HDI E=Japan G=Australia J=Brazil L=Asia Pacific N=India	Mid-year or Special Introduction 2, 4=Domestic 5, 6=California B=Canada D=HDI F=Japan H=Australia K=Brazil M=Asia Pacific P=India
7	VIN check digit	Can be 0-9 or X	
8	Model year	B=2011	
9	Assembly plant	B=York, PA U.S.A.	
10	Sequential number	Varies	

Table 2. VIN Model Codes: 2011 Softail Models

CODE	MODEL	CODE	MODEL
BV	FXST Softail® Standard (HDI, JPN, AUS markets)	JH	FLSTC Shrine
BW	FLSTC Heritage Softail® Classic	JK	FXCWC Softail Rocker™ C
BX	FLSTF Fat Boy®	JM	FLSTSB Softail™ Cross Bones™
JD	FLSTN Softail® Deluxe	JN	FLSTFB Softail® Fat Boy® Lo (CAL, CAN, DOM, JPN markets) FLSTFB Softail® Fat Boy® Special (HDI, HDE markets)
JG	FLSTF Shrine	JP	FXS Blackline™

ALPHABETICAL INDEX

PART DESCRIPTION	PAGE	PART DESCRIPTION	PAGE
AIR CLEANER.....	25	FENDERS & SUPPORTS, REAR - FXCWC.....	129
AIR FILTER, ENGINE.....	25	FENDERS & SUPPORTS, REAR - FXS.....	131
ALTERNATOR & REGULATOR.....	27	FLYWHEEL - TWIN CAM 96™.....	13
BATTERY.....	157	FOOTRESTS & FOOTBOARDS.....	101
BATTERY CABLES.....	157	FORK, FRONT - FLSTC, FLSTF, FLSTFB & FLSTN....	81
BELT, CHAINS & SPROCKETS.....	47	FORK, FRONT - FLSTSB.....	85
BELT, REAR 133T & 132T (JAPAN).....	47	FORK, FRONT - FXCWC.....	83
BELT GUARD.....	51	FORK, FRONT - FXS.....	87
BODY CONTROL MODULE (BCM).....	243	FORK, FRONT - FXST.....	79
BRAKE, MASTER CYLINDER, FRONT.....	53	FORK, REAR.....	93
BRAKE, MASTER CYLINDER, REAR.....	59	FORK, REAR & SHOCK ABSORBERS.....	93
BRAKE CALIPER, FRONT - ALL MODELS EXCEPT FLSTSB.....	63	FORK BRACKETS, FRONT - ALL EXCEPT FLSTSB... FLSTSB.....	77
BRAKE CALIPER, FRONT - FLSTSB.....	65	FORK ROCKERS & BRAKE CALIPER MOUNTING - FLSTSB.....	89
BRAKE CALIPER, REAR.....	67	FRAME & JIFFY STAND.....	91
BRAKE CONTROL, FRONT.....	53	FUEL FILTER.....	141
BRAKE CONTROL, REAR.....	59	FUEL INJECTOR.....	23
BRAKE DISC, REAR.....	75	FUEL PUMP - ALL MODELS EXCEPT FXCWC.....	141
BRAKE LINE, FRONT.....	55	FUEL PUMP - FXCWC.....	143
BRAKE LINE & MODULE, REAR, ABS.....	61	FUEL TANK - FLSTC, FLSTF, FLSTN, FLSTSB, FLSTFB & FXST.....	135
BRAKE LINES, FRONT, ABS.....	57	FUEL TANK - FXCWC.....	137
BRAKE LINES, FRONT, NON-ABS.....	55	FUEL TANK - FXS.....	139
BRAKE MODULE, ABS, FRONT.....	57	FUEL TANK TRIM.....	145
BRAKE MODULE, ABS, REAR.....	61	FUSE, 15 AMP.....	187
CAMSHAFTS & CAMSHAFT COVER - TWIN CAM 96™.....	19	FUSE, 15 AMP.....	197
CHAIN, PRIMARY.....	47	FUSE, 15 AMP.....	207
CLUTCH CABLE.....	49	FUSE, 15 AMP.....	217
CLUTCH CONTROL.....	49	FUSE, 15 AMP.....	227
CLUTCH CONTROL HAND LEVER.....	49	FUSE, 15 AMP.....	237
CLUTCH - TWIN CAM 96™.....	43	FUSE, 15 AMP.....	243
COVER, PUSH RODS - TWIN CAM 96™.....	11	FUSE, MAXI 40 AMP.....	187
CRANKCASE & ENGINE OIL FILTER - TWIN CAM 96™.....	15	FUSE, MAXI 40 AMP.....	197
CYLINDER HEADS - TWIN CAM 96™.....	9	FUSE, MAXI 40 AMP.....	207
CYLINDERS, HEADS, VALVES - TWIN CAM 96™.....	9	FUSE, MAXI 40 AMP.....	217
DEBRIS DEFLECTOR.....	51	FUSE, MAXI 40 AMP.....	227
DIPSTICK.....	39	FUSE, MAXI 40 AMP.....	237
ELECTRONIC CONTROL MODULE (ECM) & COIL....	29	FUSE, MAXI 40 AMP.....	243
ELECTRONIC CONTROL UNIT (ECU).....	243	GRIPS, HANDLEBAR.....	105
ENGINE ASSEMBLY - TWIN CAM 96™.....	7	HANDLEBAR.....	103
ENGINE BALANCER - TWIN CAM 96™.....	17	HEADLAMP (1 OF 2).....	109
ENGINE MOUNTS.....	21	HEADLAMP (2 OF 2).....	111
EVAPORATIVE EMISSIONS COMPONENTS.....	251	HORN - FLSTC, FLSTF, FLSTN, FLSTFB, FLSTSB & FXST.....	179
EXHAUST ACTUATOR.....	151	HORN - FXCWC & FXS.....	181
EXHAUST SYSTEM - FLSTC, FXST & FXCWC.....	151	IGNITION COIL.....	29
EXHAUST SYSTEM - FLSTF, FLSTFB, FLSTN, FLSTSB & FXS (1 OF 2).....	153	INDICATOR LAMPS.....	159
EXHAUST SYSTEM - FLSTF, FLSTFB, FLSTN, FLSTSB & FXS (2 OF 2).....	155	INDUCTION MODULE, FUEL.....	23
FENDER, FRONT - ALL MODELS EXCEPT FLSTSB..	117	INNER TUBE, FRONT.....	69
FENDER, FRONT - FLSTSB.....	119	INNER TUBE, REAR.....	73
FENDER, REAR & LICENSE PLATE ASSEMBLY - FXCWC.....	129	INSTRUMENTS - FLSTF, FLSTFB, FLSTN & FXST... INSTRUMENTS - FLSTSB & FLSTC.....	159
FENDER, REAR & LICENSE PLATE ASSEMBLY - FXS.	131	INSTRUMENTS - FXCWC.....	161
FENDERS, FRONT - ALL MODELS EXCEPT FLSTSB..	117	INSTRUMENTS - FXS.....	165
FENDERS, FRONT - FLSTSB.....	119	JET, PISTON COOLING.....	15
FENDERS & SUPPORTS, REAR - FLSTC.....	123	JIFFY STAND.....	91
FENDERS & SUPPORTS, REAR - FLSTF & FLSTFB..	125	LABELS.....	249
FENDERS & SUPPORTS, REAR - FLSTN.....	127	LICENSE PLATE BRACKET - FXCWC.....	129
FENDERS & SUPPORTS, REAR - FLSTSB & FXST..	121		

ALPHABETICAL INDEX

PART DESCRIPTION	PAGE	PART DESCRIPTION	PAGE
LICENSE PLATE BRACKETS - FLSTC, FLSTF, FLSTN, FLSTSB, FLSTFB & FXST.	133	TAIL LAMP - FLSTC, FLSTF, FLSTFB, FLSTSB & FXST.	175
LICENSE PLATE BRACKETS - FXS.	131	TAIL LAMP - FLSTN.	177
LIFTER, HYDRAULIC.	11	TAIL LAMP - FXCWC.	129
MANIFOLD AIR PRESSURE SENSOR.	31	TAIL LAMP - FXS.	131
MIRRORS.	247	THROTTLE CONTROL.	105
MUFFLERS - FLSTC, FXST & FXCWC.	151	TRANSMISSION.	39
MUFFLERS - FLSTF, FLSTFB, FLSTN, FLSTSB & FXS.	153	TRANSMISSION GEARS.	41
OIL FILTER, ENGINE - TWIN CAM 96™.	15	TRANSMISSION HOUSING (1 OF 2).	37
OIL PRESSURE SWITCH.	31	TRANSMISSION HOUSING (2 OF 2).	39
OIL PUMP - TWIN CAM 96™.	19	TURN SIGNALS, FRONT.	115
OIL TANK & LINES - ALL MODELS EXCEPT FXCWC.	147	TURN SIGNALS, FRONT.	167
OIL TANK & LINES - FXCWC.	149	TURN SIGNALS, FRONT.	169
PASSING LAMPS & TURN SIGNALS, FRONT - FLSTC & FLSTN (1 OF 2).	113	TURN SIGNALS, REAR - ALL MODELS EXCEPT FXCWC.	171
PASSING LAMPS & TURN SIGNALS, FRONT - FLSTC & FLSTN (2 OF 2).	115	TURN SIGNALS, REAR - FXCWC.	173
PISTONS & FLYWHEEL ASSEMBLY - TWIN CAM 96™.	13	VALVES - TWIN CAM 96™.	9
PRIMARY COVER.	45	WHEELS, FRONT (1 OF 2).	69
PRIMARY HOUSING.	45	WHEELS, FRONT (2 OF 2).	71
REAR BELT GUARD.	51	WHEELS, REAR (1 OF 2).	73
REGULATOR, VOLTAGE.	27	WHEELS, REAR (2 OF 2).	75
REMOTE CONTROL FOB.	243	WINDSHIELD - FLSTC.	107
ROCKER ARM ASSEMBLY & PUSH RODS - TWIN CAM 96™.	11	WIRING HARNESS, MAIN, ABS - FLSTC, FLSTF, FLSTN, FLSTFB, FLSTSB & FXST (1 OF 5).	213
ROTOR, ENGINE.	27	WIRING HARNESS, MAIN, ABS - FLSTC, FLSTF, FLSTN, FLSTFB, FLSTSB & FXST (2 OF 5).	215
SADDLEBAGS - FLSTC.	245	WIRING HARNESS, MAIN, ABS - FLSTC, FLSTF, FLSTN, FLSTFB, FLSTSB & FXST (3 OF 5).	217
SEATS - FLSTC, FLSTF, FLSTFB & FLSTN.	95	WIRING HARNESS, MAIN, ABS - FLSTC, FLSTF, FLSTN, FLSTFB, FLSTSB & FXST (4 OF 5).	219
SEATS - FLSTSB.	99	WIRING HARNESS, MAIN, ABS - FLSTC, FLSTF, FLSTN, FLSTFB, FLSTSB & FXST (5 OF 5).	221
SEATS - FXCWC, FXS & FXST.	97	WIRING HARNESS, MAIN, ABS - FXCWC (1 OF 5).	223
SENSOR, CRANKSHAFT POSITION.	31	WIRING HARNESS, MAIN, ABS - FXCWC (2 OF 5).	225
SENSOR, ENGINE TEMPERATURE.	31	WIRING HARNESS, MAIN, ABS - FXCWC (3 OF 5).	227
SENSOR, INTAKE AIR TEMPERATURE.	23	WIRING HARNESS, MAIN, ABS - FXCWC (4 OF 5).	229
SENSOR, MANIFOLD AIR PRESSURE.	23	WIRING HARNESS, MAIN, ABS - FXCWC (5 OF 5).	231
SENSOR, SPEED.	39	WIRING HARNESS, MAIN, ABS - FXS (1 OF 5).	233
SENSOR, THROTTLE POSITION.	23	WIRING HARNESS, MAIN, ABS - FXS (2 OF 5).	235
SENSORS & SWITCHES, ENGINE.	31	WIRING HARNESS, MAIN, ABS - FXS (3 OF 5).	237
SHIFTER, GEAR.	35	WIRING HARNESS, MAIN, ABS - FXS (4 OF 5).	239
SHIFTER CAM.	35	WIRING HARNESS, MAIN, ABS - FXS (5 OF 5).	241
SHIFTER FORK.	35	WIRING HARNESS, MAIN, NON-ABS - FLSTC, FLSTF, FLSTN, FLSTFB, FLSTSB & FXST (1 OF 5).	183
SHOCK ABSORBERS, REAR.	93	WIRING HARNESS, MAIN, NON-ABS - FLSTC, FLSTF, FLSTN, FLSTFB, FLSTSB & FXST (2 OF 5).	185
SIREN.	243	WIRING HARNESS, MAIN, NON-ABS - FLSTC, FLSTF, FLSTN, FLSTFB, FLSTSB & FXST (3 OF 5).	187
SISSY BAR.	95	WIRING HARNESS, MAIN, NON-ABS - FLSTC, FLSTF, FLSTN, FLSTFB, FLSTSB & FXST (4 OF 5).	189
SPARK PLUGS.	29	WIRING HARNESS, MAIN, NON-ABS - FLSTC, FLSTF, FLSTN, FLSTFB, FLSTSB & FXST (5 OF 5).	191
SPEEDOMETER - FLSTC & FLSTSB.	163	WIRING HARNESS, MAIN, NON-ABS - FXCWC (1 OF 5).	193
SPEEDOMETER - FLSTF, FLSTFB, FLSTN & FXST.	159	WIRING HARNESS, MAIN, NON-ABS - FXCWC (2 OF 5).	195
SPEEDOMETER - FXCWC.	161	WIRING HARNESS, MAIN, NON-ABS - FXCWC (3 OF 5).	197
SPEEDOMETER - FXS.	165	WIRING HARNESS, MAIN, NON-ABS - FXCWC (4 OF 5).	199
SPROCKET, TRANSMISSION 32T.	47	WIRING HARNESS, MAIN, NON-ABS - FXCWC (5 OF 5).	201
STARTER MOTOR.	33		
STATOR.	27		
SWITCH, NEUTRAL INDICATOR.	243		
SWITCH, OIL PRESSURE.	31		
SWITCH, PASSING LAMPS.	113		
SWITCHES.	243		
SWITCHES, HANDLEBAR AND TURN SIGNALS, LEFT, FRONT.	167		
SWITCHES, HANDLEBAR AND TURN SIGNALS, RIGHT, FRONT.	169		

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$