

# T140




# Bobcat®

## Service Manual

S/N 527111001 & Above

S/N 527211001 & Above

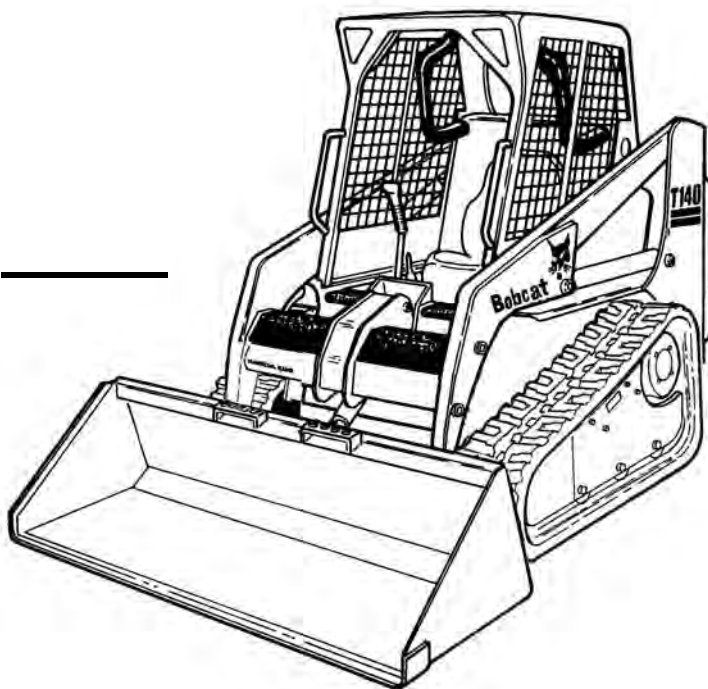

*Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.*

**EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)**



Printed in U.S.A.



## ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS)		HYDRAULIC FLUID RESERVOIR .....	20-01
SELECTRABLE HAND/FOOT CONTROL.....	60-01	HYDRAULIC/HYDROSTATIC FILTER .....	20-01
ALTERNATOR .....	60-01	HYDRAULIC FLUID SPECIFICATIONS.....	SPEC-01
AIR CLEANER SERVICE .....	10-01, 70-01	HYDRAULIC/HYDROSTATIC SYSTEM.....	10-01
		HYDRAULIC SYSTEM INFORMATION .....	20-01
BASIC TROUBLESHOOTING .....	80-01	HYDRAULIC PUMP .....	20-01
BATTERY .....	60-01	HYDROSTATIC MOTOR .....	30-01
BICS™ SYSTEM .....	60-01	HYDROSTATIC PUMP .....	30-01
BOBCAT CONTROLLER .....	60-01	HYDROSTATIC SYSTEM INFORMATION.....	30-01
BOB-TACH.....	10-01, 50-01		
BRAKE .....	40-01	INSTRUMENT PANEL .....	60-01
BUCKET POSITION VALVE.....	20-01		
		LIFT ARM .....	50-01
CHARGE PRESSURE .....	30-01	LIFT ARM BY-PASS CONTROL VALVE.....	20-01
COMPONENTS .....	80-01	LIFT ARM SUPPORT DEVICE.....	10-01
CONTROL HANDLE .....	50-01	LIFTING AND BLOCKING THE LOADER.....	10-01
CONTROL PANEL .....	50-01	LIGHTS.....	60-01
CONTROL PEDALS .....	50-01	LOADER SPECIFICATIONS .....	SPEC-01
CONTROL PEDALS (ACS) .....	50-01	LUBRICATION OF THE BOBCAT LOADER .....	10-01
CONVERSIONS .....	SPEC-01		
COOLING FAN .....	70-01	MAIN RELIEF VALVE .....	20-01
CYLINDER (LIFT).....	20-01	MUFFLER.....	70-01
CYLINDER (POWER BOB-TACH).....	20-01		
CYLINDER (TILT) .....	20-01	OIL COOLER.....	30-01
		OPERATOR CAB .....	10-01, 50-01
DIAGNOSTICS SERVICE CODES.....	60-01	OPERATOR SEAT .....	50-01
DRIVE BELT .....	30-01		
DRIVE COMPONENTS .....	40-01	POWER BOB-TACH.....	10-01, 50-01
		POWER BOB-TACH BLOCK.....	20-01
ELECTRICAL/HYD. CONTROLS REFERENCE ....	60-01	RADIATOR.....	70-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	REAR AUXILIARY DEVERTER .....	20-01
ENGINE .....	70-01	REAR DOOR .....	50-01
ENGINE COMPONENTS AND TESTING .....	70-01	REAR GRILL .....	50-01
ENGINE COOLING SYSTEM.....	10-01	RECONDITIONING THE ENGINE .....	70-01
ENGINE LUBRICATION SYSTEM .....	10-01	REGULAR MAINTENANCE .....	80-01
ENGINE SPECIFICATIONS.....	SPEC-01	REMOTE START .....	10-01
ENGINE SPEED CONTROL .....	70-01		
		SEAT BAR.....	50-01
FAN GEARBOX .....	10-01	SEAT BAR SENSOR.....	60-01
FINAL DRIVE TRANSMISSION (CHAINCASE).....	10-01	SERVICE SCHEDULE.....	10-01
FLYWHEEL AND HOUSING.....	70-01	SPARK ARRESTOR MUFFLER.....	10-01
FLYWHEEL RPM SENSOR.....	60-01	STARTER .....	60-01
FRONT AUXILIARY HYDRAULIC		SYSTEM TROUBLESHOOTING CHART .....	80-01
COUPLER BLOCK .....	20-01		
FUEL SYSTEM .....	10-01	TORQUE SPECIFICATIONS FOR BOLTS .....	SPEC-01
FUEL TANK.....	50-01	TOWING THE LOADER .....	10-01
		TRACTION LOCK .....	60-01
HEATER UNIT .....	80-01	TRANSPORTING THE LOADER .....	10-01
HEATER COIL .....	80-01	TROUBLESHOOTING .....	70-01
HEATER FAN .....	80-01		
HEATER VALVE.....	80-01		
HYDRAULIC CONNECTION SPECS.....	SPEC-01		
HYDRAULIC CONTROL VALVE (ADVANCED			
CONTROL SYSTEM) (ACS).....	20-01		
HYDRAULIC CONTROL VALVE			
(FOOT CONTROL) .....	20-01		



**Bobcat®**

# MAINTENANCE SAFETY



## WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

### CORRECT

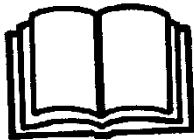


B-10731a



Never service the Bobcat Compact Track Loader without instructions.

### CORRECT

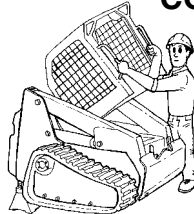


B-15659



Use the correct procedure to lift or lower operator cab.

### CORRECT

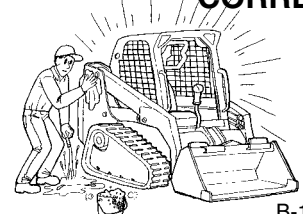 

B-15660



Cleaning and maintenance are required daily.

### WRONG



B-15664



Have good ventilation when welding or grinding painted parts.

 


Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.



Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

### WRONG

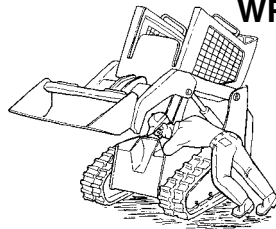


B-15661



Disconnecting or loosening any hydraulic tube line, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

### WRONG

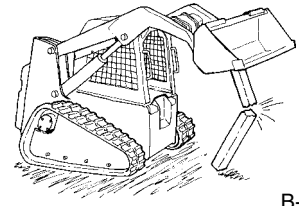 

B-15662




Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.



Never modify equipment or add attachments not approved by Bobcat Company.

### WRONG

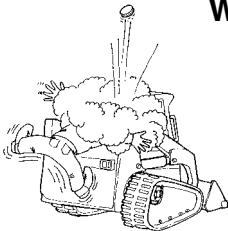 

B-15665



Stop, cool and clean engine of flammable materials before checking fluids.



Never service or adjust loader with the engine running unless instructed to do so in the manual.




Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.



Never fill fuel tank with engine running, while smoking or when near open flame.

### WRONG

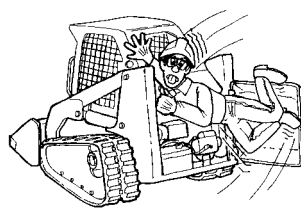 

B-15663



Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.



Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.



Keep rear door closed except for service. Close and latch door before operating the loader.

### WRONG



B-6589



Lead-acid batteries produce flammable and explosive gases.



Keep arcs, sparks, flames and lighted tobacco away from batteries.



Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$