



---


# **Service Manual**

## **T140 Compact Track Loader**


---

**S/N A3L711001 - A3L719999**

**S/N A3L811001 - A3L819999**

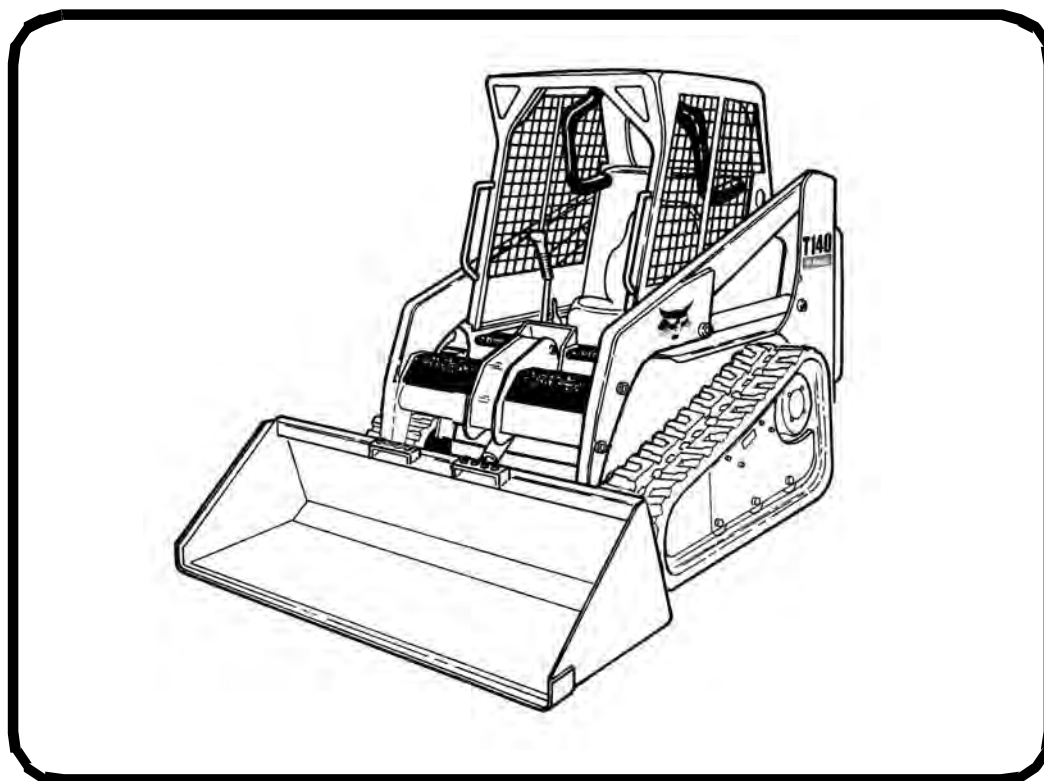

 **EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)**

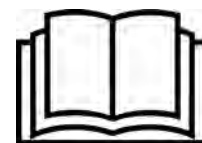



# MAINTENANCE SAFETY



## WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


### CORRECT

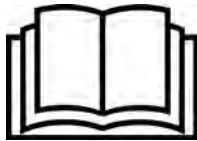

P-90216

⚠ Never service the Bobcat Compact Track Loader without instructions.


### CORRECT

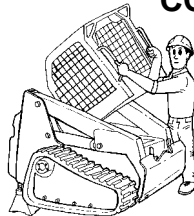

B-15659

⚠ Use the correct procedure to lift or lower operator cab.

### CORRECT

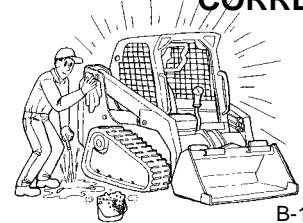 

B-15660

⚠ Cleaning and maintenance are required daily.


### WRONG



 B-15664

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


### WRONG

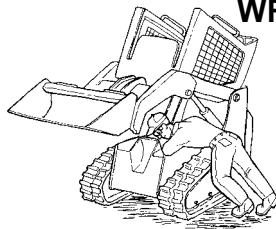

B-15661

- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.


### WRONG

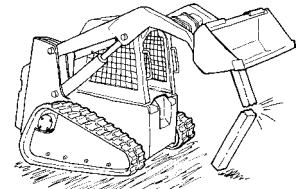

B-15662

- ⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.


### WRONG

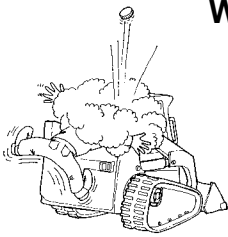 

B-15665

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

### WRONG

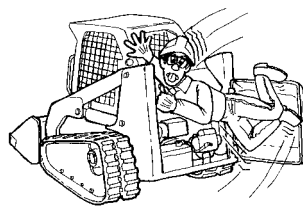 

B-15663

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.

### WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



**Bobcat®**

## ALPHABETICAL INDEX

ALTERNATOR .....	60-01	FUEL TANK .....	50-01
AIR CLEANER .....	70-01	HEATER COIL .....	80-01
AIR CLEANER SERVICE .....	10-01	HEATER FAN .....	80-01
BACK-UP ALARM SYSTEM .....	60-01	HEATING SYSTEM .....	80-01
BATTERY .....	60-01	HEATER UNIT .....	80-01
BOBCAT INTERLOCK CONTROL		HEATER VALVE .....	80-01
SYSTEM (BICS) .....	60-01	HYDRAULIC CONNECTION	
BOBCAT CONTROLLER (ACS) .....	60-01	SPECIFICATIONS .....	SPEC-01
BOBCAT CONTROLLER (MAIN) .....	60-01	HYDRAULIC CONTROL VALVE (ACS) OR (SJC) ..	20-01
BOBCAT CONTROLLER (SJC) (DRIVE) .....	60-01	HYDRAULIC CONTROL VALVE (STANDARD) .....	20-01
BOB-TACH (HAND LEVER) .....	10-01, 50-01	HYDRAULIC FLUID RESERVOIR .....	20-01
BOB-TACH (POWER) .....	10-01, 50-01	HYDRAULIC/HYDROSTATIC FILTERS .....	20-01
BOB-TACH (POWER) BLOCK .....	20-01	HYDRAULIC / HYDROSTATIC FLUID	
BRAKE .....	40-01	SPECIFICATIONS .....	SPEC-01
BUCKET POSITION VALVE .....	20-01	HYDRAULIC/HYDROSTATIC SYSTEM .....	10-01
CAMSHAFT AND TIMING GEARS .....	70-01	HYDRAULIC PUMP (SJC) .....	20-01
CASE DRAIN FILTER .....	30-01	HYDRAULIC PUMP (STANDARD) .....	20-01
CALIBRATION .....	60-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
CHARGE PRESSURE .....	30-01	HYDROSTATIC MOTOR .....	30-01
CONTROL HANDLE / LEVER .....	50-01	HYDROSTATIC PUMP .....	30-01
CONTROL HANDLE / LEVER (ACS) .....	50-01	HYDROSTATIC PUMP (SJC) .....	30-01
CONTROL HANDLE / LEVER (SJC) .....	50-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
CONTROL PANEL .....	50-01	INSTRUMENT PANELS .....	60-01
CONTROL PANEL (SJC) .....	50-01	LIFT ARMS .....	50-01
CONTROL PANEL SETUP .....	60-01	LIFT ARM BYPASS CONTROL VALVE .....	20-01
CONTROL PEDALS AND LINKAGES .....	50-01	LIFT ARM SUPPORT DEVICE .....	10-01
CONTROL PEDALS (ACS) .....	50-01	LIFTING AND BLOCKING THE LOADER .....	10-01
CONTROL SYSTEM (ACS) .....	60-01	LIGHTS .....	60-01
CONVERSIONS .....	SPEC-01	T140 LOADER SPECIFICATIONS .....	SPEC-01
CRANKSHAFT AND PISTONS .....	70-01	LOADER STORAGE AND RETURN	
CYLINDER (BOB-TACH) .....	20-01	TO SERVICE .....	10-01
CYLINDER (LIFT) .....	20-01	LUBRICATING THE LOADER .....	10-01
CYLINDER (TILT) .....	20-01	LUBRICATION SYSTEM .....	70-01
CYLINDER HEAD .....	70-01	MAIN RELIEF VALVE .....	20-01
DIAGNOSTICS SERVICE CODES .....	60-01	MAINTENANCE CLOCK .....	60-01
DRIVE BELT .....	30-01	MUFFLER .....	70-01
ELECTRICAL/HYD. CONTROLS .....	60-01	OIL COOLER .....	20-01
ELECTRICAL/HYDRAULIC CONTROLS		OPERATOR CAB .....	10-01, 50-01
REFERENCE (SJC) .....	60-01	OPERATOR SEAT (SUSPENSION) .....	50-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	PASSWORD SETUP (IF EQUIPPED WITH	
ENGINE COOLING SYSTEM .....	10-01, 70-01	KEYLESS START) .....	60-01
ENGINE INFORMATION .....	70-01	PIVOT PINS .....	10-01
ENGINE LUBRICATION SYSTEM .....	10-01	REAR AUXILIARY DEVERTER .....	20-01
ENGINE SPECIFICATIONS .....	SPEC-01	REAR DOOR .....	50-01
ENGINE SPEED CONTROL .....	70-01	REAR GRILL .....	50-01
ENGINE SPEED CONTROL (SJC) .....	70-01	REGULAR MAINTENANCE .....	80-01
FLYWHEEL AND HOUSING .....	70-01	REMOTE START TOOL KIT-MEL1563 .....	10-01
FLYWHEEL RPM SENSOR .....	60-01	REMOTE START TOOL (SERVICE TOOL)	
FRONT AUXILIARY HYDRAULIC		KIT-6689779 .....	10-01
COUPLER BLOCK .....	20-01		
FUEL SYSTEM .....	10-01, 70-01		

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$