

821C Loader Service Manual

Table of Contents

Description	Section No.	Form No.
General Tab 1		
Section Index - General		7-13060
Standard Torque Specifications	1001	8-71601
Fluids and Lubricants	1002	7-13071
Loctite Product Chart		8-98902
Engines Tab 2		
Section Index - Engines		7-13080
Engine and Radiator Removal and Installation	2000	7-13090
Stall Test	2002	7-13100
For Engine Repair, See the Engine Service Manual		
Fuel System Tab 3		
Section Index - Fuel System		7-13110
For Fuel System Repair, See the Engine Service Manual		
Electrical Tab 4		
Section Index - Electrical		7-13121
Removal and Installation of Starter and Alternator	4001	7-13140
Electrical Specifications, Troubleshooting, and Schematics	4002	7-12221
Batteries	4003	7-49440
Starter and Starter Solenoid	4004	7-14440
Information and Diagnostic Center	4005	7-12251
Alternator	4007	7-12260
Steering Tab 5		
Section Index - Steering		7-13160
Removal and Installation of Steering Components	5001	7-13180
Steering Specifications, Pressure Checks, and Troubleshooting	5002	7-13190
Steering Control Valve	5003	7-12310
Steering Priority Valve	5004	7-12320
Steering Cylinders	5005	7-13210
Center Pivot	5006	7-13220

Reprinted

821C Loader Service Manual

Table of Contents

Description	Section No.	Form No.
Power Train		
	Tab 6	
Section Index - Power Train		7-13232
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	7-12391
Transmission	6003	7-13271
821C Front Axle	6004	6-41420
721C Front Axle - 821C Rear Axle	6004	6-41410
Drive Shaft, Center Bearing, and Universal Joints	6005	7-13290
Wheels and Tires	6006	7-13301
Transmission Control Valve	6007	7-12450
Brakes		
	Tab 7	
Section Index - Brakes		7-13310
Removal and Installation of Brake Components	7001	7-13320
Hydraulic Brake Troubleshooting	7002	7-12490
Brake Accumulators	7004	7-12510
Brake Actuator Valve	7005	7-12520
Brake Accumulator Valve	7007	7-12530
Parking Brake	7008	7-12540
NOTE: For parking brake and brake pedal adjustments, see Section 9001.		
Hydraulics		
	Tab 8	
Section Index - Hydraulics		7-13340
Removal and Installation of Hydraulic Components	8001	7-13360
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	7-13371
Cleaning the Hydraulic System	8003	7-49640
Hydraulic Pump	8004	7-13381
Loader Control Valve	8005	7-13391
Cylinders	8006	7-13400
Coupler Lock Valve	8007	7-12630
Remote Control Valves	8010	7-12640
Combination Valve	8011	7-12650
Unloading Valve	8012	7-59641
Accumulator for Ride Control	8013	7-13471
Solenoid Valve and Accumulator Valve for Ride Control	8014	7-13480

821C Loader Service Manual

Table of Contents

Description	Section No.	Form No.
Mounted Equipment		Tab 9
Section Index - Mounted Equipment		7-13410
Pedals and Levers	9001	7-13420
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002	7-14150
Air Conditioner System Service	9003	7-14160
Removal and Installation of Air Conditioning Components For Systems with HFC-134a Refrigerant	9004	7-14170
Air Conditioning Compressor and Clutch For Systems with HFC-134a Refrigerant	9005	7-14180
Loader	9006	7-13430
ROPS Cab and ROPS Canopy	9007	7-13440
Cab Glass Installation	9010	7-14290
Hydraulic Schematic Foldout and Electrical Schematic Foldout		In Rear Pocket
		7-13451

NOTE: Case Corporation reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

SECTION INDEX - GENERAL

Section Title

Section Number

Standard Torque Specifications..... 1001

Fluids and Lubricants 1002

Loctite Product Chart

CASE CORPORATION
700 State Street
Racine, WI 53404 U.S.A.

CASE CANADA CORPORATION
3350 SOUTH SERVICE ROAD
BURLINGTON, ON L7N 3M6 CANADA

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$