

# CRAWLER EXCAVATOR CX470B SERVICE MANUAL

## TABLE OF CONTENTS

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>1 GENERAL INFORMATION</b>		
Safety, general information and standard torque data.....	1001	7-27691EN
General specifications and special torque setting .....	1002	SM470B1002-1EN
<b>2 ENGINE</b>		
Removal and installation of the engine.....	2000	SM470B2000-0EN
Removal and installation of the fuel cooler, engine inter-cooler, radiator and oil cooler .....	2001	SM470B2001-0EN
Removal and installation of the turbo charger .....	2004	SM470B2004-0EN
Removal and installation of EGR cooler and EGR valve .....	2005	SM470B2005-0EN
Removal and installation of the engine hood.....	2006	SM470B2006-0EN
Engine specifications.....	*	
Disassembly and assembly of the engine .....	*	
<b>3 FUEL SYSTEM</b>		
Removal and installation of the fuel tank.....	3001	SM470B3001-0EN
Removal and installation of the supply pump and common rail .....	3004	SM470B3004-0EN
Removal and installation of the injectors .....	3005	SM470B3005-0EN
Fuel engine system .....	*	
<b>4 ELECTRICAL SYSTEM</b>		
Service connector kit .....	4000	SM350B4000-1EN
Electrical and engine functions and service support .....	4001	SM470B4001-0EN
Removal and installation of the starter motor .....	4004	SM470B4004-0EN
Removal and installation of the alternator .....	4005	SM470B4005-0EN
Electrical equipment & electrical circuit diagrams .....	4020	SM470B4020-0EN
Engine error code (DTC) .....	4021	SM470B4021-0EN
Main body error code (DTC).....	4022	SM470B4022-0EN
Troubleshooting, 6UZ1 engine.....	4023	SM470B4023-0EN
<b>5 UNDERCARRIAGE</b>		
Removal and installation of tracks .....	5001	SM470B5001-0EN
Rollers .....	5003	SM470B5003-0EN
Take-up roller .....	5005	SM470B5005-0EN
<b>6 DRIVE TRAIN</b>		
Removal and installation of the drive motor and final drive transmission.....	6001	SM470B6001-0EN
Disassembly and assembly of the drive motor and final drive transmission.....	6002	SM470B6002-0EN
Removal and installation of the swing motor and swing reduction gear .....	6003	SM470B6003-0EN
Disassembly and assembly of the swing reduction gear .....	6004	SM470B6004-0EN
<b>7 UNDERCARRIAGE HYDRAULICS</b>		

\* Consult the Engine Service Manual

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>8 UPPERSTRUCTURE HYDRAULICS</b>		
Specifications, troubleshooting, checks and hydraulic pressure settings.....	8001	SM470B8001-0EN
Removal and installation of the hydraulic reservoir .....	8002	SM470B8002-0EN
Removal and installation of the main hydraulic pump.....	8003	SM470B8003-0EN
Removal and installation of the main hydraulic control valve.....	8004	SM470B8004-0EN
Removal and installation of the attachment cylinders.....	8005	SM470B8005-0EN
Removal and installation of the hydraulic swivel.....	8006	SM470B8006-0EN
Removal and installation of the pilot blocs.....	8007	SM470B8007-0EN
Disassembly and assembly of the main hydraulic pump .....	8010	SM470B8010-0EN
Disassembly and assembly of the main hydraulic control valve .....	8011	SM470B8011-0EN
Disassembly and assembly of the attachment cylinders .....	8012	SM130B8012-0EN
Disassembly and assembly of the hand control levers .....	8013	SM130B8013-0EN
Disassembly and assembly of the foot control levers .....	8014	SM350B8014-0EN
Disassembly and assembly of the cushion valve.....	8016	SM130B8016-0EN
Removal and installation of the safety valve.....	8017	SM470B8017-0EN
Disassembly and assembly of the swing motor .....	8019	SM470B8019-0EN
Hydraulic functions .....	8020	SM470B8020-0EN
Hydraulic component functions.....	8030	SM470B8030-0EN
<b>9 UPPERSTRUCTURE</b>		
Removal and installation of the counterweight .....	9002	SM470B9004-0EN
Removal and installation of the boom, dipper and bucket .....	9003	SM470B9004-0EN
Removal and installation of the seat.....	9004	SM130B9004-0EN
Removal and installation of the cab and cab equipment .....	9005	SM130B9005-0EN
Air conditioner functions and troubleshooting.....	9006	SM210B9006-3EN
Air conditioning unit .....	9007	SM130B9007-0EN
Air conditioning components.....	9009	SM470B9009-0EN
Large size hydraulic schematics .....	Pocket	KTJ11690-E00
Large size electrical schematics .....	Pocket	KTR11120-E02

\* For electrical schematic option, see section 4020

NOTE: CNH France S.A. Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

All data given in this manual is subject to production variations. Dimensions and weights are provided with approximate values and the machine fitting shown in the illustrations may not correspond with standard models. For precise information on specific machine models and versions, please contact your CASE dealer.

Reproduction or translation, even partial, is prohibited without written authorization from CNH France SA Company.

# Section 1001

**SAFETY, GENERAL INFORMATION  
AND TORQUE SPECIFICATIONS**

## TABLE OF CONTENTS

GENERAL INFORMATION .....	3
SAFETY.....	4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS.....	6



**WARNING :** *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

## GENERAL INFORMATION

### Cleanning

Clean all metal parts except bearings, in a suitable cleaning solvent or by steam cleaning. Do not use caustic soda for steam cleaning. After cleaning, dry and put oil on all parts. Clean oil passages with compressed air. Clean bearings in a suitable cleaning solvent, dry the bearings completely and put oil on the bearings.

### Inspection

Check all parts when the parts are disassembled. Replace all parts that have wear or damage. Small scoring or grooves can be removed with a hone or crocus cloth. Complete a visual inspection for indications of wear, pitting and the replacement of parts necessary to prevent early failures.

### Bearings

Check bearings for easy action. If bearings have a loose fit or rough action replace the bearing. Wash bearings with a suitable cleaning solvent and permit to air dry. **DO NOT DRY BEARINGS WITH COMPRESSED AIR.**

### Needle bearings

Before you press needle bearings in a bore always remove any metal protrusions in the bore or edge of the bore. Before you press bearings into position put petroleum jelly on the inside and outside diameter of the bearings.

### Gears

Check all gears for wear and damage. Replace gears that have wear or damage.

### Oil seals, O-rings and gaskets

Always install new oil seals, O-rings and gaskets. Put petroleum jelly on seals and O-rings.

### Shafts

Check all shafts that have wear or damage. Check the bearing and oil seal surfaces of the shafts for damage.

### Service parts

Always install genuine Case service parts. When ordering refer to the Parts Catalog for the correct part number of the genuine Case replacement items. Failures due to the use of other than genuine Case replacement parts are not covered by warranty.

### Lubrication

Only use the oils and lubricants specified in the Operator's or Service Manuals. Failures due to the use of non-specified oils and lubricants are not covered by warranty.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$