

DV23
DV26
Tier 4A (interim)
Vibratory Roller

DV23CC
DV26CC
Tier 4A (interim)
Combination Roller

SERVICE MANUAL

Part number 48142067

1st edition English

September 2017

Replaces part number 47538930

CASE
CONSTRUCTION



SERVICE MANUAL

**DV23CC
DV23
DV26CC
DV26**

Contents

INTRODUCTION

| | |
|--|------|
| Maintenance | 00 |
| [00.150] Start-up..... | 00.1 |
| Engine..... | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.400] Engine cooling system | 10.2 |
| Hydrostatic drive..... | 29 |
| [29.218] Pump and motor components..... | 29.1 |
| Brakes and controls | 33 |
| [33.110] Parking brake or parking lock | 33.1 |
| [33.202] Hydraulic service brakes | 33.2 |
| Hydraulic systems..... | 35 |
| [35.104] Fixed displacement pump..... | 35.1 |
| [35.000] Hydraulic systems..... | 35.2 |
| [35.102] Pump control valves..... | 35.3 |
| [35.353] Hydraulic travel system | 35.4 |
| [35.300] Reservoir, cooler, and filters..... | 35.5 |
| [35.995] Compaction/vibration hydraulic system | 35.6 |
| Frames and ballasting | 39 |
| [39.100] Frame | 39.1 |
| Steering..... | 41 |
| [41.101] Steering control | 41.1 |
| Wheels | 44 |
| [44.160] Compaction drums | 44.1 |
| Electrical systems | 55 |
| [55.031] Parking brake electrical system | 55.1 |

| | |
|--|-----------|
| [55.000] Electrical system | 55.2 |
| [55.019] Hydrostatic drive control system | 55.3 |
| [55.100] Harnesses and connectors..... | 55.4 |
| [55.408] Warning indicators, alarms, and instruments | 55.5 |
| [55.512] Cab controls..... | 55.6 |
| [55.640] Electronic modules | 55.7 |
| [55.404] External lighting | 55.8 |
| [55.DTC] FAULT CODES..... | 55.9 |
| Tools | 89 |
| [89.165] Water kit..... | 89.1 |
| Platform, cab, bodywork, and decals | 90 |
| [90.100] Engine hood and panels | 90.1 |
| [90.110] Operator platform less cab | 90.2 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$