

463



Bobcat®

Service Manual

S/N 52001100 & Above
S/N 519911001 & Above



Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**



Printed in U.S.A.

MAINTENANCE SAFETY



WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

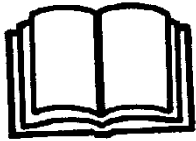

B-10731a

⚠ Never service the Bobcat Skid-Steer Loader without instructions.

 
CORRECT

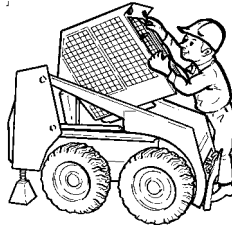

B-12365

⚠ Use the correct procedure to lift or lower operator cab.

 
CORRECT

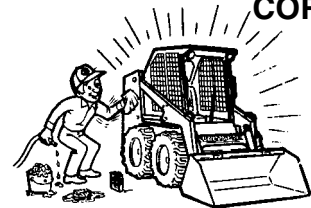

B-7469

⚠ Cleaning and maintenance are required daily.

 
WRONG

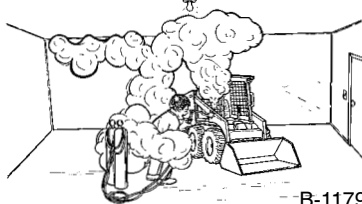

B-11799

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

 
WRONG

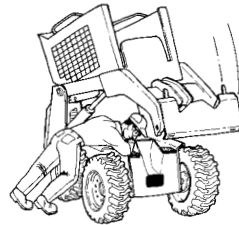

B-15231

⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 
WRONG

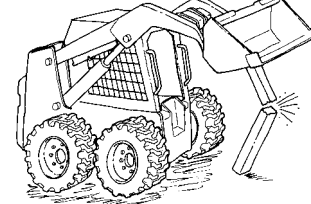

B-15280

- ⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

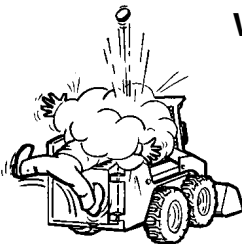

B-6590

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

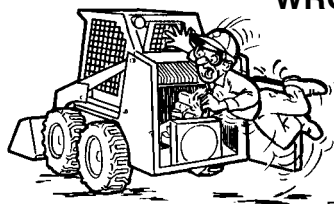

B-6580

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	70-01	LIFTING AND BLOCKING THE LOADER.....	10-01
AIR CLEANER SERVICE	10-01	LIGHTS.....	60-01
ALTERNATOR	60-01	LUBRICATING THE LOADER.....	10-01
AUXILIARY CONTROL LOCKBOLT	10-01		
		MAIN RELIEF VALVE	20-01
BATTERY	60-01	MUFFLER.....	70-01
BICS™ (With Press To Operate Button)	60-01		
BICS™ BLOCK VALVE	20-01	OPERATOR CAB	10-01, 50-01
BICS™ SYSTEM CONTROLLER.....	60-01	OPERATOR SEAT	20-01
BOB-TACH.....	10-01, 50-01		
		PARKING BRAKE.....	40-01
CHARGE PRESSURE	30-01	PIVOT PINS	10-01
CHAINCASE	40-01		
CONTROLS	20-01	RADIATOR	70-01
CONTROL PANEL	30-01	REAR DOOR.....	50-01
CONVERSIONS	SPEC-01	REAR WINDOW	50-01
CYLINDER	20-01	REMOTE START SWITCH	10-01
		RECONDITIONING THE ENGINE.....	70-01
DRIVE BELT	30-01		
DRIVE COMPONENTS	40-01	SEAT BAR	50-01
		SEAT BAR RESTRAINT SYSSTEM.....	40-01
ELECTRICAL SYSTEM INFORMATION	60-01	SEAT BAR SENSOR	60-01
ENGINE	70-01	SERVICE SCHEDULE	10-01
ENGINE COMPONENTS AND TESTING	70-01	SPARK ARRESTOR MUFFLER.....	10-01
ENGINE COOLING SYSTEM.....	10-01	STARTER	60-01
ENGINE LUBRICATION SYSTEM.....	10-01	STEERING	30-01
ENGINE MOUNTING BRACKET	70-01		
ENGINE SPECIFICATIONS.....	SPEC-01	TIRE MAINTENANCE	10-01
ENGINE SPEED CONTROL	70-01	TOWING THE LOADER	10-01
		THERMOSTAT	70-01
FAN	70-01	TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
FINAL DRIVE TRANSMISSION (CHAINCASE).....	10-01	TRACTION LOCK	60-01
FLYWHEEL	70-01	TRANSPORTING THE LOADER	10-01
FUEL LIFT PUMP	70-01	TROUBLESHOOTING	70-01
FUEL SYSTEM	10-01		
FUEL TANK.....	50-01		
GLOWPLUGS	70-01		
HYDRAULIC CONNECTION SPEC	SPEC-01		
HYDRAULIC CONTROL VALVE	20-01		
HYDRAULIC FILTER	20-01		
HYDRAULIC/HYDROSTATIC			
FLUID SPECIFICATIONS	SPEC-01		
HYDRAULIC/HYDROSTATIC SYSTEM	10-01		
HYDRAULIC PUMP	20-01		
HYDRAULIC RESERVOIR	20-01		
HYDRAULIC SYSTEM INFORMATION.....	20-01		
HYDROSTATIC MOTOR	30-01		
HYDROSTATIC PUMP	30-01		
HYDROSTATIC SYSTEM INFORMATION	30-01		
INSTRUMENT PANEL	60-01		
LIFT ARM SUPPORT DEVICE.....	10-01		
LIFT ARMS	50-01		

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$