




---

# **Service Manual**

## **A300 All-Wheel Steer**

---

**S/N 539911001 & Above**  
**S/N 540011001 & Above**

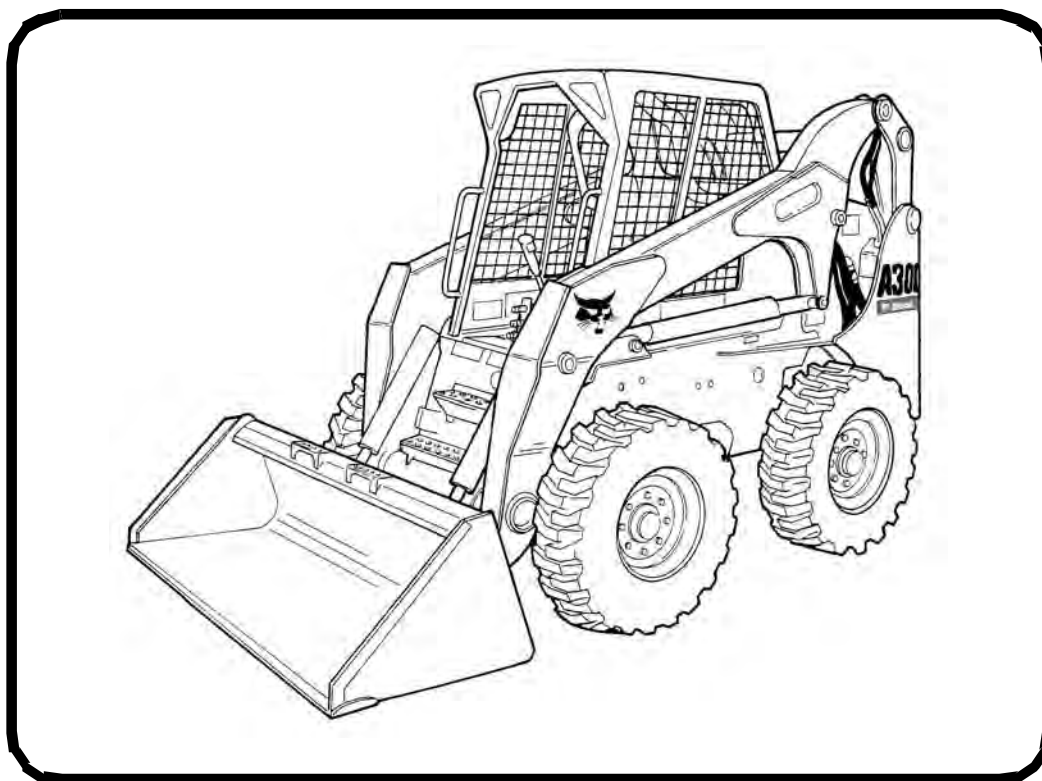

**EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)**





# MAINTENANCE SAFETY



## WARNING


Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


### CORRECT

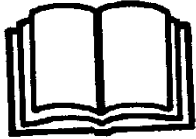

B-10731a

Never service the Bobcat Skid-Steer Loader without instructions.


### CORRECT

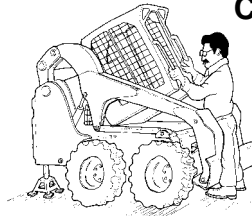 

B-16261

Use the correct procedure to lift or lower operator cab.


### CORRECT

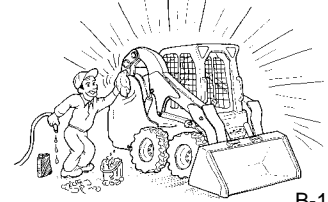 

B-16264

Cleaning and maintenance are required daily.


### WRONG

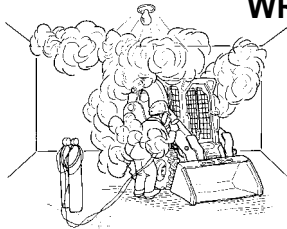 

B-16272

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


### WRONG

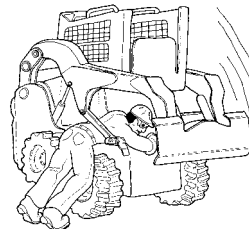 

B-16260

Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

### WRONG

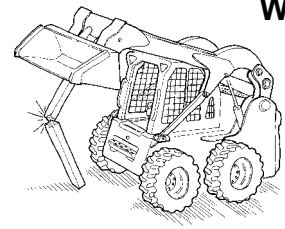

B-16263

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

### WRONG



B-16271

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

### WRONG



B-16270

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

### WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW14-0805



**Bobcat®**

## ALPHABETICAL INDEX

ACCESS PANEL (INSIDE) .....	50-01	FRONT AUXILIARY HYDRUALIC COUPLER	
AIR CLEANER .....	70-01	BLOCK .....	20-01
AIR CLEANER SERVICE .....	10-01	FUEL SYSTEM.....	10-01, 70-01
AIR CONDITIONING SYSTEM FLOW .....	80-01	FUEL TANK .....	50-01
ALTERNATOR .....	60-01		
		HEATER COIL.....	80-01
BATTERY.....	60-01	HEATER VALVE .....	80-01
BLOWER FAN .....	80-01	HIGH FLOW VALVE .....	20-01
BOBCAT CONTROLLER (AWS).....	60-01	HUB .....	40-01
BOBCAT CONTROLLER (AWS) (SJC)		HYDRAULIC CONNECTION SPECS .....	SPEC-01
(DRIVE PLUS) .....	60-01	HYDRAULIC CONTROL VALVE .....	20-01
BOBCAT CONTROLLER (MAIN).....	60-01	HYDRAULIC FLUID RESERVOIR .....	20-01
BOBCAT INTERLOCK CONTROL		HYDRAULIC/HYDROSTATIC FILTERS .....	20-01
SYSTEM (BICS) .....	60-01	HYDRAULIC/HYDROSTATIC FLUID	
BOB-TACH (HAND LEVER) .....	10-01, 50-01	SPECIFICATIONS.....	SPEC-01
BOB-TACH (POWER - OPTION) .....	10-01, 50-01	HYDRAULIC/HYDROSTATIC SYSTEM.....	10-01
BOB-TACH (POWER) BLOCK.....	20-01	HYDRAULIC PUMP .....	20-01
BRAKE .....	40-01	HYDRAULIC PUMP (HI FLOW) .....	20-01
BUCKET POSITION VALVE .....	20-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
		HYDROSTATIC MOTOR .....	30-01
CAB DOOR.....	50-01	HYDROSTATIC MOTOR (TWO-SPEED) .....	30-01
CALIBRATION .....	60-01	HYDROSTATIC MOTOR CARRIER .....	30-01
CAMSHAFT AND TIMING GEARS.....	70-01	HYDROSTATIC PUMP .....	30-01
CASE DRAIN FILTER .....	30-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
CHAINCASE .....	40-01		
CHARGE PRESSURE .....	30-01	INSTRUMENT PANEL.....	60-01
COMPRESSOR .....	80-01		
CONDENSER .....	80-01	JOYSTICK CONTROL .....	50-01
CONTROL PANEL .....	50-01		
CONTROL PANEL SETUP .....	60-01	LIFT ARMS.....	50-01
CONVERSIONS .....	SPEC-01	LIFT ARM BY-PASS CONTROL VALVE .....	20-01
CRANKSHAFT AND PISTONS.....	70-01	LIFT ARM SUPPORT DEVICE .....	10-01
CYLINDER HEAD.....	70-01	LIFTING AND BLOCKING THE LOADER.....	10-01
CYLINDER (BOB-TACH) .....	20-01	LIGHTS .....	60-01
CYLINDER (LIFT).....	20-01	A300 LOADER SPECIFICATIONS.....	SPEC-01
CYLINDER (STEERING) .....	20-01	LOADER STORAGE & RETURN TO SERVICE .....	10-01
CYLINDER (TILT) .....	20-01	LUBRICATION SYSTEM.....	70-01
		LUBRICATING THE LOADER.....	10-01
DIAGNOSTICS SERVICE CODES .....	60-01		
DRIVE BELT .....	30-01	MAIN RELIEF VALVE .....	20-01
DRIVE COMPONENTS .....	40-01	MUFFLER.....	70-01
ELECTRICAL / HYDRAULIC CONTROLS		OIL COOLER.....	20-01
REFERENCE .....	60-01	OPERATOR CAB .....	10-01, 50-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	OPERATOR SEAT (SUSPENSION).....	50-01
ENGINE COOLING SYSTEM.....	10-01, 70-01		
ENGINE INFORMATION .....	70-01	PASSWORD SETUP (IF EQUIPPED WITH KEYLESS	
ENGINE LUBRICATION SYSTEM.....	10-01	START).....	60-01
ENGINE SPEED CONTROL .....	70-01	PIVOT PINS .....	10-01
EVAPORATOR.....	80-01		
EVAPORATOR/HEATER UNIT .....	80-01	REAR AUXILIARY DIVERTER VALVE.....	20-01
EXPANSION VALVE .....	80-01	REAR DOOR .....	50-01
		REAR GRILL .....	50-01
FINAL DRIVE TRANSMISSION (CHAINCASE) ..	10-01	RECEIVER/DRIER .....	80-01
FLYWHEEL AND HOUSING .....	70-01	REGULAR MAINTENANCE .....	80-01
FLYWHEEL RPM SENSOR .....	60-01	REMOTE START TOOL .....	10-01
		REMOTE START TOOL (SERVICE TOOL) .....	10-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$