 


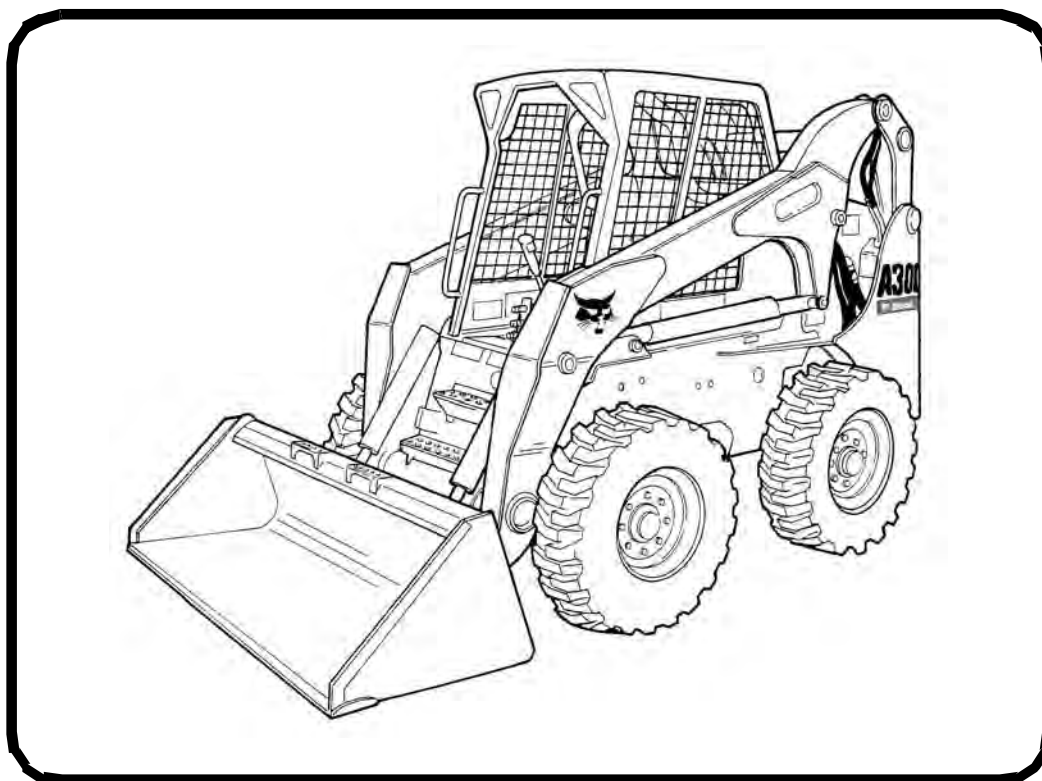

Service Manual

A300 All Wheel Steer

S/N A5GW11001 - A5GW19999
S/N A5GY11001 - A5GY19999



**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**



MAINTENANCE SAFETY



WARNING


Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

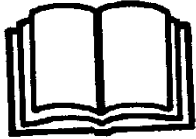

B-10731a

Never service the Bobcat Skid-Steer Loader without instructions.

 
CORRECT

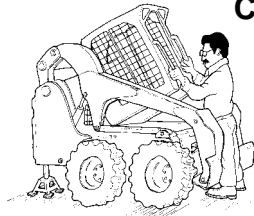

B-16261

Use the correct procedure to lift or lower operator cab.

 
CORRECT

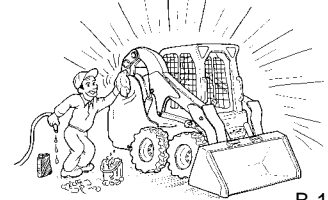

B-16264

Cleaning and maintenance are required daily.

 
WRONG

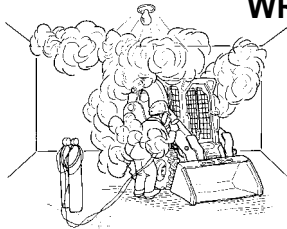

B-16272

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

 
WRONG

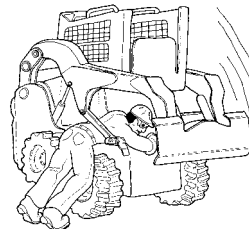

B-16260

Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 
WRONG

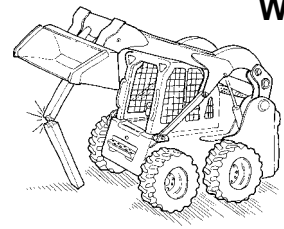

B-16263

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

 WRONG

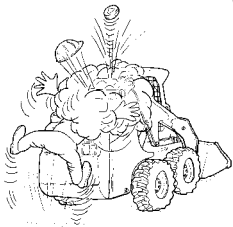

B-16271

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

WRONG



B-16270

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW14-0805



Bobcat®

ALPHABETICAL INDEX

ACCESS PANEL (INSIDE)	50-01	FINAL DRIVE TRANSMISSION (CHAINCASE) ..	10-01
AIR CLEANER	70-01	FLYWHEEL AND HOUSING	70-01
AIR CLEANER SERVICE	10-01	FLYWHEEL RPM SENSOR	60-01
AIR CONDITIONING SYSTEM FLOW	80-01	FRONT AUXILIARY HYDRUALIC COUPLER	
ALTERNATOR	60-01	BLOCK	20-01
BATTERY	60-01	FUEL SYSTEM.....	10-01, 70-01
BLOWER FAN	80-01	FUEL TANK	50-01
BOBCAT CONTROLLER (AWS).....	60-01	HEATER COIL	80-01
BOBCAT CONTROLLER (AWS) (SJC)		HEATER VALVE	80-01
(DRIVE PLUS)	60-01	HIGH FLOW VALVE	20-01
BOBCAT CONTROLLER (MAIN).....	60-01	HUB	40-01
BOBCAT INTERLOCK CONTROL		HYDRAULIC CONNECTION SPECS	SPEC-01
SYSTEM (BICS)	60-01	HYDRAULIC CONTROL VALVE	20-01
BOB-TACH (HAND LEVER)	10-01, 50-01	HYDRAULIC FLUID RESERVOIR	20-01
BOB-TACH (POWER - OPTION)	10-01, 50-01	HYDRAULIC/HYDROSTATIC FILTERS	20-01
BOB-TACH (POWER) BLOCK.....	20-01	HYDRAULIC/HYDROSTATIC FLUID	
BRAKE	40-01	SPECIFICATIONS	SPEC-01
BUCKET POSITION VALVE	20-01	HYDRAULIC/HYDROSTATIC SYSTEM.....	10-01
CAB DOOR	50-01	HYDRAULIC PUMP	20-01
CALIBRATION	60-01	HYDRAULIC PUMP (HI FLOW)	20-01
CAMSHAFT AND TIMING GEARS.....	70-01	HYDRAULIC SYSTEM INFORMATION	20-01
CASE DRAIN FILTER	30-01	HYDROSTATIC MOTOR	30-01
CHAINCASE	40-01	HYDROSTATIC MOTOR (TWO-SPEED)	30-01
CHARGE PRESSURE	30-01	HYDROSTATIC MOTOR CARRIER	30-01
COMPRESSOR	80-01	HYDROSTATIC PUMP	30-01
CONDENSER	80-01	HYDROSTATIC SYSTEM INFORMATION	30-01
CONTROL PANEL	50-01	INSTRUMENT PANEL.....	60-01
CONTROL PANEL SETUP	60-01	JOYSTICK CONTROL	50-01
CONVERSIONS	SPEC-01	LIFT ARMS	50-01
CRANKSHAFT AND PISTONS.....	70-01	LIFT ARM BY-PASS CONTROL VALVE	20-01
CYLINDER HEAD	70-01	LIFT ARM SUPPORT DEVICE	10-01
CYLINDER (BOB-TACH)	20-01	LIFTING AND BLOCKING THE LOADER.....	10-01
CYLINDER (LIFT)	20-01	LIGHTS	60-01
CYLINDER (STEERING)	20-01	A300 LOADER SPECIFICATIONS.....	SPEC-01
CYLINDER (TILT)	20-01	LOADER STORAGE & RETURN TO SERVICE	10-01
DIAGNOSTICS SERVICE CODES	60-01	LUBRICATION SYSTEM	70-01
DRIVE BELT	30-01	LUBRICATING THE LOADER	10-01
DRIVE COMPONENTS	40-01	MAIN RELIEF VALVE	20-01
ELECTRICAL / HYDRAULIC CONTROLS		MUFFLER.....	70-01
REFERENCE	60-01	OIL COOLER.....	20-01
ELECTRICAL SYSTEM INFORMATION	60-01	OPERATOR CAB	10-01, 50-01
ENGINE COOLING SYSTEM.....	10-01, 70-01	OPERATOR SEAT (SUSPENSION).....	50-01
ENGINE INFORMATION	70-01	PASSWORD SETUP (IF EQUIPPED WITH KEYLESS	
ENGINE LUBRICATION SYSTEM.....	10-01	START)	60-01
ENGINE SPEED CONTROL	70-01	PIVOT PINS	10-01
EVAPORATOR.....	80-01		
EVAPORATOR/HEATER UNIT	80-01		
EXHAUST GAS RECIRCULATION (EGR)			
SYSTEM	80-01		
EXPANSION VALVE	80-01		

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$