 




Service Manual

S130 Skid-Steer Loader

S/N A8KA 60001 & Above

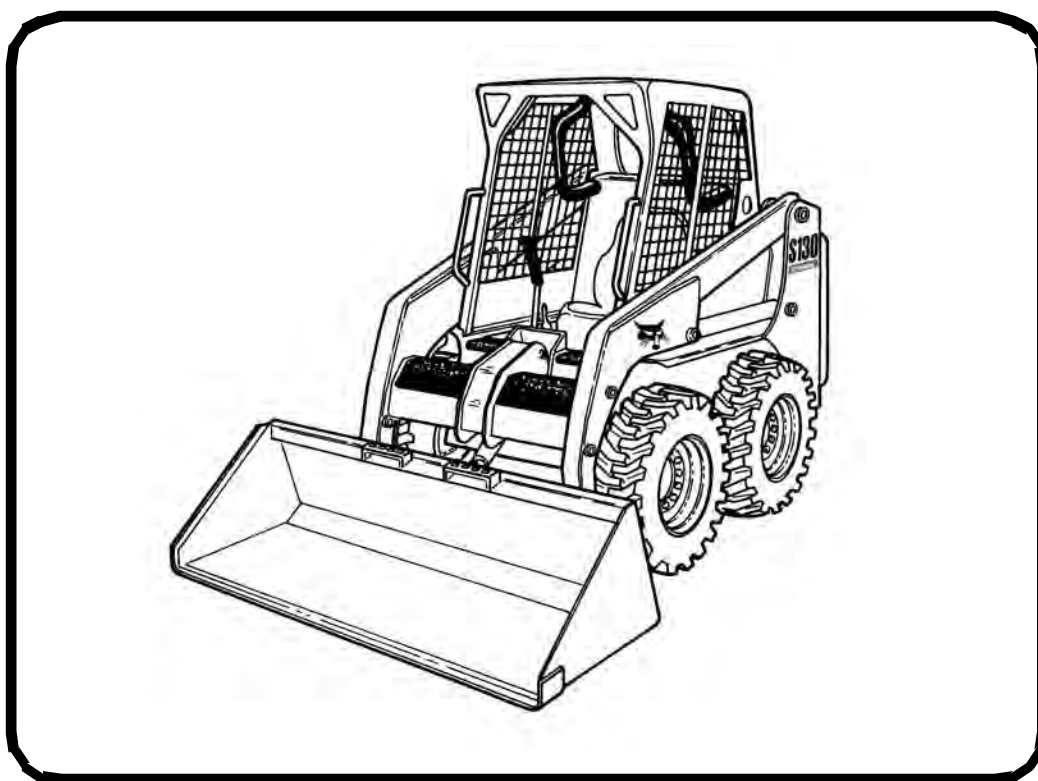

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS)



MAINTENANCE SAFETY



WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

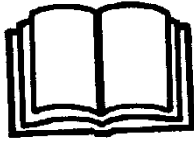

B-10731a

Never service the Bobcat Skid-Steer Loader without instructions.

 
CORRECT

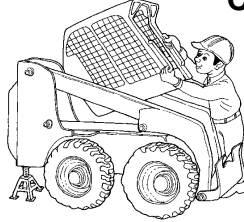

B-15590

Use the correct procedure to lift or lower operator cab.

 
CORRECT

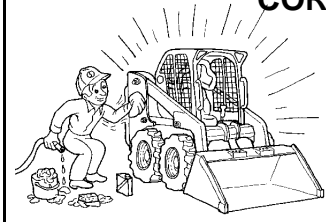

B-15591

Cleaning and maintenance are required daily.

 
WRONG

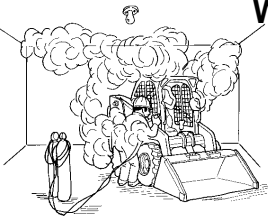

B-15592

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

 
WRONG

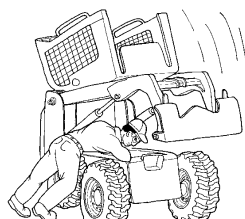

B-15593

Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 
WRONG

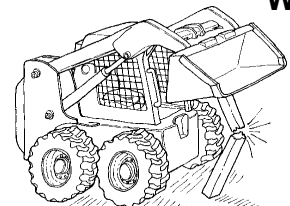

B-15599

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

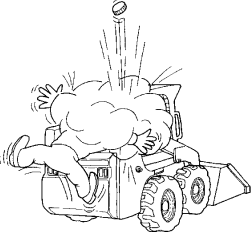

B-15600

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

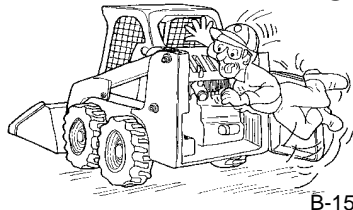

B-15601

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW08-0805



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	70-40	FINAL DRIVE TRANSMISSTION (CHAINCASE) .	10-130
AIR CLEANER SERVICE	10-80	FLYWHEEL AND HOUSING	70-110
ALTERNATOR	60-30	FLYWHEEL RPM SENSOR	60-170
		FRONT AUXILIARY HYDRAULIC	
BACK-UP ALARM SYSTEM	60-210	COUPLER BLOCK	20-140
BATTERY	60-20	FUEL SYSTEM	10-100, 70-70
BOBCAT CONTROLLER (ACS)	60-71	FUEL TANK	50-80
BOBCAT CONTROLLERS (GATEWAY AND			
AUXILIARY)	60-70	HEATER COIL	80-50
BOBCAT CONTROLLER (SJC) (DRIVE)	60-72	HEATER FAN	80-60
BOBCAT INTERLOCK CONTROL		HEATER SYSTEM	80-10
SYSTEM (BICS)	60-100	HEATER UNIT	80-40
BOB-TACH (HAND LEVER)	10-140, 50-40	HEATER VALVE	80-70
BOB-TACH (POWER)	10-141	HYDRAULIC CONNECTION SPECS	SPEC-30
BOB-TACH (POWER-OPTION)	50-41	HYDRAULIC CONTROL VALVE (ACS) OR (SJC) ..	20-41
BOB-TACH (POWER) BLOCK	20-130	HYDRAULIC CONTROL VALVE (STANDARD)	20-40
BRAKE	40-10	HYDRAULIC/HYDROSTATIC FILTERS	20-80
BUCKET POSITION VALVE	20-110	HYDRAULIC FLUID RESERVOIR	20-90
		HYDRAULIC/HYDROSTATIC	
CALIBRATION	60-160	FLUID SPECIFICATIONS	SPEC-40
CAMSHAFT AND TIMING GEARS	70-100	HYDRAULIC/HYDROSTATIC SYSTEM	10-120
CASE DRAIN FILTER	30-70	HYDRAULIC PUMP (STANDARD)	20-60
CHAINCASE	40-30	HYDRAULIC PUMP (SJC)	20-70
CHARGE PRESSURE	30-40	HYDRAULIC SYSTEM INFORMATION	20-10
CONTROL HANDLE/LEVER	50-110	HYDROSTATIC MOTOR	30-20
CONTROL HANDLE/LEVER (ACS)	50-111	HYDROSTATIC MOTOR CARRIER	30-30
CONTROL HANDLE/LEVER (SJC)	50-112	HYDROSTATIC MOTOR CARRIER (SJC)	30-31
CONTROL PANEL	50-100	HYDROSTATIC PUMP	30-50
CONTROL PANEL (SJC)	50-101	HYDROSTATIC PUMP (SJC)	30-51
CONTROL PANEL SETUP	60-180	HYDROSTATIC SYSTEM INFORMATION	30-10
CONTROL PEDALS AND LINKAGES	50-90		
CONTROL PEDALS (ACS)	50-91	INSTRUMENT PANELS	60-50
CONTROL SYSTEM (ACS)	60-130		
CONVERSIONS	SPEC-50	LIFT ARMS	50-50
CRANKSHAFT AND PISTONS	70-90	LIFT ARM BYPASS CONTROL VALVE	20-50
CYLINDER (BOB-TACH)	20-22	LIFT ARM SUPPORT DEVICE	10-20
CYLINDER (LIFT)	20-20	LIFTING AND BLOCKING THE LOADER	10-10
CYLINDER (TILT)	20-21	LIGHTS	60-60
CYLINDER HEAD	70-80	LOADER SPECIFICATIONS	SPEC-10
		LOADER STORAGE & RETURN TO SERVICE ...	10-190
DIAGNOSTICS SERVICE CODES	60-90	LUBRICATING THE LOADER	10-150
DRIVE BELT	30-60	LUBRICATION SYSTEM	70-60
DRIVE COMPONENTS	40-20		
		MAIN RELIEF VALVE	20-30
ELECTRICAL/HYD. CONTROLS	60-140	MAINTENANCE CLOCK	60-200
ELECTRICAL/HYDRAULIC CONTROLS		MUFFLER	70-30
REFERENCE (SJC)	60-141		
ELECTRICAL SYSTEM INFORMATION	60-10	OIL COOLER	20-100
ENGINE COOLING SYSTEM	10-90, 70-50	OPERATOR CAB	10-30, 50-20
ENGINE LUBRICATION SYSTEM	10-110	OPERATOR SEAT	50-30
ENGINE INFORMATION	70-10	OPERATOR SEAT (SUSPENSION)	50-31
ENGINE SPEED CONTROL	70-20		
ENGINE SPEED CONTROL (SJC)	70-21	PASSWORD SETUP	60-190
		PIVOT PINS	10-180

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$