

 


Service Manual

T250 Compact Track Loader

S/N A5GS11001 - A5GS19999

S/N A5GT11001 - A5GT19999

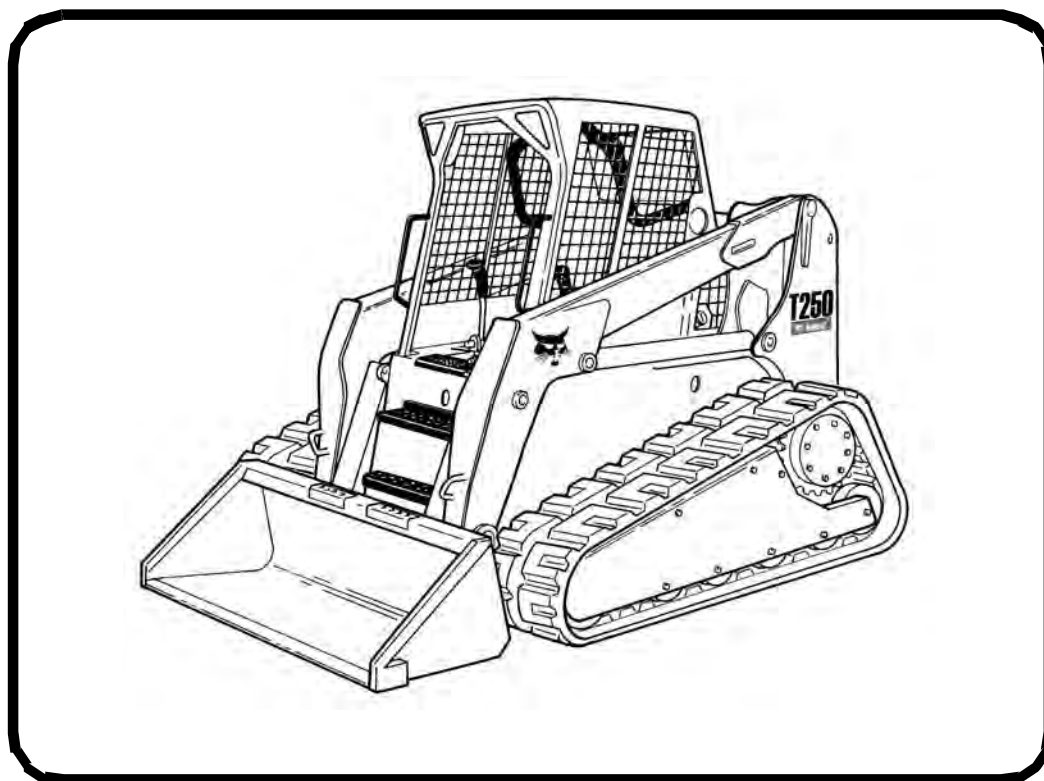

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)



MAINTENANCE SAFETY



WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT

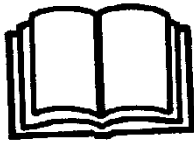


B-10731a



Never service the Bobcat Compact Track Loader without instructions.

 CORRECT

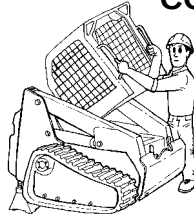


B-15659



Use the correct procedure to lift or lower operator cab.

 CORRECT

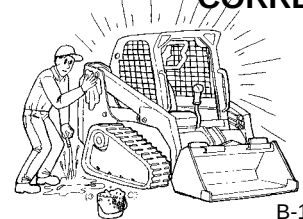

B-15660



Cleaning and maintenance are required daily.

WRONG



B-15664



Have good ventilation when welding or grinding painted parts.

 


Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.



Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

WRONG

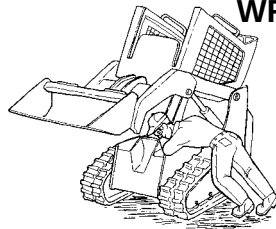


B-15661



Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 WRONG

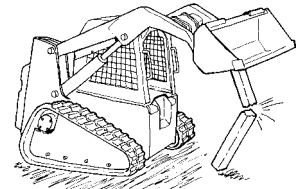

B-15662

 


Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.



Never modify equipment or add attachments not approved by Bobcat Company.

WRONG

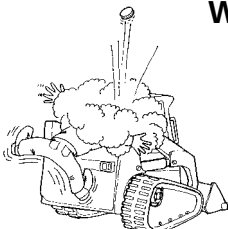

B-15665



Stop, cool and clean engine of flammable materials before checking fluids.



Never service or adjust loader with the engine running unless instructed to do so in the manual.

 


Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.



Never fill fuel tank with engine running, while smoking or when near open flame.

WRONG

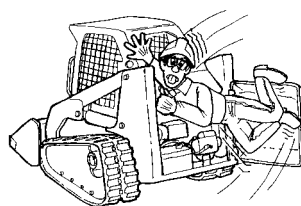

B-15663



Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.



Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.



Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589



Lead-acid batteries produce flammable and explosive gases.



Keep arcs, sparks, flames and lighted tobacco away from batteries.



Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

ACCESS PANEL (INSIDE)	50-01	ELECTRICAL / HYDRAULIC CONTROLS.....	60-01
ACCESS PANEL (INSIDE) (SJC)	50-01	ELECTRICAL / HYDRAULIC CONTROLS (SJC)....	60-01
AIR CLEANER	70-01	ELECTRICAL SYSTEM INFORMATION.....	60-01
AIR CLEANER SERVICE	10-01	ENGINE COOLING SYSTEM	10-01, 70-01
AIR CONDITIONING SYSTEM FLOW	80-01	ENGINE INFORMATION	70-01
ALTERNATOR	60-01	ENGINE LUBRICATION SYSTEM	10-01
		ENGINE SPEED CONTROL	70-01
BACK-UP ALARM SYSTEM	60-01	ENGINE SPEED CONTROL (SJC).....	70-01
BATTERY	60-01	EVAPORATOR	80-01
BOBCAT CONTROLLER (ACS)	60-01	EVAPORATOR / HEATER UNIT.....	80-01
BOBCAT CONTROLLER (MAIN).....	60-01	EXHAUST GAS RECIRCULATION (EGR)	
BOBCAT CONTROLLER (SJC) (DRIVE)	60-01	SYSTEM.....	80-01
BOBCAT INTERLOCK CONTROL SYSTEM		EXPANSION VALVE	80-01
(BICS)	60-01		
BLOWER FAN	80-01	FLYWHEEL AND HOUSING	70-01
BOB-TACH (HAND LEVER)	10-01, 50-01	FLYWHEEL RPM SENSOR	60-01
BOB-TACH (POWER - OPTION).....	10-01, 50-01	FRONT AUXILIARY HYDRAULIC COUPLER	
BOB-TACH (POWER) BLOCK.....	20-01	BLOCK	20-01
BRAKE	40-01	FUEL SYSTEM.....	10-01, 70-01
BUCKET POSITION VALVE	20-01	FUEL TANK	50-01
CAB DOOR	50-01	HEATER COIL	80-01
CALIBRATION		HEATER VALVE	80-01
(SELECTABLE JOYSTICK CONTROL) (SJC)	60-01	HYDRAULIC CONNECTION SPECIFICATIONS..	SPEC-01
CAMSHAFT AND TIMING GEARS.....	70-01	HYDRAULIC CONTROL VALVE (ACS) OR (SJC)..	20-01
CASE DRAIN FILTER	30-01	HYDRAULIC CONTROL VALVE (STANDARD)	20-01
CHARGE PRESSURE	30-01	HYDRAULIC FLUID RESERVOIR	20-01
COMPRESSOR	80-01	HYDRAULIC / HYDROSTATIC FILTERS	20-01
CONDENSER	80-01	HYDRAULIC / HYDROSTATIC FLUID	
CONTROL HANDLE / LEVER	50-01	SPECIFICATIONS	SPEC-01
CONTROL HANDLE / LEVER (ACS)	50-01	HYDRAULIC / HYDROSTATIC SYSTEM.....	10-01
CONTROL HANDLE / LEVER (SJC).....	50-01	HYDRAULIC PUMP (STANDARD).....	20-01
CONTROL PANEL (SJC).....	50-01	HYDRAULIC PUMP (STANDARD) (HIGH FLOW)..	20-01
CONTROL PANEL	50-01	HYDRAULIC PUMP (SJC) (HI FLOW)	20-01
CONTROL PANEL SETUP	60-01	HYDRAULIC PUMP (SJC)	20-01
CONTROL PEDALS AND LINKAGES.....	50-01	HYDRAULIC SYSTEM INFORMATION	20-01
CONTROL PEDALS (ACS)	50-01	HYDROSTATIC MOTOR	30-01
CONTROL SYSTEM (ACS).....	60-01	HYDROSTATIC PUMP	30-01
CONVERSIONS	SPEC-01	HYDROSTATIC PUMP (SJC).....	30-01
CRANKSHAFT AND PISTONS	70-01	HYDROSTATIC SYSTEM INFORMATION	30-01
CYLINDER HEAD	70-01		
CYLINDER (LIFT)	20-01	INSTRUMENT PANEL.....	60-01
CYLINDER (BOB-TACH)	20-01		
CYLINDER (TILT)	20-01	JOYSTICK CONTROL	50-01
DIAGNOSTICS SERVICE CODES	60-01	LIFT ARMS.....	50-01
DRIVE BELT	30-01	LIFT ARM BYPASS CONTROL VALVE	20-01
		LIFT ARM SUPPORT DEVICE	10-01
		LIFTING AND BLOCKING THE LOADER.....	10-01
		LIGHTS	60-01
		T250 LOADER SPECIFICATIONS	SPEC-01
		LOADER STORAGE AND RETURN	
		TO SERVICE	10-01
		LUBRICATION SYSTEM	70-01
		LUBRICATING THE LOADER.....	10-01
		MAIN RELIEF VALVE	20-01
		MAINTENANCE CLOCK	60-01
		MUFFLER.....	70-01

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$