

T300

TURBO

T300

TURBO

HIGH FLOW



 
Bobcat®

Service Manual

S/N 521911001 & Above

S/N 522011001 & Above

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

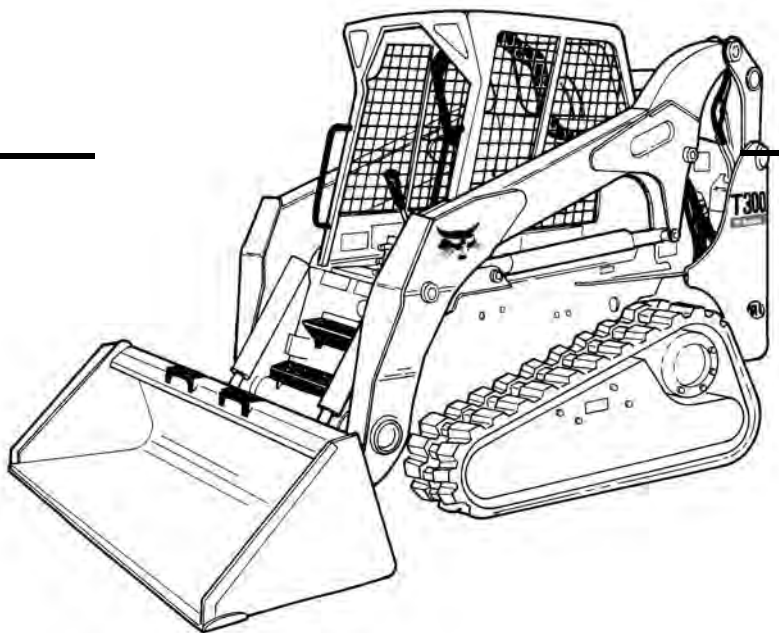

**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**

6901936 (10-12)

Printed in U.S.A.

© Bobcat Company 2006

MAINTENANCE SAFETY



WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

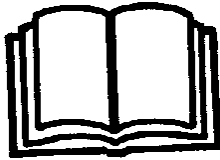

B-10731a

- Never service the Bobcat Compact Track Loader without instructions.

 
CORRECT

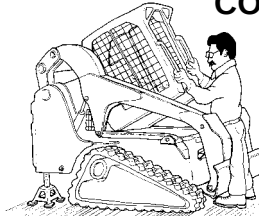

B-19110

- Use the correct procedure to lift to lower operator cab.

 
CORRECT

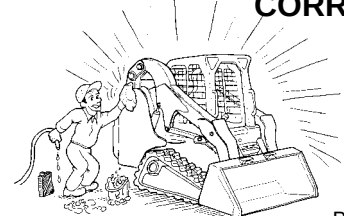

B-19109

- Cleaning and maintenance are required daily.

 
WRONG

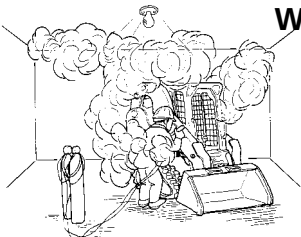

B-19108

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

 
WRONG

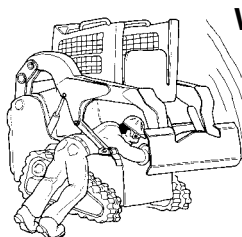

B-19111

- Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 
WRONG

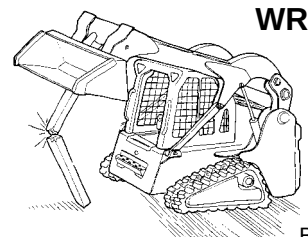

B-19107

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

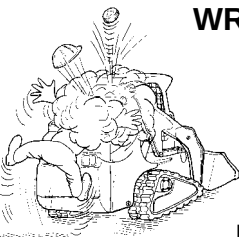

B-19106

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

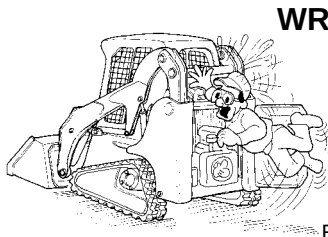

B-19105

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS).....	60-01	HYDRAULIC?HYDROSTATIC FILTER.....	20-01
AIR CLEANER	70-01	HYDROSTATIC MOTOR	30-01
AIR CLEANER SERVICE	10-01	HYDROSTATIC PUMP	30-01
ALTERNATOR.....	60-01	HYDROSTATIC SYSTEM INFORMATION	30-01
BATTERY	60-01	INSTRUMENT PANEL	60-01
BICS™ SYSTEM	60-01	INSIDE ACCESS PANEL	50-01
BOBCAT CONTROLLER.....	60-01	LIFT ARM	50-01
BOBCAT INTERLOCK		LIFT ARM BY-PASS CONTROL VALVE	20-01
CONTROL SYSTEM (BICS™)	60-01	LIFT ARM SUPPORT DEVICE	10-01
BOB-TACH	10-01, 50-01	LIFTING AND BLOCKING THE LOADER.....	10-01
BRAKE	40-01	LIGHTS	60-01
BUCKET POSITION VALVE	20-01	LOADER SPECIFICATIONS	SPEC-01
CHARGE PRESSURE	30-01	LUBRICATING THE LOADER	10-01
CONTROL HANDLE	50-01	MAIN RELIEF VALVE (ACS).....	20-01
CONTROL HANDLE (ADVANCED CONTROL SYSTEM)		MAIN RELIEF VALVE (FOOT CONTROL)	20-01
(ACS) SELECTABLE HAND/FOOT CONTROL ...	50-01	MUFFLER.....	70-01
CONTROL PANEL.....	50-01	OIL COOLER.....	30-01
CONTROL PEDALS	50-01	OPERATOR CAB	10-01, 50-01
CONTROL PEDALS (ACS)	50-01	OPERATOR SEAT	50-01
CONVERSIONS	SPEC-01	OPERATOR SEAT (SUSPENSION)	50-01
COOLING FAN	70-01	POWER BOB-TACH	10-01, 50-01
CYLINDER (LIFT).....	20-01	POWER BOB-TACH BLOCK (EARLY MODELS)...	20-01
CYLINDER (POWER BOB-TACH)	20-01	POWER BOB-TACH BLOCK (LATER MODELS)...	20-01
CYLINDER (TILT)	20-01	RADIATOR	70-01
DIAGNOSTICS SERVICE CODES	60-01	REAR AUXILIARY DIVERTER VALVE	
DRIVE BELT	30-01	(EARLY MODELS)	20-01
DRIVE COMPONENTS	40-01	REAR AUXILIARY DIVERTER VALVE	
ELECTRICAL/HYD. CONTROLS REF	60-01	(LATER MODELS)	20-01
ELECTRICAL SYSTEM INFORMATION	60-01	REAR DOOR	50-01
ENGINE	70-01	REAR GRILL	50-01
ENGINE COOLING SYSTEM	10-01	RECONDITIONING THE ENGINE	70-01
ENGINE LUBRICATION SYSTEM	10-01	REGULAR MAINTENANCE	80-01
ENGINE SPECIFICATIONS	SPEC-01	REMOTE START	10-01
ENGINE SPEED CONTROL	70-01	SEAT BAR.....	50-01
FAN GEARBOX	10-01	SEAT BAR SENSOR.....	60-01
FLYWHEEL AND HOUSING	70-01	SERVICE SCHEDULE	10-01
FRONT AUXILIARY HYD. COUPLER BLOCK.....	20-01	STARTER.....	60-01
FLYWHEEL RPM SENSOR	60-01	TORQUE SPECIFICATIONS FOR BOLTS ...	SPEC-01
FUEL SYSTEM	10-01	TRACTION LOCK	60-01
FUEL TANK	50-01	TRANSPORTING THE BOBCAT LOADER	10-01
HYDRAULIC CONTROL VALVE		TROUBLESHOOTING	70-01
(ADVANCED CONTROL SYSTEM) (ACS).....	20-01	ACS- ADVANCED CONTROL SYSTEM	
HYDRAULIC CONTROL VALVE		AHC- ADVANCED HAND CONTROL SYSTEM	
(FOOT CONTROL)	20-01	BICS™-BOBCAT INTERLOCK CONTROL SYSTEM	
HYDRAULIC FLUID RESERVOIR.....	20-01		
HYDRAULIC/HYDROSTATIC			
FLUID SPECIFICATIONS	SPEC-01		
HYDRAULIC/HYDROSTATIC SYSTEM.....	10-01		
HYDRAULIC PUMP	20-01		
HYDRAULIC PUMP (CHARGE)	20-01		
HYDRAULIC PUMP (HI FLOW)			
(S/N 521911523 & BELOW)	20-01		
HYDRAULIC PUMP (HI FLOW)			
(S/N 521911524 & ABOVE).....	20-01		
HYDRAULIC SYSTEM INFORMATION	20-01		

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$