

Engine Manual Workshop Manual

3TNV Series

3TNV88C · 3TNV86CT · 3TNV86CHT

3TN Series

3TN88C · 3TN86CT · 3TN86CHT

4TNV Series

4TNV88C · 4TNV86CT · 4TNV86CHT

4TNV98C · 4TNV98C-C · 4TNV98CT

4TNV98CT-C

4TN Series

4TN88C · 4TN86CT · 4TN86CHT

4TN86DHT · 4TN98C · 4TN98CT

Service Manual consists of the following sections.

Technical Manual

Technical Manual (Operational Principle)

Technical Manual (Troubleshooting)

Workshop Manual

Engine Manual

 **Hitachi Construction Machinery Co., Ltd.**

URL:<https://www.hitachicm.com/global/>

The specification and contents that are not equipped for the machine may be described in this book.

SERVICE MANUAL	MODEL	3TNV88C, 3TNV86CT, 3TNV86CHT, 4TNV88C, 4TNV86CT, 4TNV86CHT, 4TNV98C, 4TNV98C-C, 4TNV98CT, 4TNV98CT-C, 3TN88C, 3TN86CT, 3TN86CHT, 4TN88C, 4TN86CT, 4TN86CHT, 4TN86DHT, 4TN98C, 4TN98CT
	CODE	0BTN4-EN0029

SERVICE MANUAL

3TNV88C, 3TNV86CT, 3TNV86CHT, 4TNV88C, 4TNV86CT, 4TNV86CHT, 4TNV98C, 4TNV98C-C, 4TNV98CT, 4TNV98CT-C, 3TN88C, 3TN86CT, 3TN86CHT, 4TN88C, 4TN86CT, 4TN86CHT, 4TN86DHT, 4TN98C, 4TN98CT

TABLE OF CONTENTS

	Page
INTRODUCTION.....	1-1
HITACHI CONSTRUCTION MACHINERY WARRANTIES	2-1
SAFETY	3-1
GENERAL SERVICE INFORMATION.....	4-1
PERIODICMAINTENANCE	5-1
ENGINE.....	6-1
FUEL SYSTEM	7-1
COOLING SYSTEM.....	8-1
LUBRICATION SYSTEM.....	9-1
TURBOCHARGER	10-1
STARTER MOTOR.....	11-1
ALTERNATOR.....	12-1
ELECTRONIC CONTROL SYSTEM	13-1
ELECTRIC WIRING	14-1
FAILURE DIAGNOSIS.....	15-1

This Page Intentionally Left Blank

Section 1

INTRODUCTION

This Service Manual describes the service procedures for the TNV, TN series engines have common rail injection system. These engines are certified by the U.S. EPA, California ARB, European EC Directive 97/68/EC, and/or Chinese national standard GB4 for industrial use.

Although BOSCH ECU (EDC17) is used for TNV and TN series engines, BOSCH ECU (MD1) is used for some TN series engines. In order to distinguish, the adopted engine of BOSCH ECU (MD1) is named TN ○○ - numbers (1 to 6). Where identification is required, the ECU model is indicated in parentheses after the engine model.

Please use this manual for accurate, quick and safe servicing of the engine. Since the descriptions in this manual are for a standard engine, some specifications and components may be different from your customized engine. Refer to the operation manual supplied by the optional equipment manufacturer for specific service instructions of the optional equipment.

For the replacement of some parts and troubleshooting for the TNV, TN series engines, SMARTASSIST-Direct (SA-D) is required. In addition, please read both Troubleshooting Manual and SMARTASSIST-Direct (SA-D) Operation Manual.

HITACHI CONSTRUCTION MACHINERY products are continuously undergoing improvement. This Service Manual might not address possible field modifications to the equipment. Contact an HITACHI CONSTRUCTION MACHINERY Authorized dealer for answers to any questions relating to field modifications.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$