Workshop Manual

ZW 180-6 Wheel Loader

ZW180-6 WHEEL LOADER WORKSHOP MANUAL

@Hitachi Construction Machinery Co., Ltd.

URL:http://www.hitachi-c-m.com

SECTION 1

GENERAL

CONTENTS

Assembling Precautions for Disassembling and Precautions for Disassembling and
AssemblingW1-1-1-1
Group 2 Tightening Tightening Bolts and NutsW1-2-1-1 Piping JointW1-2-1-4
Group 3 Painting
Group 4 Bleeding Air Bleed Air from the Hydraulic SystemW1-4-1-1 Bleed Air from the Fuel SystemW1-4-1-2 Bleeding Air from Brake (Axle)W1-4-1-3
Group 5 Preparation Preparations for Inspection and MaintenanceW1-5-1-1 Releasing Pressure from Hydraulic CircuitW1-5-1-6 Releasing Pressure from Ride Control
AccumulatorW1-5-1-7 Releasing Pressure from Parking Brake
AccumulatorW1-5-1-8 Releasing Pressure from Hydraulic Oil TankW1-5-1-9 Releasing Pressure from Expansion TankW1-5-1-10



SECTION 2

MAINTENANCE STANDARD

CONTENTS

Group 1 Body	
Center Hinge	W2-1-1-1
Group 2 Front Attachment	
Pin and Bushing	W2-2-1-1
Standard Dimensions for Lift Arm	and BucketW2-2-2-1
C. Itinalan	W2 2 2 1

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$