

# Workshop Manual

## ZW 180-6 180PL-6 Wheel Loader

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

PRINTED IN JAPAN (K) 2018, 08

Service Manual consists of the following separate Part No.  
Technical Manual (Operational Principle) : Vol. No.TOPD850-EN  
Technical Manual (Troubleshooting) : Vol. No.TTPD850-EN  
Workshop Manual : Vol. No.WPD850-EN



---

## SECTION 1

# GENERAL

### CONTENTS

#### **Group 1 Precautions for Disassembling and Assembling**

Precautions for Disassembling and Assembling .....	W1-1-1-1
--	----------

#### **Group 2 Tightening**

Tightening Bolts and Nuts .....	W1-2-1-1
Piping Joint .....	W1-2-1-4

#### **Group 3 Painting**

Painting (Parallel Link) .....	W1-3-2-1
--------------------------------	----------

#### **Group 4 Bleeding Air**

Bleed Air from the Hydraulic System .....	W1-4-1-1
Bleed Air from the Fuel System .....	W1-4-1-2
Bleeding Air from Brake (Axle) .....	W1-4-1-3

#### **Group 5 Preparation**

Preparations for Inspection and Maintenance .....	W1-5-1-1
Releasing Pressure from Hydraulic Circuit .....	W1-5-1-6
Releasing Pressure from Ride Control Accumulator .....	W1-5-1-7
Releasing Pressure from Parking Brake Accumulator .....	W1-5-1-8
Releasing Pressure from Hydraulic Oil Tank .....	W1-5-1-9
Releasing Pressure from Expansion Tank .....	W1-5-1-10

---

(Blank)

---

# SECTION 2

## MAINTENANCE STANDARD

### CONTENTS

**Group 1 Body**  
Center Hinge.....W2-1-1-1

**Group 2 Front Attachment**  
Pin and Bushing.....W2-2-1-1  
Standard Dimensions for Lift Arm and Bucket...W2-2-2-1  
Cylinder .....W2-2-3-1

**Group 3 Front Attachment (Parallel Link)**  
Pin and Bushing.....W2-3-1-1  
Standard Dimensions for Quick Coupler and  
Bucket.....W2-3-2-1  
Cylinder .....W2-3-3-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$