

Engine Manual Technical Manual

4TNV Series

4TNV88C · 4TNV86CT · 4TNV98C
4TNV98CT

 **Hitachi Construction Machinery Co., Ltd.**

URL:<http://www.hitachi-c-m.com>

Service Manual consists of the following sections.

Technical Manual

Technical Manual (Operational Principle)

Technical Manual (Troubleshooting)

Workshop Manual

Engine Manual

TROUBLESHOOTING MANUAL

TNV Series

The specification and contents that are not equipped for the machine may be described in this book.

TROUBLESHOOTING MANUAL	Model	TNV Series
	Code No.	0DTN4-G00200

CONTENTS

1. DTC (Diagnostic Trouble Codes) General Description	1
DTC code list	1
Description	6
Sensor related	7
Crank speed sensor	7
P0336: Crank signal malfunction	7
P0337: No crank signal	9
Cam speed sensor	11
P0341: Cam signal malfunction	11
P0342: No cam signal	13
P1341: Angle offset failure	15
P0008: No signal on both crank and cam speed sensor	17
Accelerator sensor	18
P0123: Accelerator sensor 1 (Excessive sensor output)	18
P0122: Accelerator sensor 1 (Insufficient sensor output)	20
P0223: Accelerator sensor 2 (Excessive sensor output)	22
P0222: Accelerator sensor 2 (Insufficient sensor output)	24
P1646: Dual accelerator sensor (closed position) failure	26
P1647: Dual accelerator sensor (open position) failure	28
P0228: Accelerator sensor 3 (Excessive sensor output)	30
P0227: Accelerator sensor 3 (Insufficient sensor output)	32
P1227: Pulse sensor failure (Pulse communication)	34
P1126: Accelerator sensor 3 failure (Foot pedal in open position)	35
P1125: Accelerator sensor 3 failure (Foot pedal in closed position)	37
Intake throttle opening sensor	38
P02E9: Intake throttle opening sensor fault (High voltage)	38
P02E8: Intake throttle opening sensor fault (Low voltage)	40
EGR low pressure side sensor	42
P0238: EGR low pressure side sensor fault (High voltage)	42
P0237: EGR low pressure side sensor fault (Low voltage)	44
P0236: EGR low pressure side sensor (Abnormal learning value)	46
EGR high pressure side sensor	48
P0473: EGR high pressure side sensor fault (High voltage)	48
P0472: EGR high pressure side sensor fault (Low voltage)	50
P0471: EGR high pressure side sensor (Abnormal learning value)	52
Cooling water temperature sensor	54
P0118: Cooling water temperature sensor fault (High voltage)	54
P0117: Cooling water temperature sensor fault (Low voltage)	56
P0217: Cooling water temperature sensor temperature abnormal high (Overheat)	58
New air temperature sensor	60
P0113: New air temperature sensor fault (High voltage)	60
P0112: New air temperature sensor fault (Low voltage)	62
Fuel temperature sensor	64
P0183: Fuel temperature sensor fault (High voltage)	64
P0182: Fuel temperature sensor fault (Low voltage)	66
P0168: Fuel temperature sensor temperature abnormal high	68

Rail pressure sensor	70
P0193: Rail pressure sensor fault (High voltage)	70
P0192: Rail pressure sensor fault (Low voltage)	72
DPF differential pressure sensor	74
P2455: DPF differential pressure sensor fault (High voltage)	74
P2454: DPF differential pressure sensor fault (Low voltage)	76
P2452: DPF differential pressure sensor differential pressure abnormal high	78
P2453: DPF differential pressure sensor (Abnormal learning value)	80
DPF high pressure side sensor	82
P1455: DPF high pressure side sensor fault (High voltage).....	82
P1454: DPF high pressure side sensor fault (Low voltage)	84
DPF inlet temperature sensor	86
P1428: DPF inlet temperature sensor fault (High voltage)	86
P1427: DPF inlet temperature sensor fault (Low voltage)	88
P1436: DPF inlet temperature sensor temperature abnormal high	90
DPF intermediate temperature sensor	91
P1434: DPF intermediate temperature sensor fault (High voltage).....	91
P1435: DPF intermediate temperature sensor fault (Low voltage)	93
P0420: DPF intermediate temperature sensor temperature abnormal low temperature ...	95
P1426: DPF intermediate temperature sensor temperature abnormal high (post-injection failure)	96
Atmospheric pressure sensor	97
P2229: Atmospheric pressure sensor fault (High voltage)	97
P2228: Atmospheric pressure sensor fault (Low voltage)	98
P1231: Atmospheric pressure sensor characteristic fault	99
EGR gas temperature sensor	101
P041D: EGR gas temperature sensor fault (High voltage)	101
P041C: EGR gas temperature sensor fault (Low voltage)	103
Intake manifold temperature sensor	105
P040D: Intake manifold temperature sensor fault (High voltage)	105
P040C: Intake manifold temperature sensor fault (Low voltage).....	107
Exhaust manifold temperature sensor	109
P0546: Exhaust manifold temperature sensor fault (High voltage)	109
P0545: Exhaust manifold temperature sensor fault (Low voltage)	111
Contact output related	113
Main relay	113
P068B: Main relay contact stuck	113
P068A: Main relay early opening	115
Startup assist relay	117
P0543: Startup assist relay interrupted	117
P0541: Startup assist relay GND interrupted	119
CRS (common rail system) related	121
Injector 1	121
P0204 (4TNV), P0203 (3TNV): Injector 1 open circuit (Inherent location of the injector)	121
P0271 (4TNV), P0268 (3TNV): Injector 1 coil short circuit	123
P1271 (4TNV), P1262 (3TNV): Injector 1 short circuit	125
Injector 2	127
P0202: Injector 2 open circuit (Inherent location of the injector)	127
P0265: Injector 2 coil short circuit	129
P1265: Injector 2 short circuit	131

Injector 3	133
P0201: Injector 3 open circuit (Inherent location of the injector)	133
P0262: Injector 3 coil short circuit	135
P1262: Injector 3 short circuit	137
Injector 4	139
P0203: Injector 4 open circuit (Inherent location of the injector)	139
P0268: Injector 4 coil short circuit	141
P1268: Injector 4 short circuit	143
Injector (common)	145
P0611: Injector drive IC error	145
P1146: Injector drive circuit (Bank1) short circuit	146
P1149: Injector drive circuit (Bank2) short circuit	148
P1648: IQA corrected injection amount for injector 1 error	150
P1649: IQA corrected injection amount for injector 2 error	151
P1650: IQA corrected injection amount for injector 3 error	152
P1651: IQA corrected injection amount for injector 4 error	153
SCV (MPROP)	154
P1641: High-pressure pump drive circuit (Low side VB short-circuit)	154
P1643: High-pressure pump drive circuit (Low side GND short-circuit)	155
P0629: High-pressure pump drive circuit (High side VB short-circuit)	157
P1642: High-pressure pump drive circuit (High side GND short-circuit)	159
P0627: High-pressure pump drive circuit (Open circuit)	160
P062A: High-pressure pump drive circuit (Drive current (high level))	161
P1645: High-pressure pump drive circuit (Pump overload error)	163
Abnormal rail pressure	165
P0088: Actual rail pressure rise error	165
P0094: Rail pressure deviation error during the actual rail pressure drop	167
P0093: Rail pressure deviation error during the actual rail pressure rise	169
PLV (Common rail pressure limit valve)	171
P000F: PLV open valve	171
P1666: Rail pressure fault (The times of PLV valve opening error)	173
P1667: Rail pressure fault (The time of PLV valve opening error)	175
P1668: Rail pressure fault (The actual rail pressure is too high during PRV limp home)	177
P1665: Rail pressure fault (Controlled rail pressure error after PLV valve opening)	179
Rail pressure control	181
P1669: Rail pressure fault (Injector B/F temperature error during PLV4 limp home)	181
P1670: Rail pressure fault (Operation time error during RPS limp home)	183
Actuator	184
Intake throttle drive circuit	184
P0660: No-load of throttle valve drive H bridge circuit	184
P1658: Power short circuit of throttle valve drive H bridge output 1	185
P1659: GND short circuit of throttle valve drive H bridge output 1	186
P1660: Overload on the drive H bridge circuit of throttle valve	187
P1661: VB Power short circuit of throttle valve drive H bridge output 2	188
P1662: GND short circuit of throttle valve drive H bridge output 2	189
EGR	190
P0404: EGR over-voltage fault	190
P1404: EGR under-voltage fault	191
P1409: EGR feedback malfunction	192

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$