Technical Manual

ZAXIS

40U-2 50U-2

Hydraulic Excavator

URL:http://www.hitachi-c-m.com

Service Manual consists of the following separate Part No; Technical Manual : Vol. No.T1M9-E Workshop Manual : Vol. No.W1M9-E

INTRODUCTION

TO THE READER

- This manual is written for an experienced technician to provide technical information needed to maintain and repair this machine.
 - Be sure to thoroughly read this manual for correct product information and service procedures.
- If you have any questions or comments, at if you found any errors regarding the contents of this manual, please contact using "Service Manual Revision Request Form" at the end of this manual.

(Note: Do not tear off the form. Copy it for usage.):

Publications Marketing & Product Support Hitachi Construction Machinery Co. Ltd.

TEL: 81-29-832-7173 FAX: 81-29-831-1162

 This manual contains the revision information to the 12, June 2008.

ADDITIONAL REFERENCES

- Please refer to the materials listed below in addition to this manual.
 - · The Operator's Manual
 - · The Parts Catalog

 
- · Operation Manual of the Engine
- · Parts Catalog of the Engine
- · Hitachi Training Material

MANUAL COMPOSITION

- This manual consists of two portions: the Technical Manual and the Workshop Manual. Use the manuals according to purpose.
 - Information included in the Technical Manual: technical information needed for redelivery and delivery, operation and activation of all devices and systems, operational performance tests, and troubleshooting procedures.
- Information included in the Workshop Manual: technical information needed for maintenance and repair of the machine, tools and devices needed for maintenance and repair, maintenance standards, and removal/installation and assemble/disassemble procedures.

PAGE NUMBER

 Each page has a number, located on the center lower part of the page, and each number contains the following information:



INTRODUCTION

SAFETY ALERT SYMBOL AND HEADLINE NOTATIONS

In this manual, the following safety alert symbol and signal words are used to alert the reader to the potential for personal injury of machine damage.

This is the safety alert symbol. When you see this symbol, be alert to the potential for personal injury. Never fail to follow the safety instructions prescribed along with the safety alert symbol.

The safety alert symbol is also used to draw attention to component/part weights.

To avoid injury and damage, be sure to use appropriate lifting techniques and equipment when lifting heavy parts.

• A CAUTION:

Indicated potentially hazardous situation which could, if not avoided, result in personal injury or death.

• IMPORTANT:

Indicates a situation which, if not conformed to the instructions, could result in damage to the machine.

• PNOTE:

Indicates supplementary technical information or know-how.

UNITS USED

• SI Units (International System of Units) are used in this manual.

MKSA system units and English units are also indicated in parenthheses just behind SI units.

Example: 24.5 MPa (250 kgf/cm², 3560 psi)

A table for conversion from SI units to other system units is shown below for reference purposees.

Quantity	To Convert From	Into	Multiply By	Quantity	To Convert From	Into	Multiply By
Length	mm	in	0.03937	Pressure	MPa	kgf/cm ²	10.197
	mm	ft	0.003281		MPa	psi	145.0
Volume	L	US gal	0.2642	Power	kW	PS	1.360
	L	US qt	1.057		kW	HP	1.341
	m ³	yd ³	1.308	Temperature	°C	°F	°C×1.8+32
Weight	kg	lb	2.205	Velocity	km/h	mph	0.6214
Force	N	kgf	0.10197		min ⁻¹	rpm	1.0
	N	lbf	0.2248	Flow rate	L/min	US gpm	0.2642
Torque	N⋅m	kgf⋅m	1.0197		mL/rev	cc/rev	1.0
	N⋅m	lbf∙ft	0.7375				

SECTION AND GROUP CONTENTS

SECTION 1 GENERAL

Group 1 Specification	
Group 2 Component Layout	
Group 3 Component Specifications	

SECTION 2 SYSTEM

Group 1 Control System Group 2 Hydraulic System Group 3 Electrical System

TECHNICAL MANUAL

SECTION 3 COMPONENT OPERATION

Group 1 Pump Device	
Group 2 Revolution Sensing Valve	
Group 3 Swing Device	
Group 4 Control Valve	
Group 5 Pilot Valve	
Group 6 Travel Device	
Group 7 Others (Upperstructure)	
Group 8 Others (Undercarriage)	

SECTION 4 OPERATIONAL PER-FORMANCE TEST

SECTION 5 TROUBLESHOOTING	
Group 6 Adjustment	
Group 5 Component Test	
Group 4 Excavator Test	
Group 3 Engine Test	
Group 2 Standard	
Group 1 Introduction	

All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT(C)2004 Hitachi Construction Machinery Co., Ltd. Tokyo, Japan

All rights reserved

92011011 0 1110022220110011110
Group 1 Diagnosing Procedure
Group 2 Troubleshooting A
Group 3 Troubleshooting B
Group 4 Troubleshooting C
Group 5 Electrical System Inspection

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$