

Engine Manual

2TNV70

3TNV70

3TNV76

 **Hitachi Construction Machinery**

URL:<http://www.hitachi-c-m.com>

This manual consists of the following sections.
Engine Manual

TABLE OF CONTENTS

	Page
Introduction	1-1
Hitachi Warranties	2-1
Safety	3-1
General Service Information	4-1
Periodic Maintenance	5-1
Engine	6-1
Fuel System	7-1
Cooling System	8-1
Lubrication System	9-1
Starter Motor	10-1
Alternator	11-1
Electric Wiring	12-1
Troubleshooting	13-1

This Page Intentionally Left Blank

Section 1

INTRODUCTION

This *Service Manual* describes the service procedures for the TNV series indirect injection engines. These engines are certified by the U.S. EPA, California ARB and/or the 97/68/EC Directive for industrial use.

Please use this manual for accurate, quick and safe servicing of the engine. Since the directions in this manual are for a typical engine, some specifications and components may be different from your engine. Refer to the documentation supplied by the optional equipment manufacturer for specific service instructions.

Hitachi Construction Machinery products are continuously undergoing improvement. This Service Manual might not address possible field modifications to the equipment. Contact an authorized Yanmarindustrial engine dealer or distributor for answers to any questions relating to field modifications.

This Page Intentionally Left Blank

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$