

Wheeled Loading Shovel - 412S, 414S, 416S

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Hydraulic Steering](#)

[Section K - Engine](#)



Publication No.
9803/4170-16



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support

Section 1



General Information

Service Manual - Wheeled Loading Shovel - 412S, 414S, 416S

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Hydraulic Steering](#)

[Section K - Engine](#)



Publication No.
9803/4170-16



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support

[illegible]

Contents	Page No.
Introduction	
About this Manual	1 - 1
Machine Model and Serial Number	1 - 1
Using the Service Manual	1 - 1
Section Numbering	1 - 2
Left Side, Right Side	1 - 2
Cross References	1 - 2
Identifying your Machine	1 - 3
Machine Identification Plate	1 - 3
Component Identification Plates	1 - 4
Standard Torque Settings	
Zinc Plated Fasteners and Dacromet Fasteners	1 - 9
Introduction	1 - 9
Bolts and Screws	1 - 9
Hydraulic Connections	1 - 13
'O' Ring Face Seal System	1 - 13
'Torque Stop' Hose System	1 - 16
JCB Standard Torque Settings	1 - 17
B.S.P. Port Connection (Colour Coded)	1 - 17
Hose Ends and Flanged Fittings (Colour Coded)	1 - 18
Service Tools	
Numerical List	1 - 19
Tool Detail Reference Section B - Body and Framework	1 - 20
Numerical List Section C - Electrics	1 - 24
Tool Detail Reference Section C - Electrics	1 - 25
Numerical List Section E - Hydraulics	1 - 26
Tool Detail Reference Section E- Hydraulics	1 - 29
Numerical List Section F - Transmission	1 - 33
Tool Detail Reference Section F - Transmission	1 - 34
Numerical List Section K - Engine	1 - 37
Tool Detail Reference Section K - Engine	1 - 38
Service Consumables	
Sealing and Retaining Compounds	1 - 39
Terms and Definitions	
Colour Coding	1 - 41
Hydraulic Schematic Colour Codes	1 - 41



Section 1 - General Information

Contents

Page No.

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$