

## Wheeled Loading Shovel - 426, 435, 436, 446

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Hydraulic Steering](#)

[Section K - Engine](#)



Publication No.  
**9803-4160-17**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class  
Customer Support

# Section 1



## General Information

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Hydraulic Steering](#)

[Section K - Engine](#)



Publication No.  
**9803/4160-17**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Service, World Parts Centre, Beamhurst, Uttoxeter, Staffordshire, ST14 5PA, England. Tel +44 1889 590312 Fax +44 1889 593377

World Class  
Customer Support

**Notes:**

<b>Contents</b>	<b>Page No.</b>
<b>Introduction</b>	
About this Manual .....	1 - 1
Machine Model and Serial Number .....	1 - 1
Using the Service Manual .....	1 - 1
Section Numbering .....	1 - 1
Left Side, Right Side .....	1 - 2
Cross References .....	1 - 2
Identifying Your Machine .....	1 - 3
Machine Identification Plate .....	1 - 3
Component Identification Plates .....	1 - 5
 <b>Standard Torque Settings</b>	
Zinc Plated Fasteners and Dacromet Fasteners .....	1 - 7
Introduction .....	1 - 7
Bolts and Screws .....	1 - 7
Hydraulic Connections .....	1 - 11
'O' Ring Face Seal System .....	1 - 11
'Torque Stop' Hose System .....	1 - 14
 <b>Service Tools</b>	
Numerical List .....	1 - 15
Tool Detail Reference .....	1 - 16
Section B - Body and Framework .....	1 - 16
Section C - Electrics .....	1 - 20
Section E- Hydraulics .....	1 - 22
Section F - Transmission .....	1 - 30
Section H - Steering .....	1 - 33
Section K - Engine .....	1 - 33
 <b>Service Consumables</b>	
Sealing and Retaining Compounds .....	1 - 35
 <b>Terms and Definitions</b>	
Colour Coding .....	1 - 37
Hydraulic Schematic Colour Codes .....	1 - 37



# Section 1 - General Information

---

Contents

Page No.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$