Service Manual



JS115,JS130,JS145 - Tier III Auto

Service Manual - JS115,JS130,JS145 - Tier III Auto

Section 1 - General Information

Section 2 - Care & Safety

Section 3 - Maintenance

Section B - Body & Framework

Section C - Electrics

Section E - Hydraulics

Section F - Transmission

Section J - Track & Running Gear

Section K - Engine



Publication No. **9803/9860-5**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

World Class

Section 1



General Information

Service Manual - JS115,JS130,JS145 - Tier III Auto

Section 1 - General Information

Section 2 - Care & Safety

Section 3 - Maintenance

Section B - Body & Framework

Section C - Electrics

Section E - Hydraulics

Section F - Transmission

Section J - Track & Running Gear

Section K - Engine



Publication No. **9803/9860-4**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

World Class Customer Support



Section 1 - General Information

Notes:		

1-0 9803/9860-4 **1-0**



Section 1 - General Information

Contents	Page No.
Introduction	
About this Manual	1-1
Identifying Your Machine	1-3
Torque Settings	
Zinc Plated Fasteners and Dacromet Fasteners	
Hydraulic Connections	1-9
Service Tools	
Numerical List	1-13
Tool Detail Reference	
Service Consumables	
Sealing and Retaining Compounds	1-37
Terms and Definitions	
Colour Coding	1-39

1-i 1-i



Section 1 - General Information

Contents Page No.

1-ii 1-ii

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$