

JS200W - Wheeled Excavators - Tier 2 and Tier 4i Engines

[Section 1 - General Information](#)

[Section 2 - Operator's Manual](#)

[Section B - Body & Framework](#)

[Section C - Electrics](#)

[Section D - Controls](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section K - Engine](#)



Publication No.
9813/4050-01



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support

Section 1



General Information

Service Manual - JS200W - Wheeled Excavators - Tier 2 and Tier 4i Engines

[Section 1 - General Information](#)

[Section 2 - Operator's Manual](#)

[Section B - Body & Framework](#)

[Section C - Electrics](#)

[Section D - Controls](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section K - Engine](#)



Publication No.
9813/4050-01



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support

Notes:



Section 1 - General Information

Contents	Page No.
Introduction	
Identifying Your Machine	1-1
Safety	
Introduction	1-3
Use	
Introduction	1-5
Scope	1-6
Personnel	1-6
Applications	1-6
Newest Data	1-6
Format	1-7
Left Side, Right Side	1-8
Hydraulic Schematic Codes	1-9
Colour Codes	1-9
Routine Maintenance	
Maintenance Schedules	1-11
General Procedures	
Introduction	1-13
Parking the Machine and Making it Safe	1-14
Venting the Hydraulic Pressure	1-15
Connecting/Disconnecting Hydraulic Hoses	1-16
Battery Disconnection/Connection	1-17
Removing and Replacing Components	1-18
Preparation	1-18
Original Components	1-18
New Components	1-18
Torques and Fixings	1-18
Battery Charging System Precautions	1-19
Gas Hydraulic Bladder Accumulators	1-20
Replacement	1-20
Charging	1-20
Service Consumables	
Introduction	1-23
Sealing and Retaining Compounds	1-24
Torque Settings	
Introduction	1-25
Zinc Plated Fasteners and Dacromet Fasteners	1-26
Introduction	1-26
Bolts and Screws	1-26
Hydraulic Connections	1-30
'O' Ring Face Seal System	1-30
'Torque Stop' Hose System	1-36
'Positional Type' Hydraulic Adaptors	1-37
Fitting Procedure	1-37
Service Tools	
Numerical List	1-39



Section 1 - General Information

Contents

Contents	Page No.
Tool Detail Reference	1-42
Section B - Body and Framework	1-42
Section C - Electrics	1-46
Section E - Hydraulics	1-47
Section H - Steering	1-59

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$