Service Manual



Micro, Micro Plus, 8008, 8010

Section 1 - General Information

Section 2 - Care and Safety

Section 3 - Routine Maintenance

Section A - Attachments

Section B - Body and Framework

Section C - Electrics

Section D - Controls

Section E - Hydraulics

Section F - Transmission

Section J - Tracks

Section K - Engine



Publication No. **9803/9310-5**



World Class

Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Section 1



General Information

Service Manual - Micro, Micro Plus, 8008, 8010

Section 1 - General Information

Section 2 - Care and Safety

Section 3 - Routine Maintenance

Section A - Attachments

Section B - Body and Framework

Section C - Electrics

Section D - Controls

Section E - Hydraulics

Section F - Transmission

Section J - Tracks

Section K - Engine



Publication No. **9803-9310-5**



World Class



Section 1 - general Information

Notes:		

1-0 9803-9310-5 **1-0**



Section 1 - General Information

Contents Page No.
Introduction
About this Manual 1-1
Machine Model and Serial Number1-1
Using the Service Manual1-1
Section Numbering1-1
Left Side, Right Side1-2
Cab/Canopy1-2
Cross References1-2
Introduction
Identifying Your Machine 1-3
Machine Identification Plate1-3
Component Identification Plates1-4
Torque Settings
Zinc Plated Fasteners and Dacromet Fasteners 1-5
Introduction
Bolts and Screws
Hydraulic Connections
'O' Ring Face Seal System1-9
'Torque Stop' Hose System1-12
Torque Glop Trose dysterii
Consumables
Sealing and Retaining Compounds 1-13
Terms and Definitions
Colour Coding 1-15
Hydraulic Schematic Colour Codes1-15

1-i 1-i



Page left intentionally blank

1-ii 1-ii

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$