

B100


B-Series



Bobcat®

Service Manual

SN 572111001 & Above

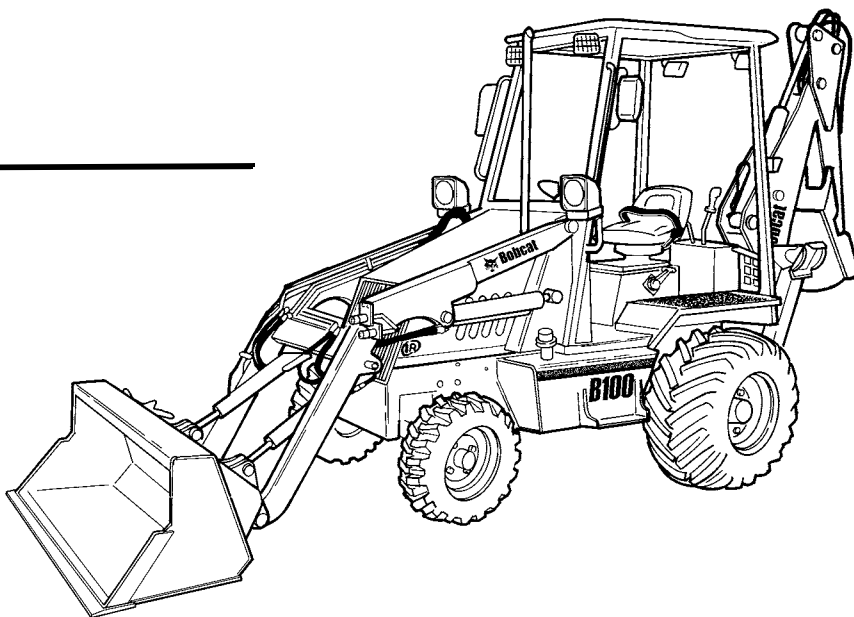

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



CORRECT

B-10731a

- Never service the Bobcat Loader Backhoe without instructions.



CORRECT

B-16639


- Always use an approved lift arm support device when servicing the loader backhoe with the lift arms raised. Replace the lift arm support device if damaged or missing.
- Disconnecting or loosening any hydraulic tubeline, hose, fitting component, or part failure can cause lift arms or backhoe boom to drop.



CORRECT

B-16527


- Cleaning and maintenance are required daily.
- NEVER modify equipment or add attachments not approved by Bobcat.

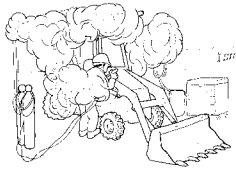

WRONG

B-16570


- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

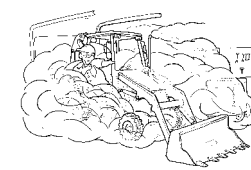

WRONG

B-16517


- Vent exhaust to outside when engine must be run for service.
- Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.

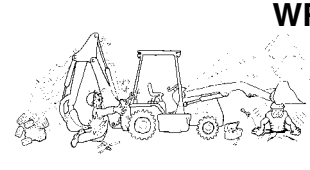

WRONG

B-16696


- Never work on loader backhoe with lift arms raised unless supported by an approved lift arm support device.
- Always lower the backhoe bucket to the ground before doing any maintenance.

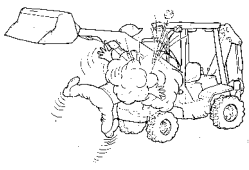

WRONG

B-16571

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust machine with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

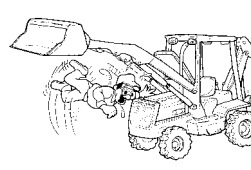

WRONG

B-16572

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used.
- Use eye protection approved for type of welding.
- Keep engine cover closed except for service. Close and latch engine cover before operating the loader backhoe.



WRONG

B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	70-01	HYDROSTATIC PUMP	30-01
AIR CLEANER SERVICE	10-01	HYDROSTATIC SYSTEM INFORMATION	30-01
ALTERNATOR	60-01	HYDROSTATIC TESTING	30-01
ALTERNATOR BELT	10-01		
APPROVED LIFT ARM SUPPORT DEVICE	10-01	INSTRUMENT PANEL	60-01
ARM CYLINDER	20-01		
ARM	50-01	LOADER BACKHOE SPECIFICATIONS	SPEC-01
AXLE AND DIFFERENTIAL	40-01	LOADER BACKHOE TORQUE	SPEC-01
AXLE HUB (FRONT)	50-01	LOADER CONTROL VALVE	20-01
AXLE TOE-IN	10-01	LIFT ARMS	50-01
		LIFT CYLINDER	20-01
BACKHOE CONTROL VALVE	20-01	LIFTING AND BLOCKING THE	
BATTERY	60-01	LOADER BACKHOE	10-01
BOB-TACH	50-01	LUBRICATING THE LOADER BACKHOE	10-01
BOB-TACH HAND LEVER	10-01		
BOOM	50-01	MAIN RELIEF VALVE	20-01
BOOM CYLINDER	20-01	MUFFLER	70-01
BOOM LOCK PIN	10-01		
BRAKE CALIPER	40-01	OIL COOLER	30-01
BUCKET	50-01	OPERATOR CAB	50-01
BUCKET CYLINDER	20-01	OPERATOR SEAT	50-01
CAB LIGHTS	60-01	PARKING BRAKE	40-01
CONVERSIONS	SPEC-01	PORT RELIEF VALVE	
		(BACKHOE CONTROL VALVE)	20-01
ELECTRICAL SYSTEM INFORMATION	60-01	PORT RELIEF VALVE	
ENGINE	70-01	(LOADER CONTROL VALVE)	20-01
ENGINE COMPONENTS AND TESTING	70-01	PRESS TO DRIVE VALVE	20-01
ENGINE COOLING SYSTEM	10-01		
ENGINE COVER	10-01, 50-01	RADIATOR	70-01
ENGINE LUBRICATION SYSTEM	10-01	REAR AXLE	10-01
ENGINE SIDE COVERS	50-01	REAR AXLE AND DIFFERENTIAL	40-01
ENGINE SPECIFICATIONS	SPEC-01	RECONDITIONING THE ENGINE	70-01
ENGINE SPEED CONTROL	70-01	RUBBER DRIVE COUPLER	70-01
FENDER	50-01	SERVICE SCHEDULE	10-01
FLOOR PANELS	50-01	SPINDLE	50-01
FLYWHEEL	70-01	STABILIZER	50-01
FLYWHEEL HOUSING	70-01	STABILIZER CYLINDER	20-01
FRONT AXLE	50-01	STEERING CYLINDER	20-01
FUEL LEVEL SENDER	60-01	STARTER	60-01
FUEL PUMP	70-01	STEERING PUMP	20-01
FUEL SYSTEM	10-01	SWING CYLINDER	20-01
FUEL TANK	50-01	SWING FRAME	50-01
		SWING LOCK PIN	10-01
GEAR PUMP	20-01		
GRILL	50-01	TILT CYLINDER	20-01
GRILL FRAME	50-01	TIRE MAINTENANCE	10-01
		TORQUE SPECIFICATIONS	
HYDRAULIC FILTER HOUSING	20-01	FOR BOLTS	SPEC-01
HYDRAULIC FLUID RESERVOIR	20-01	TOWING THE LOADER BACKHOE	10-01
HYDRAULIC/HYDROSTATIC FLUID		TRANSPORTING THE LOADER BACKHOE	10-01
SPECIFICATIONS	SPEC-01	TRAVEL PEDAL	20-01
HYDRAULIC/HYDROSTATIC SYSTEM	10-01	TROUBLESHOOTING	40-01, 70-01
HYDRAULIC SYSTEM INFORMATION	20-01	TURBOCHARGER	70-01
HYDROSTATIC DRIVE MOTOR	30-01	X-CHANGE	50-01

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$