

B300

 
B-Series



Bobcat®

Service Manual

(S/N 573111001 & Above)

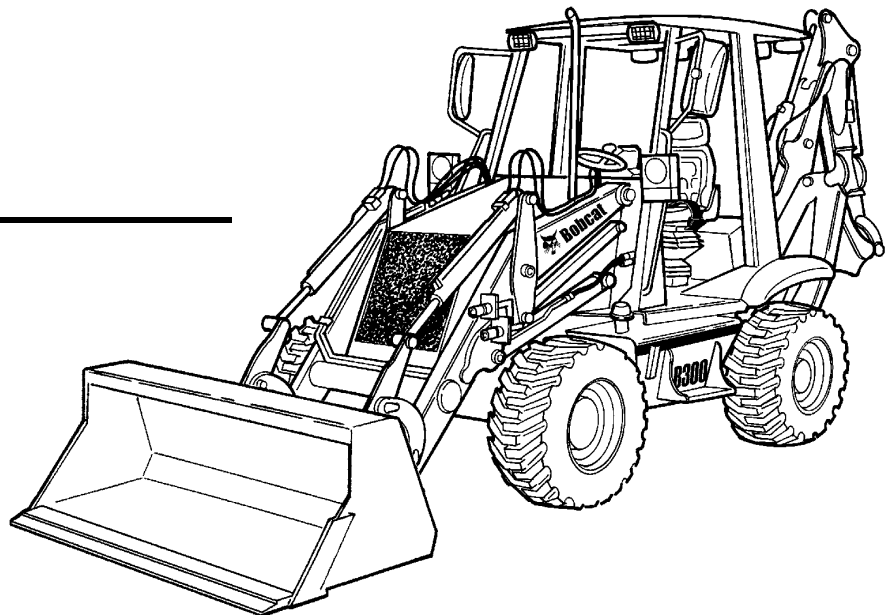

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

IR Ingersoll Rand
Compact Vehicle Technologies
Printed in U.S.A.

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

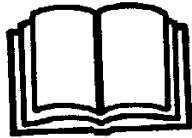

CORRECT

B-10731a

- Never service the Bobcat Loader Backhoe without instructions.



CORRECT

B-16842

 
- Always use an approved lift arm support device when servicing the loader backhoe with the lift arms raised. Replace the lift arm support device if damaged or missing.
- Disconnecting or loosening any hydraulic tubeline, hose, fitting component, or part failure can cause lift arms or backhoe boom to drop.



CORRECT

B-16865


- Cleaning and maintenance are required daily.
- NEVER modify equipment or add attachments not approved by Bobcat.

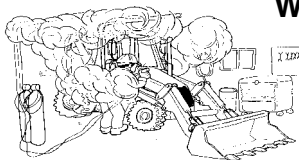

WRONG

B-16815

 
- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

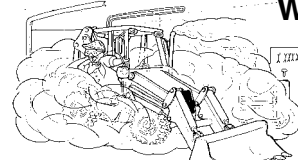

WRONG

B-16881

 
- Vent exhaust outside when engine must be run for service.
- Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

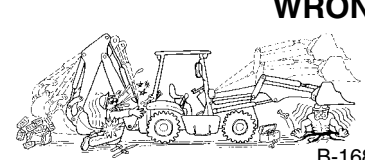

WRONG

B-16826

 
- Never work on loader backhoe with lift arms raised unless supported by an approved lift arm support device.
- Always lower the backhoe bucket to the ground before doing any maintenance.

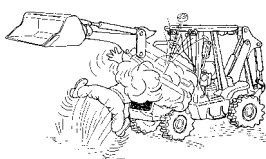

WRONG

B-16885

 - Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust machine with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

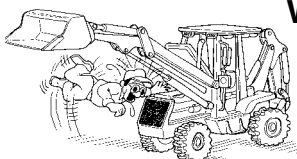

WRONG

B-16814

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used.
- Use eye protection approved for type of welding.
- Keep engine cover closed except for service. Close and latch engine cover before operating the loader backhoe.



WRONG

B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	70-01	HYDRAULIC FILTER	20-01
AIR CLEANER SERVICE	10-01	HYDRAULIC FILTER HOUSING	20-01
ALTERNATOR	60-01	HYDRAULIC FLUID RESERVOIR	20-01
ALTERNATOR BELT	10-01	HYDRAULIC SYSTEM INFORMATION	20-01
APPROVED LIFT ARM SUPPORT DEVICE	10-01	HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS	SPEC-01
ARM CYLINDER	20-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-01
ARM	50-01	HYDROSTATIC DRIVE MOTOR	30-01
AXLE AND DIFFERENTIAL (FRONT)	40-01	HYDROSTATIC PUMP	30-01
AXLE AND DIFFERENTIAL (REAR)	40-01	HYDROSTATIC SYSTEM INFORMATION	30-01
AXLES (FRONT AND REAR)	10-01	HYDROSTATIC PUMP TESTING	30-01
AXLE TOE-IN	10-01		
		INSTRUMENT PANEL	60-01
BACKHOE CONTROL VALVE	20-01		
BATTERY	60-01	LIFT ARMS	50-01
BOB-TACH	50-01	LIFT CYLINDER	20-01
BOB-TACH HAND LEVER	10-01	LIFTING AND BLOCKING THE LOADER BACKHOE	10-01
BOOM	50-01	LOADER SPECIFICATIONS	SPEC-01
BOOM CYLINDER	20-01	LOADER BACKHOE TORQUE	SPEC-01
BOOM LOCK PIN	10-01	LOADER CONTROL VALVE	20-01
BRAKE PEDAL ASSEMBLY	40-01	LUBRICATING THE LOADER BACKHOE	10-01
BUCKET	50-01		
BUCKET CYLINDER	20-01	MAIN RELIEF VALVE	20-01
BUCKET POSITIONING LINK	50-01	MASTER CYLINDER	20-01
		MUFFLER	70-01
CAB LIGHTS	60-01		
CENTER FLOOR PANEL	50-01	OIL COOLER	30-01
CONVERSIONS	SPEC-01	OPERATOR CANOPY	50-01
		OPERATOR SEAT	50-01
DRIVE COUPLER	70-01		
DRIVESHAFT	40-01	PARKING BRAKE	40-01
DROP BOX	40-01	PARKING BRAKE HOUSING	40-01
		PORT RELIEF VALVE (BACKHOE CONTROL VALVE)	20-01
ELECTRICAL SYSTEM INFORMATION	60-01	PORT RELIEF VALVE (LOADER CONTROL VALVE)	20-01
ENCLOSED CAB	50-01		
ENGINE	70-01	OIL COOLER/RADIATOR	70-01
ENGINE COMPONENTS AND TESTING	70-01	REAR AXLE	40-01
ENGINE COOLING SYSTEM	10-01	RECONDITIONING THE ENGINE	70-01
ENGINE COVER	10-01, 50-01		
ENGINE LUBRICATION SYSTEM	10-01	SERVICE BRAKE	40-01
ENGINE SIDE COVERS	50-01	SERVICE SCHEDULE	10-01
ENGINE SPECIFICATIONS	SPEC-01	STABILIZER	50-01
ENGINE SPEED CONTROL	70-01	STABILIZER CYLINDER	20-01
		STEERING ANGLE ADJUSTMENT (FRONT AXLE)	40-01
FENDER	50-01	STEERING ANGLE ADJUSTMENT (REAR AXLE)	40-01
FLOOR PANELS	50-01	STEERING CYLINDER (FRONT & REAR)	20-01
FLYWHEEL	70-01	STEERING PUMP	20-01
FLYWHEEL HOUSING	70-01	STEERING VALVE	20-01
FRONT AXLE	40-01	STARTER	60-01
FRONT LIGHTS	60-01	SWING CYLINDER	20-01
FUEL LEVEL SENDER	60-01		
FUEL SYSTEM	10-01		
FUEL TANK	50-01		
GEAR PUMP	20-01		
GRILL	50-01		
GRILL FRAME	50-01		

It's a preview. You can download the full file by clicking the link below.

<https://shop servicemanual.com/>

Service Manuals from 2\$