



# Bobcat®

## Service Manual



### CT2535

(CT2535 HST) S/N B4VP11001 & Above  
(CT2535 MAN) S/N B4VZ11001 & Above

### CT2540

(CT2540 HST) S/N B4VR11001 & Above  
(CT2540 MAN) S/N B4W11001 & Above





# FORWARD

This manual is for the Bobcat® compact tractor mechanic. It provides necessary servicing and adjustment procedures for the Bobcat compact tractor and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the compact tractor has had service or repair:


Check that the ROPS is in good condition and is not modified.



Enclosure door latches must open and close freely.



Check that ROPS mounting hardware is tightened and is Bobcat approved.

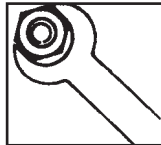

Attachment locking pins must function correctly and be in good condition. Bob-Tach wedges and linkages (if equipped) must function correctly and be in good condition.



The seat belt must be correctly installed, functional and in good condition.




Safety treads must be in good condition.



Machine signs (decals) must be legible and in the correct location.



Check for correct function of indicator lamps.

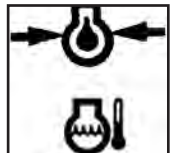

Travel control pedal(s) and loader joystick control lever must return to neutral.



Check for correct function of the work lights.



Check hydraulic fluid level, engine oil level and fuel supply.



The parking brake must function correctly.



Inspect for fuel, oil or hydraulic fluid leaks.



# FORWARD

Lubricate the compact tractor.



Check Safety Interlock System (Neutral Start and Operating) for correct function before the machine is returned to the customer.




Check the condition of the battery and cables.



Check function or condition of all equipped options and accessories (examples: backup alarm, front-end loader, etc.).




Inspect the air cleaner for damage or leaks. Check the condition of the element.

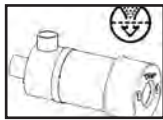


Recommend to the owner that all necessary corrections be made before the machine is returned to service.



Check the electrical charging system.

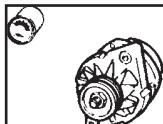

Check tires for wear and pressure. Use only approved tires.

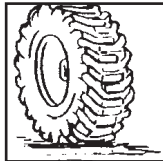


Inspect for loose or broken parts or connections.



Check for any field modification not completed.



Operate the machine and check all functions.

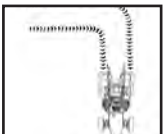

## California Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.

# TABLE OF CONTENTS

---

<b>CHAPTER 1</b>	<b>SAFETY FIRST</b>
<b>CHAPTER 2</b>	<b>GENERAL</b>
<b>CHAPTER 3</b>	<b>ENGINE</b>
<b>CHAPTER 4</b>	<b>CLUTCH</b>
<b>CHAPTER 5</b>	<b>TRANSMISSION</b>
<b>CHAPTER 6</b>	<b>HST</b>
<b>CHAPTER 7</b>	<b>REAR AXLE</b>
<b>CHAPTER 8</b>	<b>BRAKE</b>
<b>CHAPTER 9</b>	<b>FRONT AXLE</b>
<b>CHAPTER 10</b>	<b>STEERING SYSTEM</b>
<b>CHAPTER 11</b>	<b>HYDRAULIC SYSTEM</b>
<b>CHAPTER 12</b>	<b>ELECTRIC &amp; diagnosis</b>
<b>CHAPTER 13</b>	<b>CABIN</b>
<b>CHAPTER 14</b>	<b>AIR-CON &amp; HEATER</b>
<b>CHAPTER 15</b>	<b>INDEX</b>

---

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$